


# Whirlpool WGT3300SQ2 02 - DRYER FRONT PANEL AND DOOR PARTS

## DRYER FRONT PANEL AND DOOR PARTS

For Model: WGT3300SQ2  
(Designer White)

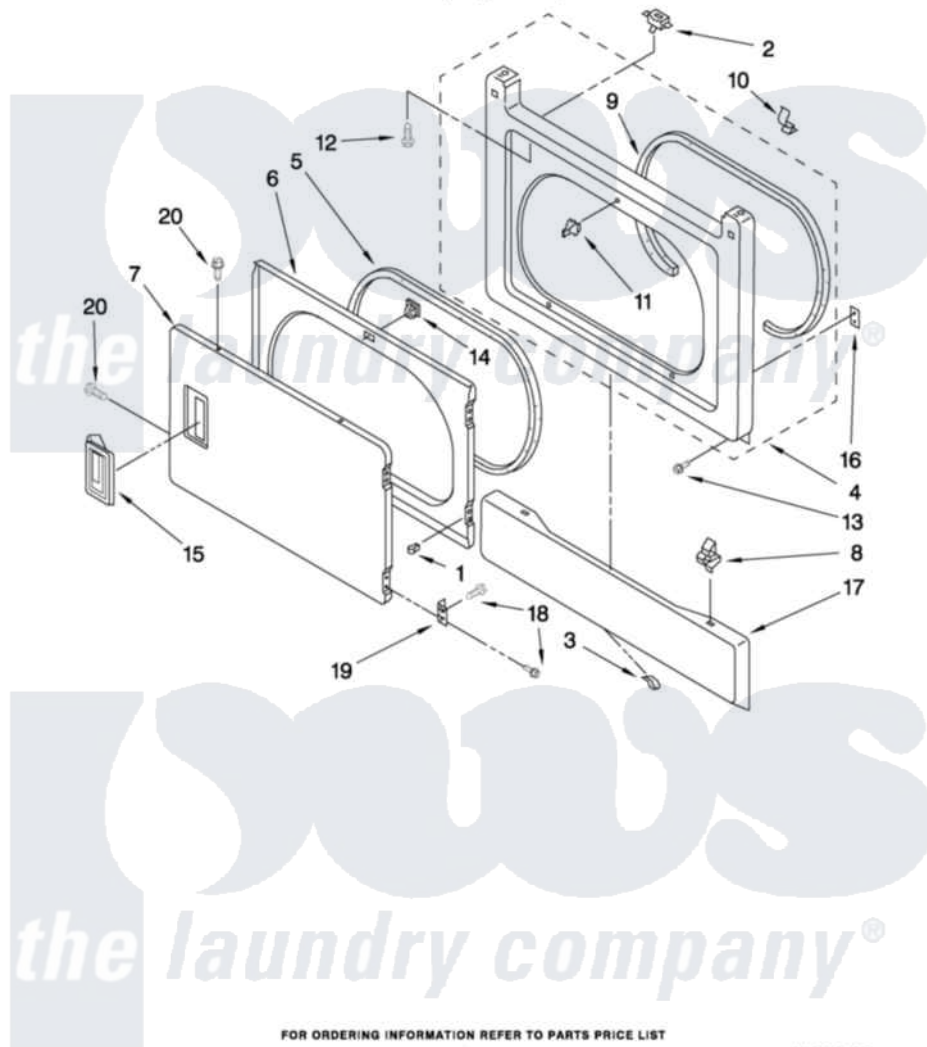

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

2

W10259010

Whirlpool [Residential Whirlpool WGT3300SQ2 Washer/Dryer Parts](#) Parts Diagram 02 - DRYER FRONT PANEL AND DOOR PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3389249</a>			Nut, Inner Door
2	3391901	<a href="#">3391902</a>		Switch, Door
3	<a href="#">98234</a>			Clip, U-Bend
4	3392547	<a href="#">279718</a>		Panel
5	<a href="#">3390735</a>			Seal, Door
6	3392563	<a href="#">280083</a>		Door-Rear
7	<a href="#">3387872</a>			Door, Front
8	<a href="#">3388229</a>			Retainer, Toe Panel
9	<a href="#">3387242</a>			Seal, Front Panel
10	3392602	<a href="#">W10134186</a>		Clip, Harness
11	696144	<a href="#">279570</a>		Latch
12	697773	<a href="#">3395530</a>		Screw
13	3393008	<a href="#">308685</a>		Side Trim )
14	3392538	<a href="#">279570</a>		Latch
15	<a href="#">W10095180</a>			Handle, Door
16	<a href="#">3390902</a>			Clip, Door Hinge

17	<a href="#">3388958</a>		Panel, Toe
18	342055	<a href="#">488627</a>	Screw
19	<a href="#">3389247</a>		Hinge And Pin Assembly
20	<a href="#">694091</a>		Trim, Side Right Hand

