


Whirlpool WGT3300XQ0 10 - AGITATOR, BASKET AND TUB PARTS

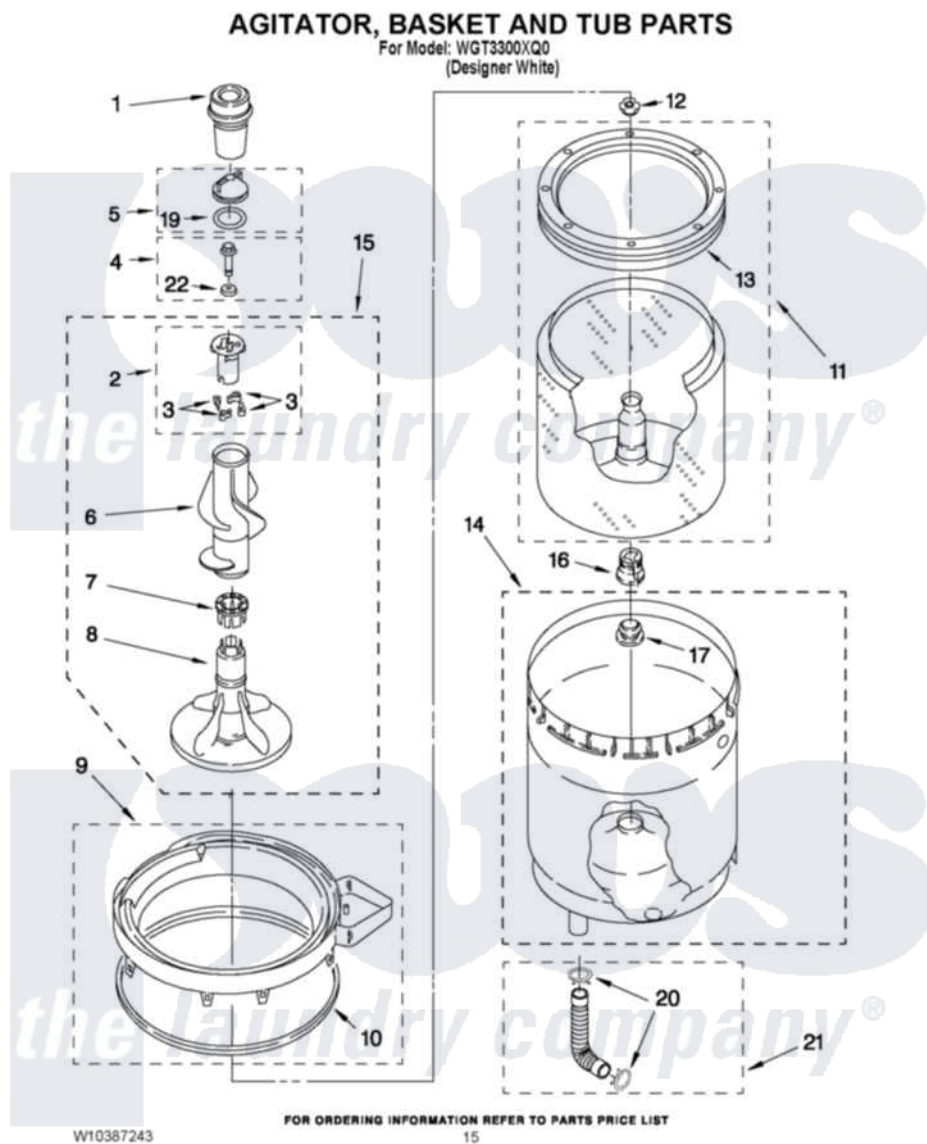

Whirlpool Residential Whirlpool WGT3300XQ0 Washer/Dryer Parts Parts Diagram 10 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3350834			Dispenser,
2	3947410	285751		Dog-Agitator
3	3366877	80040		Dog-Agitator
4	358237			Screw And Washer
5	387094	285550		Cap
6	3349610			Mover, Agitator Clutch
7	3351014	285620		Washer
8	3349578			Agitator
9	8528150	W10445870		Ring-Tub
10	3976308			Gasket, Tub Ring
11	3352234			Basket And Balance Ring Assembly
12	21366			Nut, Spanner
13	387240			Ring, Balance
14	3349292			Tub
15	3349743			Agitator

16	389140		Tub Block, Basket Drive
17	383727		Gasket, Centerpodt
19	W10072840		Fabric Softener
20	3363366	616099	Clamp
21	3951449	285871	Hose
22	3949550		Washer

