


Whirlpool WTW4880AW0 03 - BASKET AND TUB PARTS

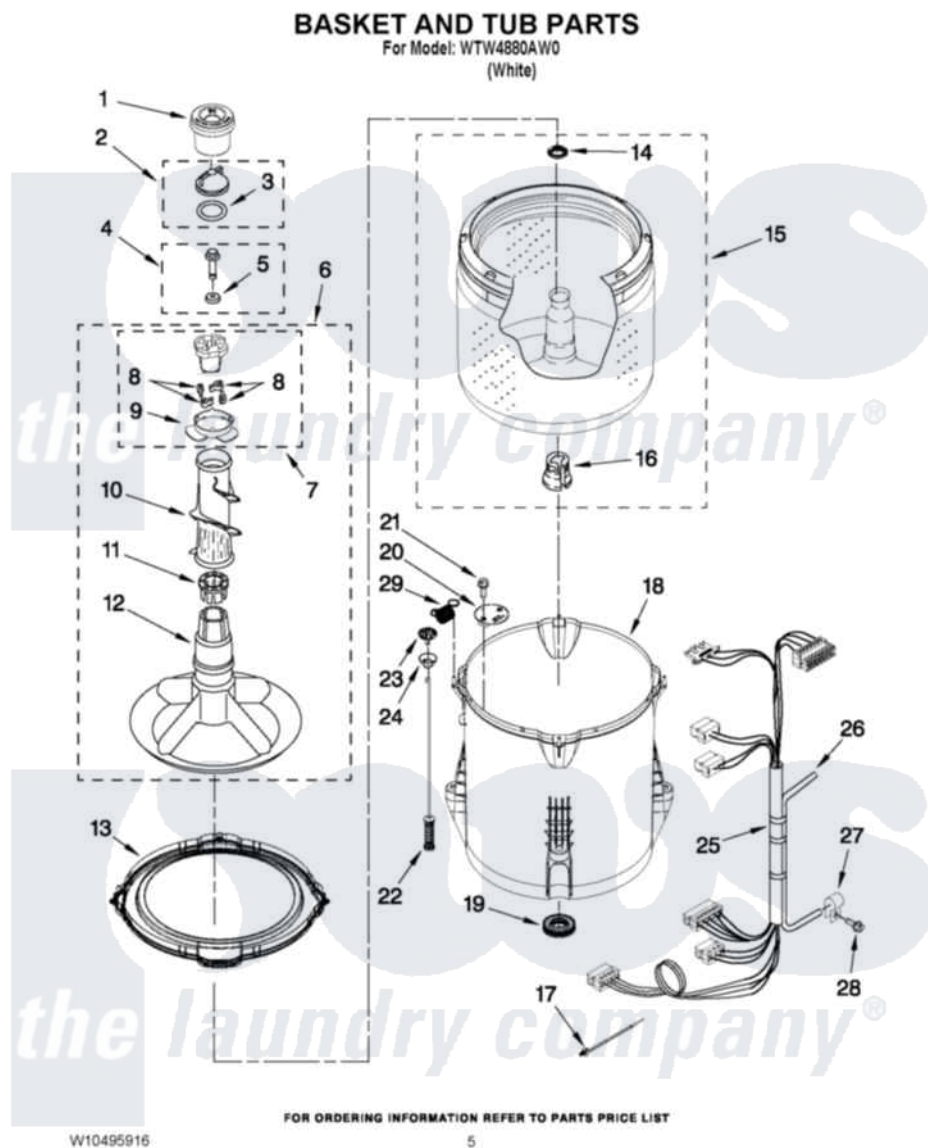

Whirlpool [Residential Whirlpool WTW4880AW0 Washer Parts](#) Parts Diagram 03 - BASKET AND TUB PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	8575076A		Dispenser
2	3354733	W10074580		Cap, Barrier
3	W10072840			Fabric Softener
4	W10003790			Screw And Washer
5	3949550			Washer
6	3951744			Agitator Assembly
7	3951682	285809		Cam-Agitator
8	3366877	80040		Dog-Agitator
9	3952374			Bearing, Driven Cam
10	3363003			Mover, Clothes
11	3951608			Spacer, Thrust
12	3951632			Agitator
13	W10215107			Ring-Tub
14	21366			Nut, Spanner
15	W10358261	W10349185		Basket
16	389140			Tub Block, Basket Drive

17	W10298887		Cable Tie
18	W10238320	W10371566	Tub-Outer
19	W10006371	W10324647	Seal-Tub
20	W10215093		Filter, Drain Pump
21	8533928		Screw, 8-18 X 3/4
22	W10110314	W10404706	Supsension
23	W10405423	W10440729	Suspension
24	W10256551	W10440729	Suspension
25	W10297439		Harness, Lower
26	W10431037	353244	Hose, Pressure Switch
27	W10005430		Clamp, Pressure Hose Retainer
28	8533943	W10109200	Screw, Baffle Mounting
29	W10348658	W10400895	Spring

the laundry company[®]

lows
the laundry company[®]

lows
the laundry company[®]