


# Whirlpool WTW5300SQ3 03 - AGITATOR, BASKET AND TUB PARTS

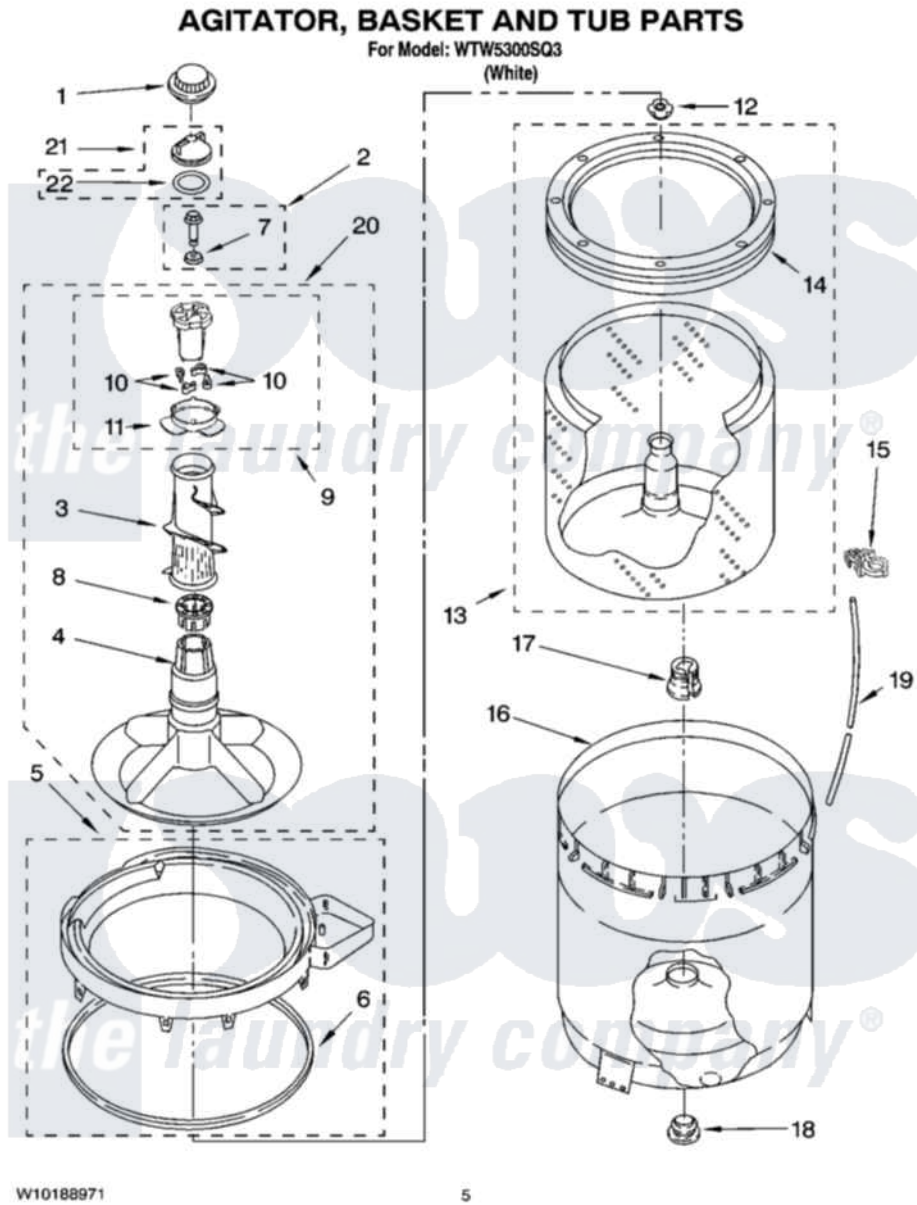

Whirlpool Residential Whirlpool WTW5300SQ3 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3363003</a>			Mover, Clothes
4	<a href="#">3347288</a>			Agitator
5	8528150	<a href="#">W10445870</a>		Ring-Tub
6	<a href="#">3976308</a>			Gasket, Tub Ring
7	<a href="#">3949550</a>			Washer
8	3350389	<a href="#">285587</a>		Washer
9	3363663	<a href="#">285811</a>		Cam-Agitator
10	3366877	<a href="#">80040</a>		Dog-Agitator
11	<a href="#">3363661</a>			Bearing, Driven Cam
12	<a href="#">21366</a>			Nut, Spanner
13	8526017	<a href="#">W10389329</a>		Clothes Container, Assembly
14	<a href="#">387240</a>			Ring, Balance
15	<a href="#">2219077</a>			Clip, Pressure Switch Hose
16	<a href="#">63849</a>			Strain Relief, Power Cord

17	<a href="#">389140</a>		Tub Block, Basket Drive
18	<a href="#">383727</a>		Gasket, Centerpodt
19	3347780	<a href="#">353244</a>	Hose, Pressure Switch
20	<a href="#">3946501</a>		Agitator, Assembly
21	3354733	<a href="#">W10074580</a>	Cap, Barrier
22	<a href="#">W10072840</a>		Fabric Softener

