


Whirlpool WTW5300VW1 03 - AGITATOR, BASKET AND TUB PARTS

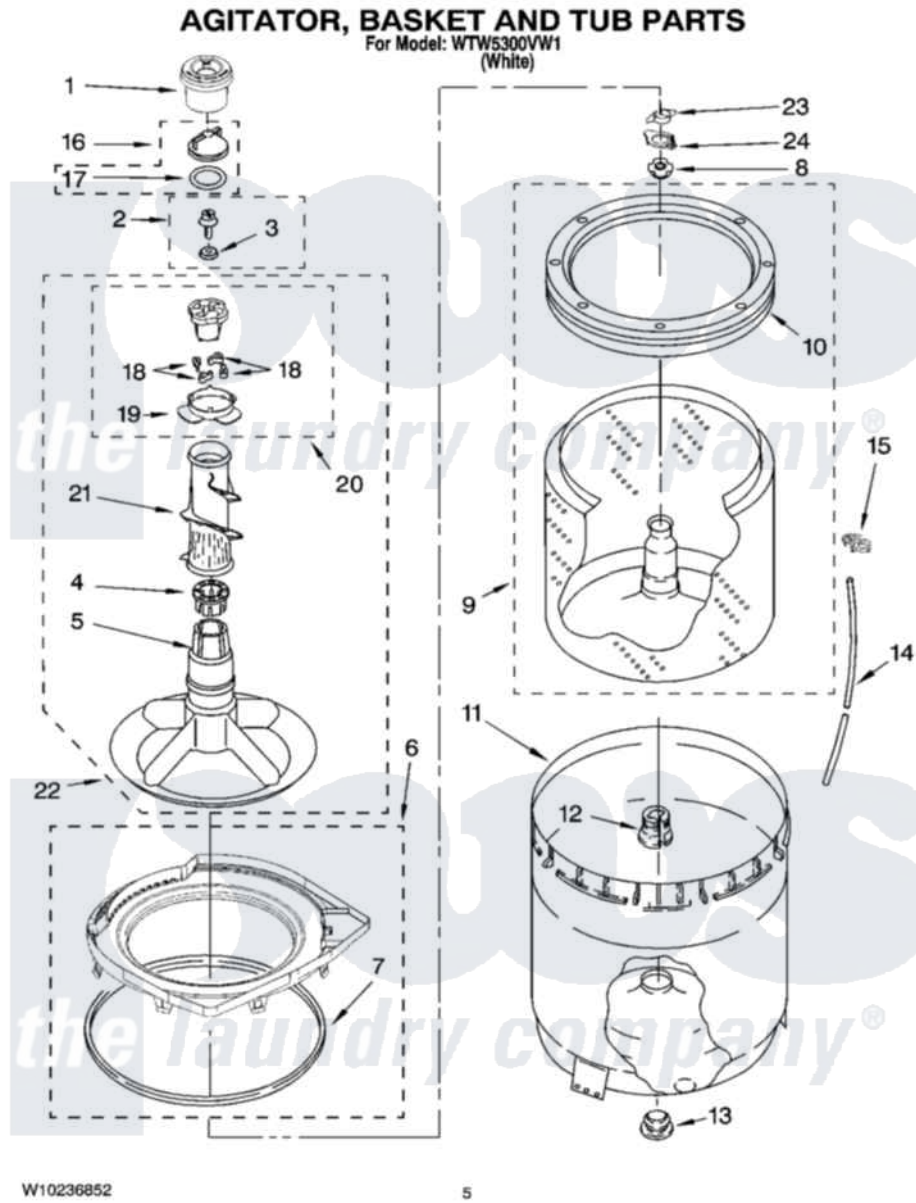

Whirlpool Residential Whirlpool WTW5300VW1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	8575076A		Dispenser
2	358237			Screw And Washer
3	3949550			Washer
4	3951608			Spacer, Thrust
5	3951632			Agitator
6	W10168523			Tub Ring And Gasket
7	3359585	3976308		Gasket, Tub Ring
8	21366			Nut, Spanner
9	8526016	W10389328		Clothes Container, Assembly
10	387240			Ring, Balance
11	63849			Strain Relief, Power Cord
12	389140			Tub Block, Basket Drive
13	383727			Gasket, Centerpod
14	3347780	353244		Hose, Pressure Switch
15	2219077			Clip, Pressure Switch Hose
16	3354733	W10074580		Cap, Barrier

17	W10072840		Fabric Softener
18	3366877	80040	Dog-Agitator
19	3952374		Bearing, Driven Cam
20	3951682	285809	Cam-Agitator
21	3363003		Mover, Clothes
22	3951744		Agitator Assembly
23	3354845		Clip, Agitator
24	8543666		Washer, Agitator

