


Whirlpool WTW5321SQ0 03 - AGITATOR, BASKET AND TUB PARTS

AGITATOR, BASKET AND TUB PARTS

For Model: WTW5321SQ0
(White)

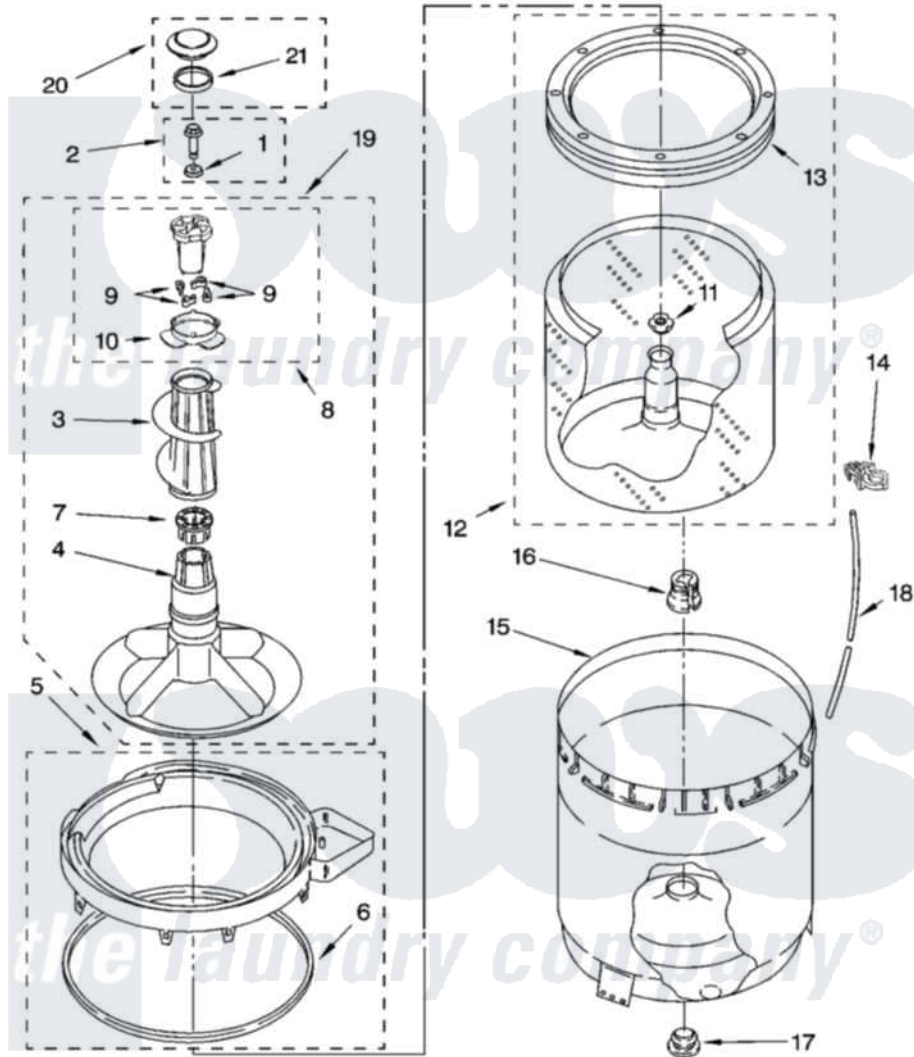

8181363

5

Whirlpool [Residential Whirlpool WTW5321SQ0 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3949550			Washer
2	358237			Screw And Washer
3	389141	3360824		Auger, Agitator
4	389386			Agitator
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
7	3350389	285587		Washer
8	3363662	285748		Cam-Agitator
9	3366877	80040		Dog-Agitator
10	3363661			Bearing, Driven Cam
11	21366			Nut, Spanner
12	8526017	W10389329		Clothes Container, Assembly
13	8519788	387240		Ring, Balance
14	2219077			Clip, Pressure Switch Hose
15	63849			Strain Relief, Power Cord
16	389140			Tub Block, Basket Drive

17	383727	Gasket, Centerpodt	
18	3347780	353244	Hose, Pressure Switch
19	3347674	285727	Agitator
20	63973	3362061	Cap
21	358912	Seal, Agitator Cap	

