


Whirlpool WTW5700XW2 01 - TOP AND CABINET PARTS

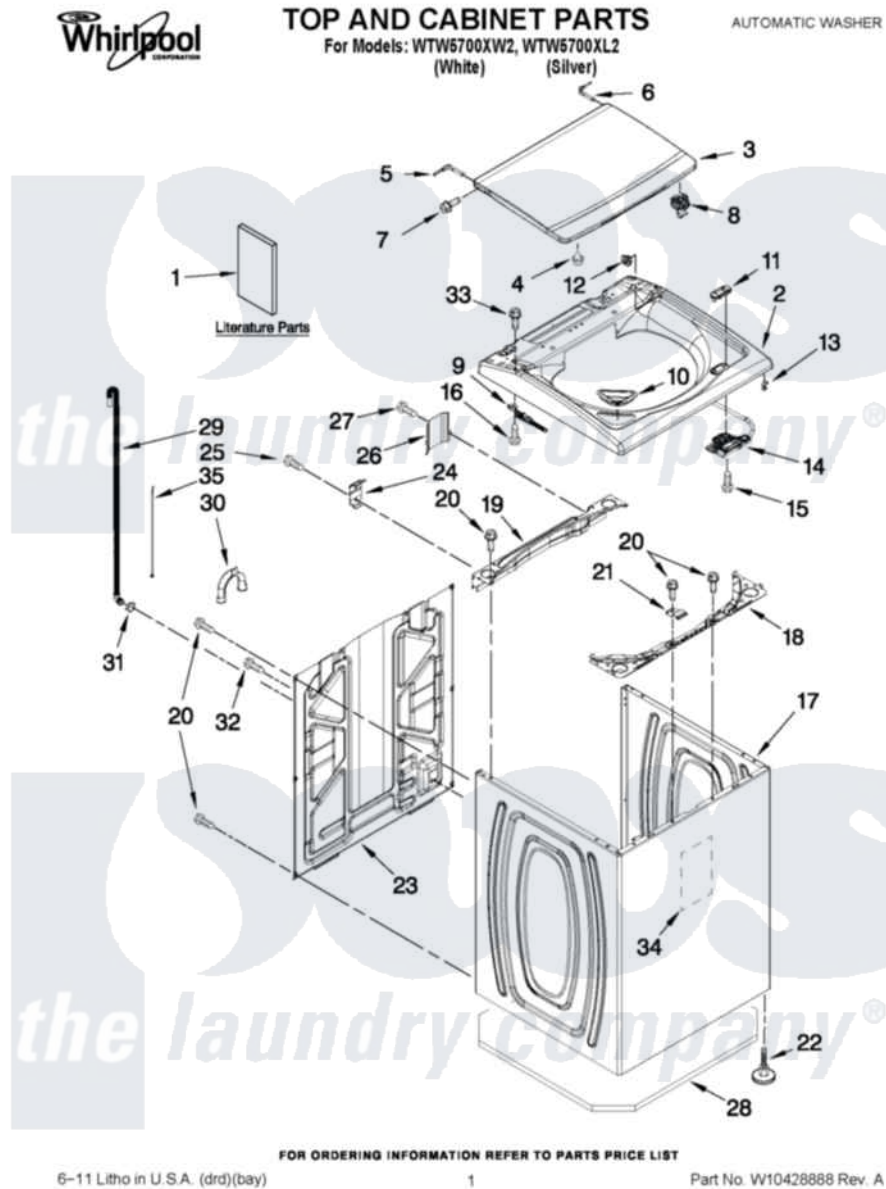

Whirlpool [Residential Whirlpool WTW5700XW2 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10240509			Installation Instructions
"	W10240510		Not Available	INSTALLATION INSTRUCTIONS (SPANISH)
"	W10280475		Not Available	USE & CARE GUIDE
"	W10280504		Not Available	INSTRUCTIONS, SOUND SHIELD INSTALLATION
"	W10240504		Not Available	TECH SHEET IMPROVED WASH
"	W10280494		Not Available	QUICK START GUIDE
"	W10062956		Not Available	ENERGY GUIDE
2	W10246376			Top
"	W10256438			Top
3	W10296163			Lid, Glass Assembly
"	W10296165			Lid, Glass Assembly
4	9724509			Bumper, Lid
5	8563965			Hinge Wire
6	8572974			Hinge Wire

7	W10339706	W10078270	Screw, Lid Hinge Mounting
8	W10238327		Strike, Lid Lock
"	W10238329		Strike, Lid Lock
9	W10270398		Hinge, Spring Assembly
"	W10270399		Hinge, Spring Assembly
10	W10240977		Dispenser, Bleach
"	W10304138		Dispenser, Bleach
11	W10392041		Bezel, Lid Lock
"	W10392092		Bezel, Lid Lock
12	W10293653		Bearing, Lid Hinge
"	W10293293		Bearing, Lid Hinge
13	90016		Clip, Pressure Switch Hose
14	W10238287	W10404050	Latch
15	8281163		Screw, Dispenser Housing Mounting
16	693995		Screw, Hex Head
17	W10251994	W10338650	Cabinet
"	W10240528	W10338651	Cabinet
18	W10215098		Brace, Cabinet Top Front
19	W10215099		Brace, Cabinet Top Rear
20	1157158	489069	Xxscrew, 10-12 X 1/2
21	W10248088		Lock, Top
22	W10335586	W10397767	Foot Assembly, Leveling
23	W10250884		Panel Rear
24	W10215102		Hinge, Top
25	W10142728	3370225	Screw
26	W10215139		Cover, Harness
27	3400076		Screw, Bracket Mounting
28	W10361353	W10319260	Sound Absr
29	W10221546		Hose, Outer Drain Assembly
30	W10280024		U-Bend, Drain Hose
31	356138		Clamp, Hose
32	9740848		Screw, Mixing Valve Mounting
33	311932	313808	Screw
34	W10414221		Cabinet, Damper Sound
35	W10339879		Tie, Cable

