


# Whirlpool WTW5840SW0 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Models: WTW5840SW0, WTW5840SG0  
(White/Grey) (Biscuit/Gold)

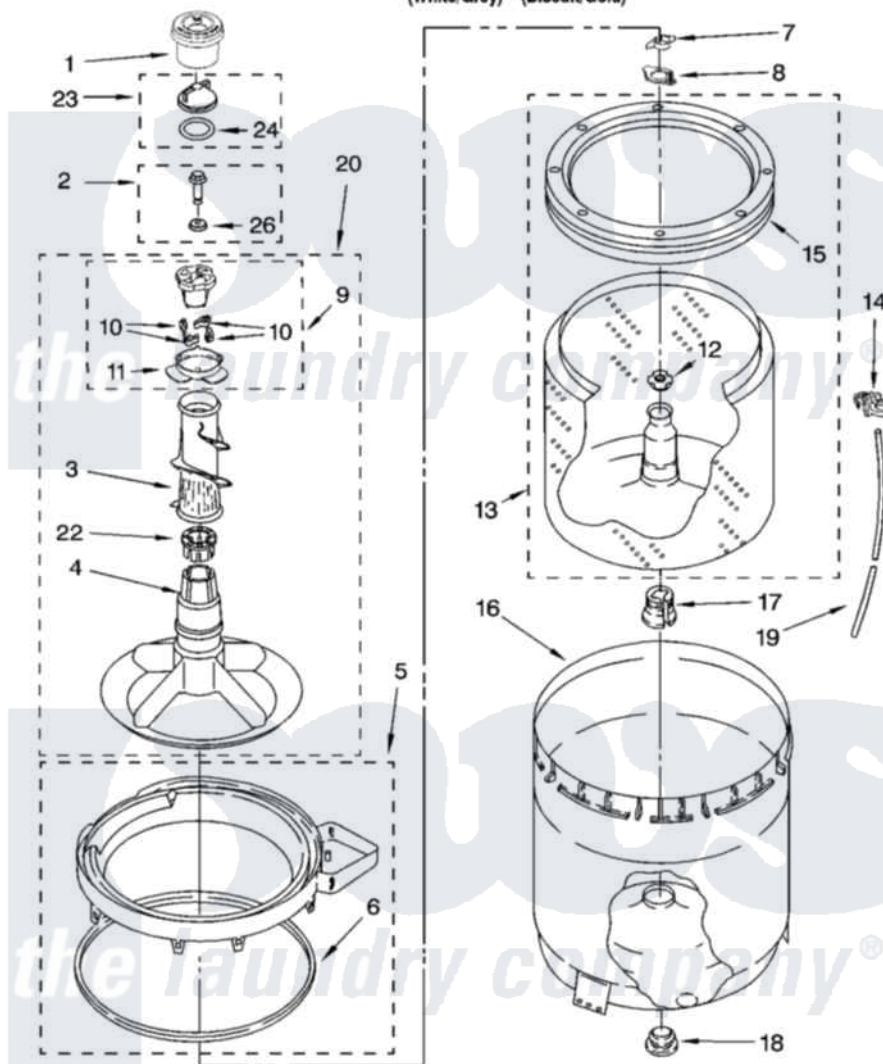

8181234

5

Whirlpool Residential Whirlpool WTW5840SW0 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	<a href="#">8575076A</a>		Dispenser
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3363003</a>			Mover, Clothes
4	<a href="#">3951632</a>			Agitator
5	8528150	<a href="#">W10445870</a>		Ring-Tub
6	<a href="#">3976308</a>			Gasket, Tub Ring
7	<a href="#">3354845</a>			Clip, Agitator
8	<a href="#">8543666</a>			Washer, Agitator
9	3951682	<a href="#">285809</a>		Cam-Agitator
10	3366877	<a href="#">80040</a>		Dog-Agitator
11	<a href="#">3952374</a>			Bearing, Driven Cam
12	<a href="#">21366</a>			Nut, Spanner
13	8526016	<a href="#">W10389328</a>		Clothes Container, Assembly
14	<a href="#">2219077</a>			Clip, Pressure Switch Hose
15	8519788	<a href="#">387240</a>		Ring, Balance
16	<a href="#">63849</a>			Strain Relief, Power Cord

17	<a href="#">389140</a>		Tub Block, Basket Drive
18	<a href="#">383727</a>		Gasket, Centerpodt
19	3347780	<a href="#">353244</a>	Hose, Pressure Switch
20	<a href="#">3951744</a>		Agitator Assembly
22	<a href="#">3951608</a>		Spacer, Thrust
23	3354733	<a href="#">W10074580</a>	Cap, Barrier
24	3348855	<a href="#">W10072840</a>	Fabric Softener
26	<a href="#">3949550</a>		Washer

