


Whirlpool WTW6200SW3 02 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Model: WTW6200SW3
(White)

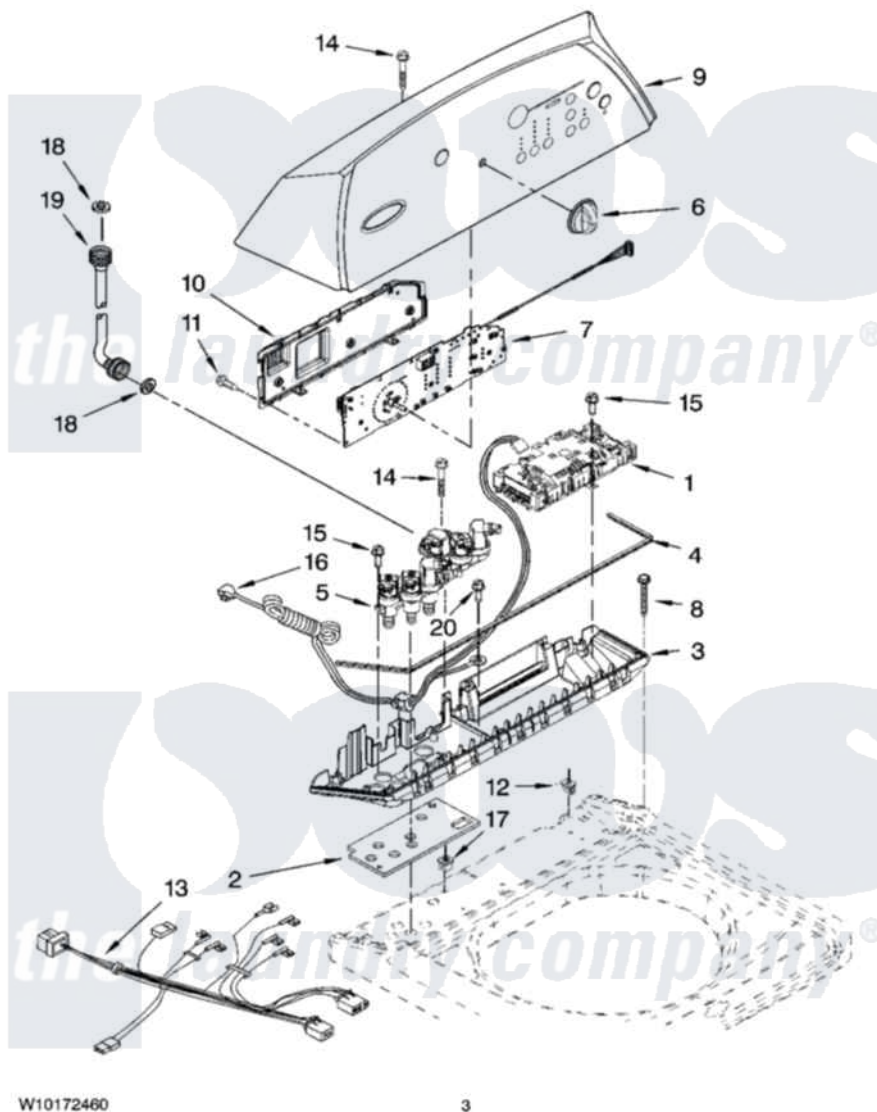

W10172460

3

Whirlpool [Residential Whirlpool WTW6200SW3 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10155109	W10189966		Control-Elec
2	W10130502			Gasket, Valve Tray
3	8565304			Tray Assembly, Console
4	8565259			Gasket, Console/Tray
5	W10128610			Valve, Log Assembly
6	8574957			Knob, Assembly
7	8564288			User Interface
8	W10004990			Screw, 6-20 X 1.2
9	W10118483			Console
10	8564265			Cover, Rear- User Interface
11	W10003770			Screw, 6-19 X 1/2
12	W10022060			Nut, Push-In
13	W10155905			Harness, Upper
14	8565324			Screw, 10-16 X 1.75
15	8281136			Screw, 10-16 X 3/4
16	3407203			Cord Assembly, Power

17	98460		Nut, Push-In
18	3976300	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
19	8571377	89503	Hose-Inlet
"	8571378	89503	Hose-Inlet
20	3351614		Screw, Gearcase Cover Mounting

