


Whirlpool WTW6300SW0 02 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: WTW6300SW0, WTW6300SG0, WTW6300SB0
(White) (Biscuit) (Black)

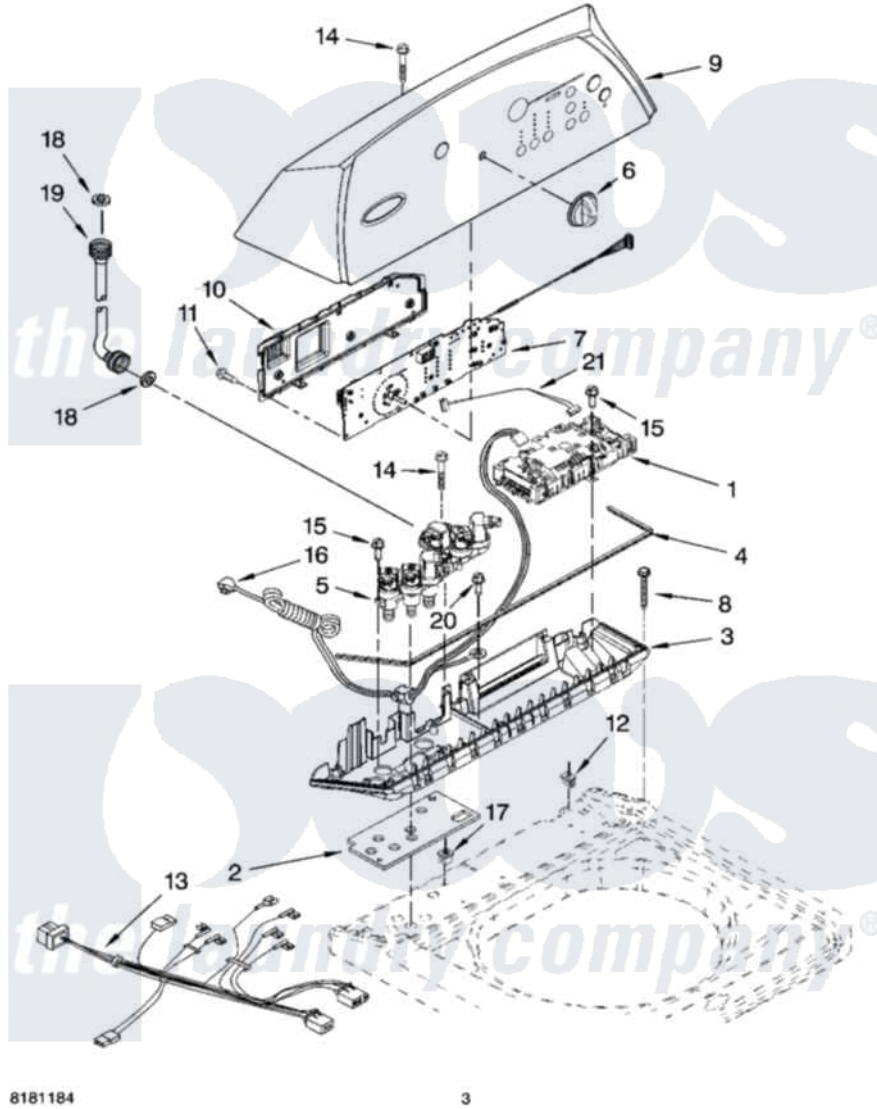

8181184

3

Whirlpool [Residential Whirlpool WTW6300SW0 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10104830	W10189966		Control-Elec
2	8565260	W10130502		Gasket, Valve Tray
3	8565304			Tray Assembly, Console
"	8565306			Tray Assembly, Console
"	8565305			Tray Assembly, Console
4	8565259			Gasket, Console/Tray
5	W10059310			Valve, Log Assembly
6	8574885	8574957		Knob, Assembly
"	8580119	8574958		Knob, Assembly
"	8580118	8574959		Knob, Assembly
7	8564288			User Interface
8	W10004990			Screw, 6-20 X 1.2
9	W10070020			Console
"	W10070030		Not Available	Console (Biscuit)
"	W10070040			Console
10	8564265			Cover, Rear- User Interface

11	W10003770		Screw, 6-19 X 1/2
12	W10022060		Nut, Push-In
13	W10045090		Harness, Upper
14	8565324		Screw, 10-16 X 1.75
15	8281136		Screw, 10-16 X 3/4
16	3407203		Cord Assembly, Power
17	98460		Nut, Push-In
18	3976300	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
19	8571377	89503	Hose-Inlet
"	8571378	89503	Hose-Inlet
20	488649		Screw, Power Cord Ground
21	3407187		Harness, Thermistor

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]