


Whirlpool WTW6600SB1 02 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: WTW6600SW1, WTW6600SG1, WTW6600SB1
(White) (Biscuit) (Black)

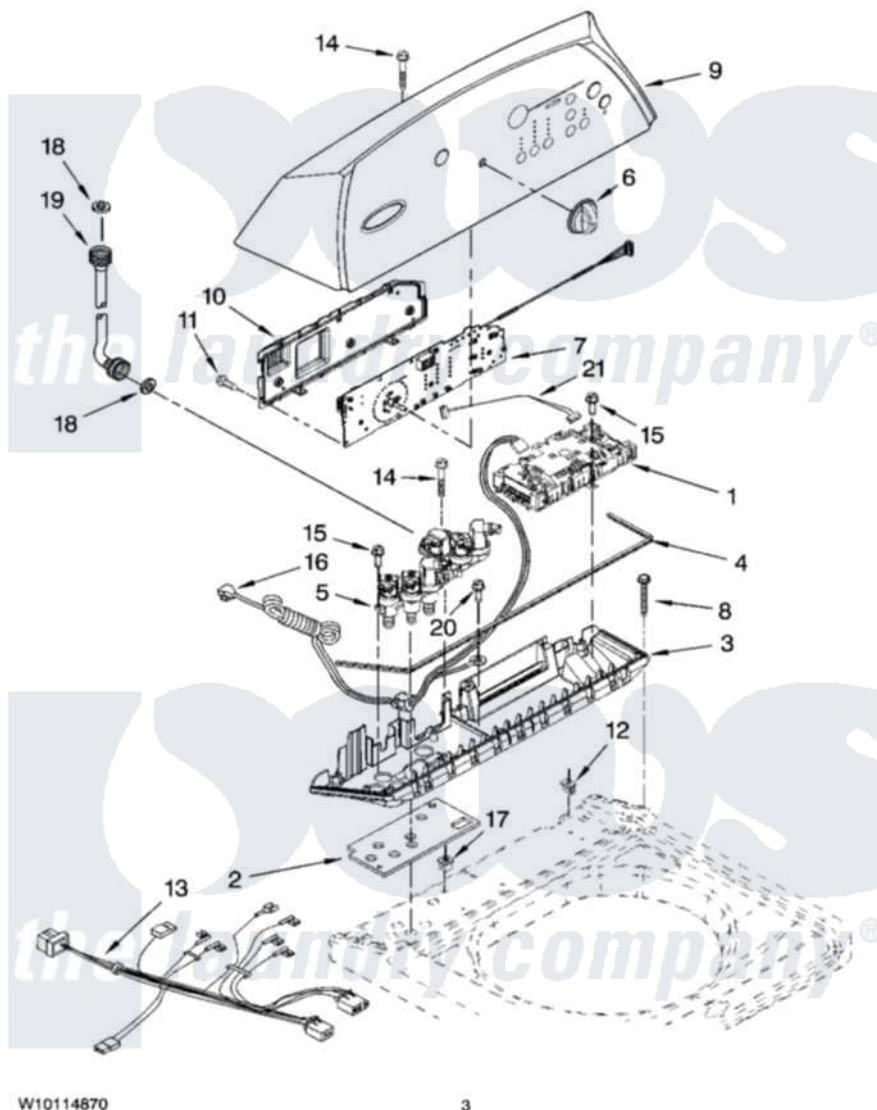

Whirlpool [Residential Whirlpool WTW6600SB1 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10112112	W10189966		Control-Elec
2	8565260	W10130502		Gasket, Valve Tray
3	8565304			Tray Assembly, Console
"	8565306			Tray Assembly, Console
"	8565305			Tray Assembly, Console
4	8565259			Gasket, Console/Tray
5	W10059320	W10372095		Valve
6	8574957			Knob, Assembly
"	8574958			Knob, Assembly
"	8574959			Knob, Assembly
7	8564290			User Interface
8	W10004990			Screw, 6-20 X 1.2
9	W10070060			Console
"	W10070070			Console
"	W10070080			Console
10	8564265			Cover, Rear- User Interface

11	W10003770		Screw, 6-19 X 1/2
12	W10022060		Nut, Push-In
13	W10045100	W10372095	Valve
14	8565324		Screw, 10-16 X 1.75
15	8281136		Screw, 10-16 X 3/4
16	3407203		Cord Assembly, Power
17	98460		Nut, Push-In
18	3976300	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
19	8571377	89503	Hose-Inlet
"	8571378	89503	Hose-Inlet
20	488649		Screw, Power Cord Ground
21	3407187		Harness, Thermistor

the laundry company[®]

lows
the laundry company[®]

lows
the laundry company[®]