


# Whirlpool WTW6600SG3 02 - CONTROL PANEL PARTS

## CONTROL PANEL PARTS

For Models: WTW6600SW3 (White), WTW6600SG3 (Biscuit), WTW6600SB3 (Black)

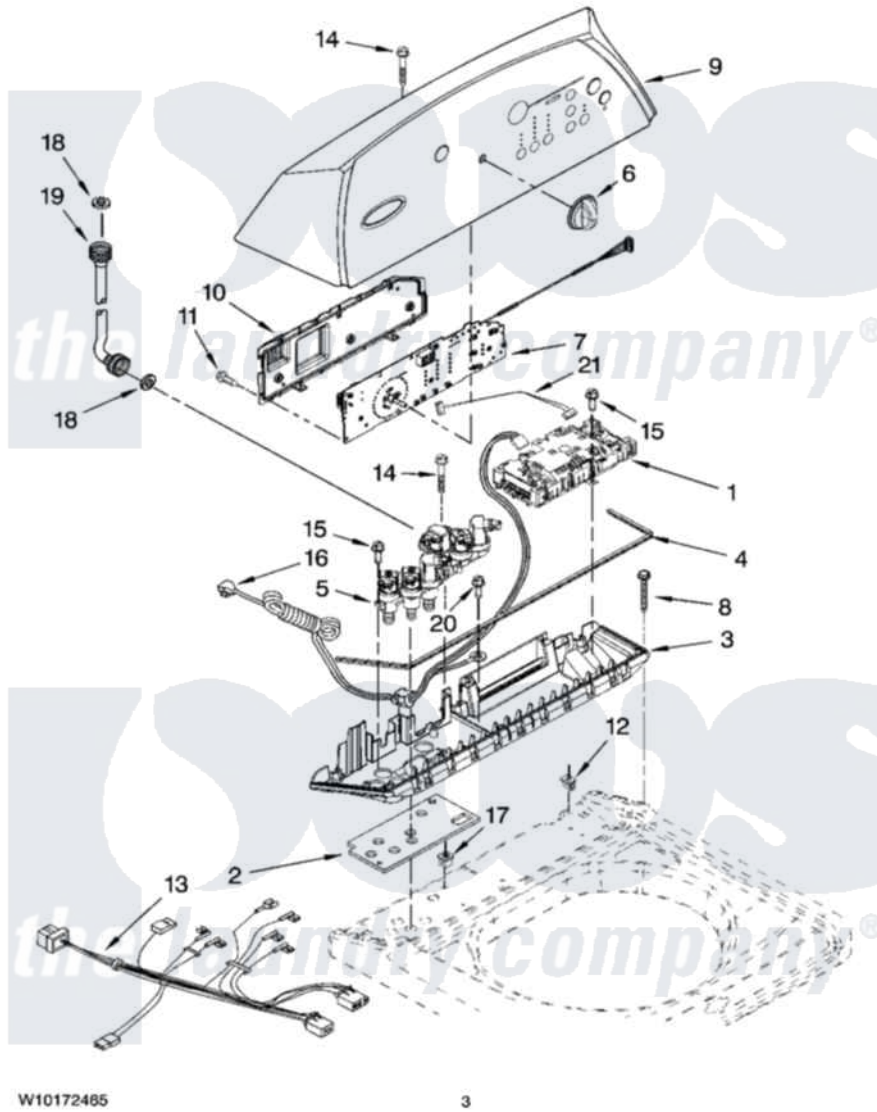

Whirlpool Residential Whirlpool WTW6600SG3 Washer Parts Parts Diagram 02 - CONTROL PANEL PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10155109	<a href="#">W10189966</a>		Control-Elec
2	<a href="#">W10130502</a>			Gasket, Valve Tray
3	<a href="#">8565304</a>			Tray Assembly, Console
"	<a href="#">8565306</a>			Tray Assembly, Console
"	<a href="#">8565305</a>			Tray Assembly, Console
4	<a href="#">8565259</a>			Gasket, Console/Tray
5	W10128457	<a href="#">W10364988</a>		Valve
6	<a href="#">8574957</a>			Knob, Assembly
"	<a href="#">8574958</a>			Knob, Assembly
"	<a href="#">8574959</a>			Knob, Assembly
7	<a href="#">8564290</a>			User Interface
8	<a href="#">W10004990</a>			Screw, 6-20 X 1.2
9	<a href="#">W10070060</a>			Console
"	<a href="#">W10070070</a>			Console
"	<a href="#">W10070080</a>			Console
10	<a href="#">8564265</a>			Cover, Rear- User Interface

11	<a href="#">W10003770</a>		Screw, 6-19 X 1/2
12	<a href="#">W10022060</a>		Nut, Push-In
13	<a href="#">W10128687</a>		Harness, Upper
14	<a href="#">8565324</a>		Screw, 10-16 X 1.75
15	<a href="#">8281136</a>		Screw, 10-16 X 3/4
16	<a href="#">3407203</a>		Cord Assembly, Power
17	<a href="#">98460</a>		Nut, Push-In
18	3976300	<a href="#">16123</a>	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
19	8571377	<a href="#">89503</a>	Hose-Inlet
"	8571378	<a href="#">89503</a>	Hose-Inlet
20	<a href="#">3351614</a>		Screw, Gearcase Cover Mounting
21	<a href="#">3407187</a>		Harness, Thermistor

*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>