


Whirlpool WTW6700TW1 02 - CONTROL PANEL PARTS

CONTROL PANEL PARTS

For Models: WTW6700TW1, WTW6700TU1
(White) (Ultimate Silver)

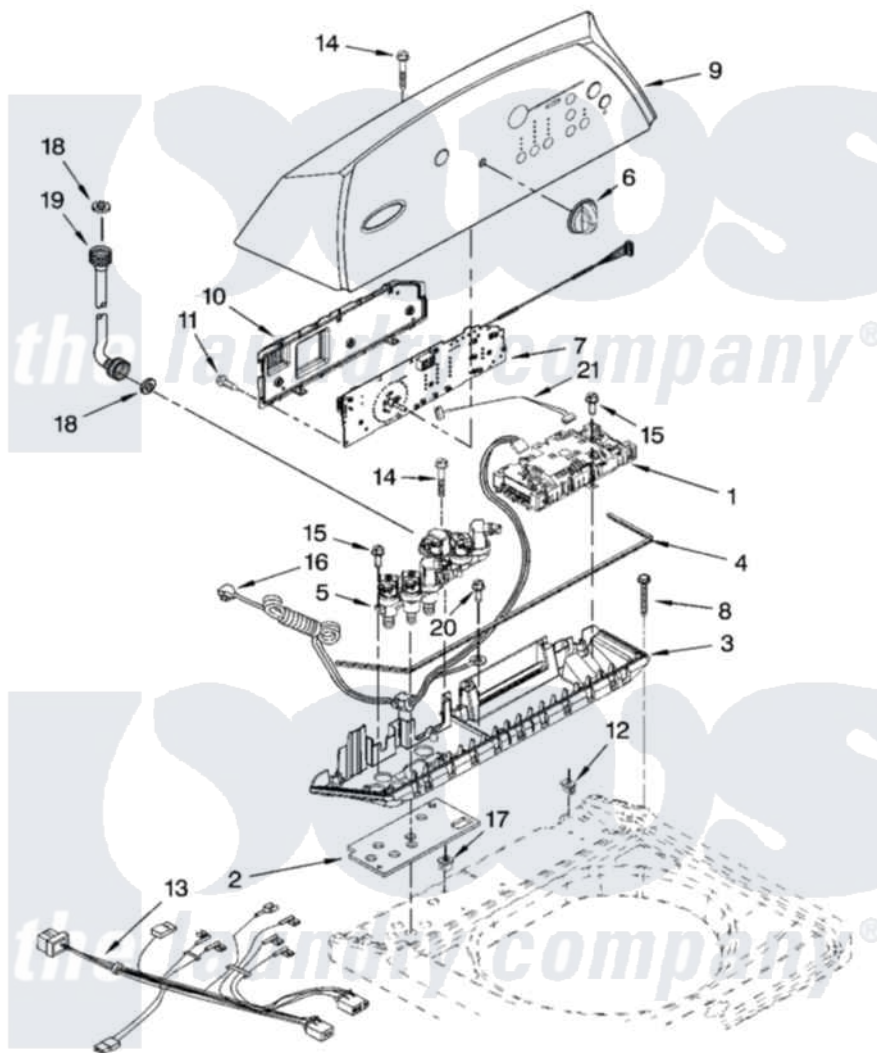

W10172469

3

Whirlpool [Residential Whirlpool WTW6700TW1 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10051176	W10189966		Control-Elec
2	W10130502			Gasket, Valve Tray
3	8565304			Tray Assembly, Console
"	W10158216			Tray Assembly, Console
4	8565259			Gasket, Console/Tray
5	W10128457	W10364988		Valve
6	8574957			Knob, Assembly
"	W10183632			Knob, Control
7	W10051131			User Interface
8	W10004990			Screw, 6-20 X 1.2
9	W10110804			Console
"	W10191904			Console
10	8564265			Cover, Rear- User Interface
11	W10003770			Screw, 6-19 X 1/2
12	W10022060			Nut, Push-In
13	W10128687			Harness, Upper

14	8565324		Screw, 10-16 X 1.75
15	8281136		Screw, 10-16 X 3/4
16	3407203		Cord Assembly, Power
17	98460		Nut, Push-In
18	3976300	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
19	8571377	89503	Hose-Inlet
"	8571378	89503	Hose-Inlet
20	3351614		Screw, Gearcase Cover Mounting
21	3407187		Harness, Thermistor

