


Whirlpool WTW7300XW1 02 - CONTROL PANEL PARTS

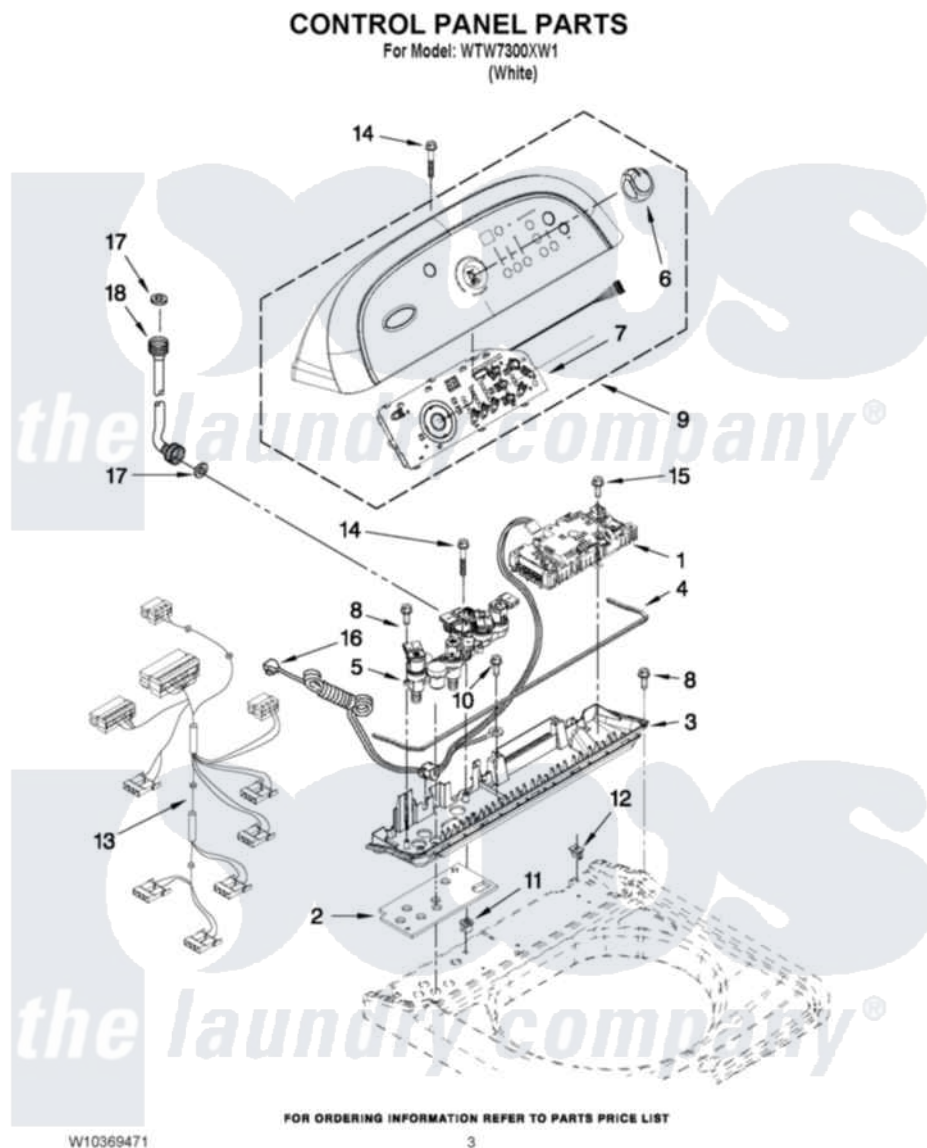

Whirlpool [Residential Whirlpool WTW7300XW1 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10329471	W10384470		Control-Elec
2	W10130502			Gasket, Valve Tray
3	8578550			Tray Assembly, Console
4	8546616			Gasket, Console/Tray
5	W10326913			Valve, Log Assembly W/Harness
6	W10211335			Knob, Assembly
7	W10297396			User Interface
8	W10052600			Screw, 8-18 X 3/4
9	W10298642			Console
10	3351614			Screw, Gearcase Cover Mounting
11	98460			Nut, Push-In
12	W10022060			Nut, Push-In
13	W10328039			Harness, 6-Coil Valve, W/O Heater
14	8565324			Screw, 10-16 X 1.75

15	8281136		Screw, 10-16 X 3/4
16	3407203		Cord Assembly, Power
17	W10242307	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
18	W10194208	89503	Hose-Inlet
"	8571378	89503	Hose-Inlet

