


Whirlpool WTW7340XW0 02 - CONTROL PANEL PARTS

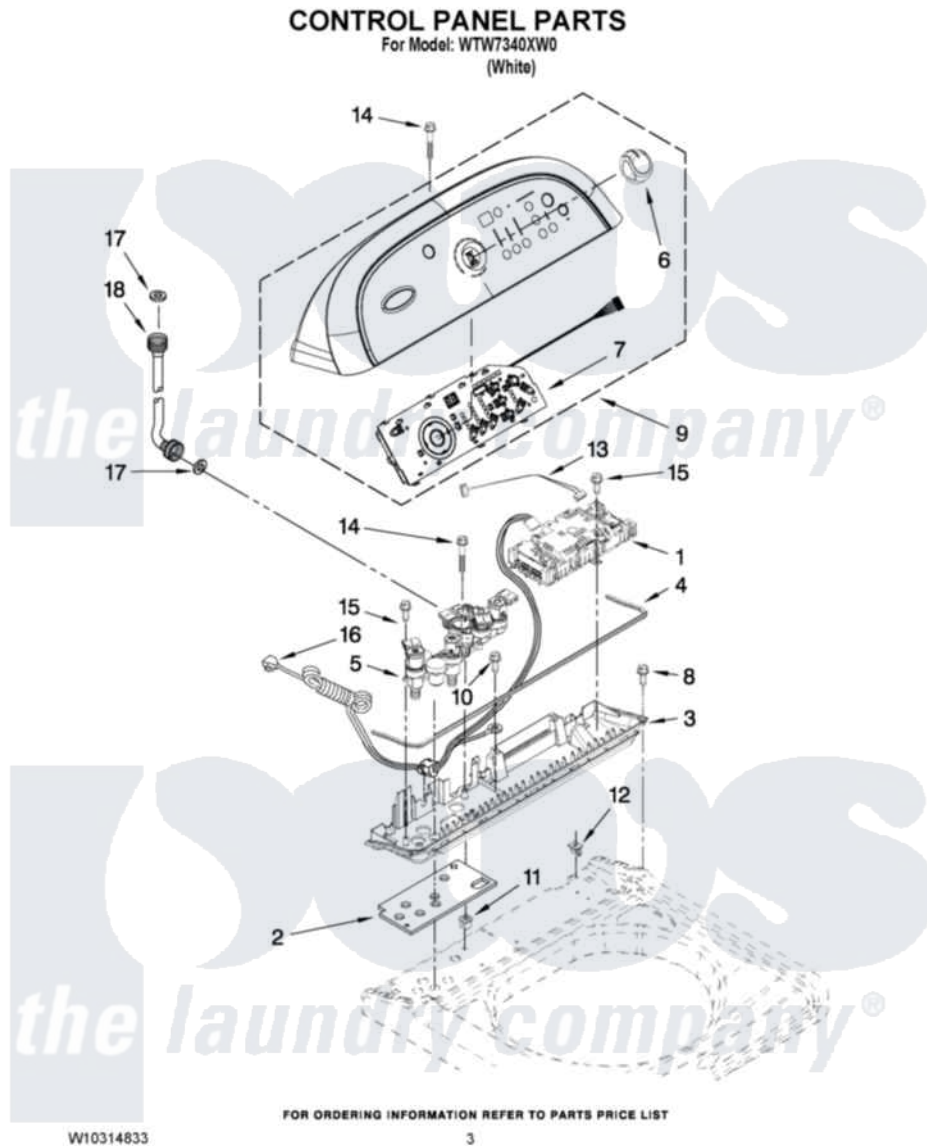

Whirlpool [Residential Whirlpool WTW7340XW0 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10299400			Control Unit Assembly, Machine And Motor
2	W10130502			Gasket, Valve Tray
3	8578550			Tray Assembly, Console
4	8546616			Gasket, Console/Tray
5	W10299737	W10364988		Valve
6	W10211335			Knob, Assembly
7	W10297397			User Interface
8	W10052600			Screw, 8-18 X 3/4
9	W10211352			Console
10	3351614			Screw, Gearcase Cover Mounting
11	98460			Nut, Push-In
12	W10022060			Nut, Push-In
13	3407187			Harness, Thermistor
14	8565324			Screw, 10-16 X 1.75
15	8281136			Screw, 10-16 X 3/4

16	3407203		Cord Assembly, Power
17	W10242307	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
18	W10194208	89503	Hose-Inlet
"	8571378	89503	Hose-Inlet

