


Whirlpool WTW7800XL3 02 - CONTROL PANEL PARTS

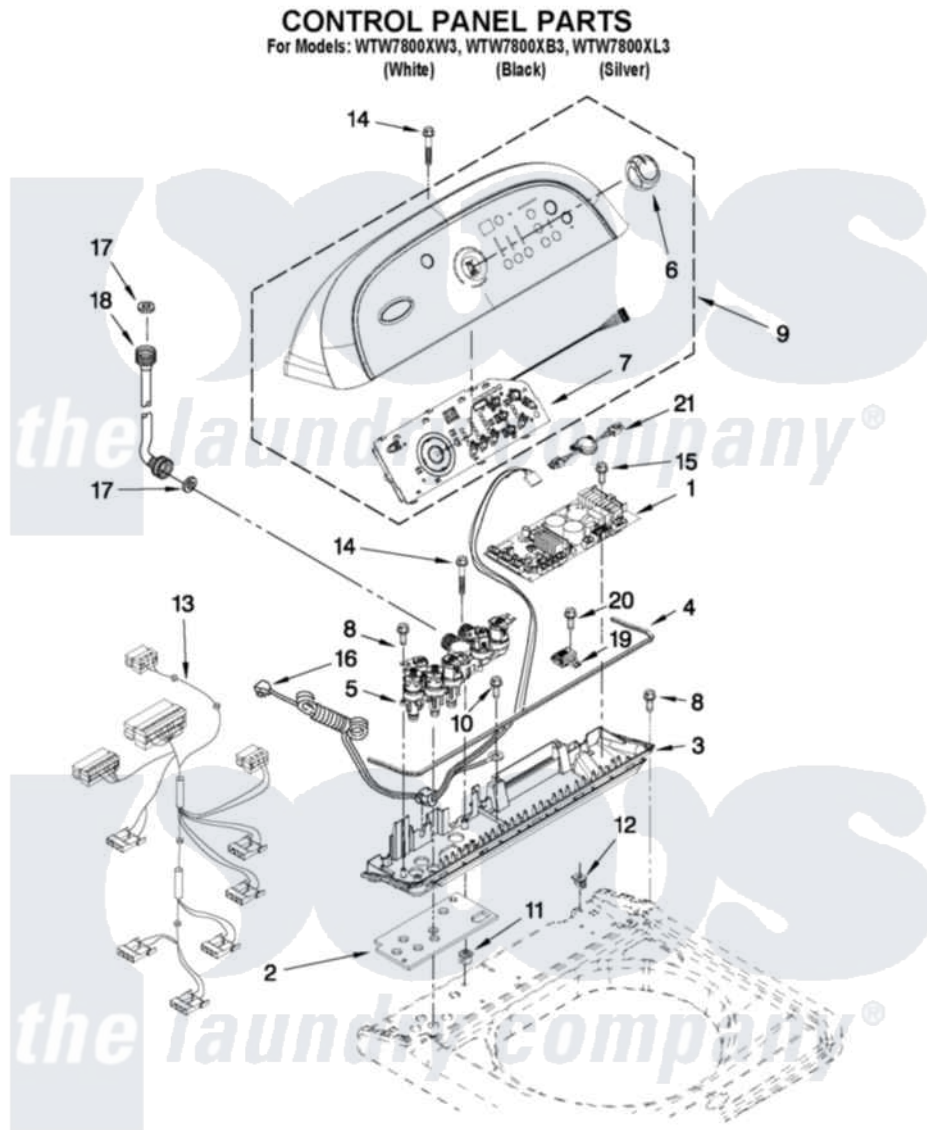

W10428892

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3

[Whirlpool Residential Whirlpool WTW7800XL3 Washer Parts](#) Parts Diagram 02 - CONTROL PANEL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10372179			Control Unit Assembly, Machine And Motor
2	W10130502			Gasket, Valve Tray
3	8578550			Tray Assembly, Console
"	W10309224			Tray Assembly, Console
"	W10309229			Tray Assembly, Console
4	8546616			Gasket, Console/Tray
5	W10326913			Valve, Log Assembly W/Harness
6	W10211335			Knob, Assembly
7	W10297399			User Interface
8	W10052600			Screw, 8-18 X 3/4
9	W10211348			Console
"	W10211349			Console
"	W10211350			Console
10	3351614			Screw, Gearcase Cover Mounting

11	98460		Nut, Push-In
12	W10022060		Nut, Push-In
13	W10328040		Harness, Log Valve
14	8565324		Screw, 10-16 X 1.75
15	8281136		Screw, 10-16 X 3/4
16	3407203		Cord Assembly, Power
17	W10242307	16123	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
18	W10194208	89503	Hose-Inlet
"	8571378	89503	Hose-Inlet
19	W10346406		Power Supply
20	9740849		Screw, 8-18 X 7/16
21	W10307472		Harness, Led Mov

the laundry company[®]

the laundry company[®]

the laundry company[®]