


# Whirlpool YGEW9877JQ1 02 - TOP AND CONSOLE PARTS

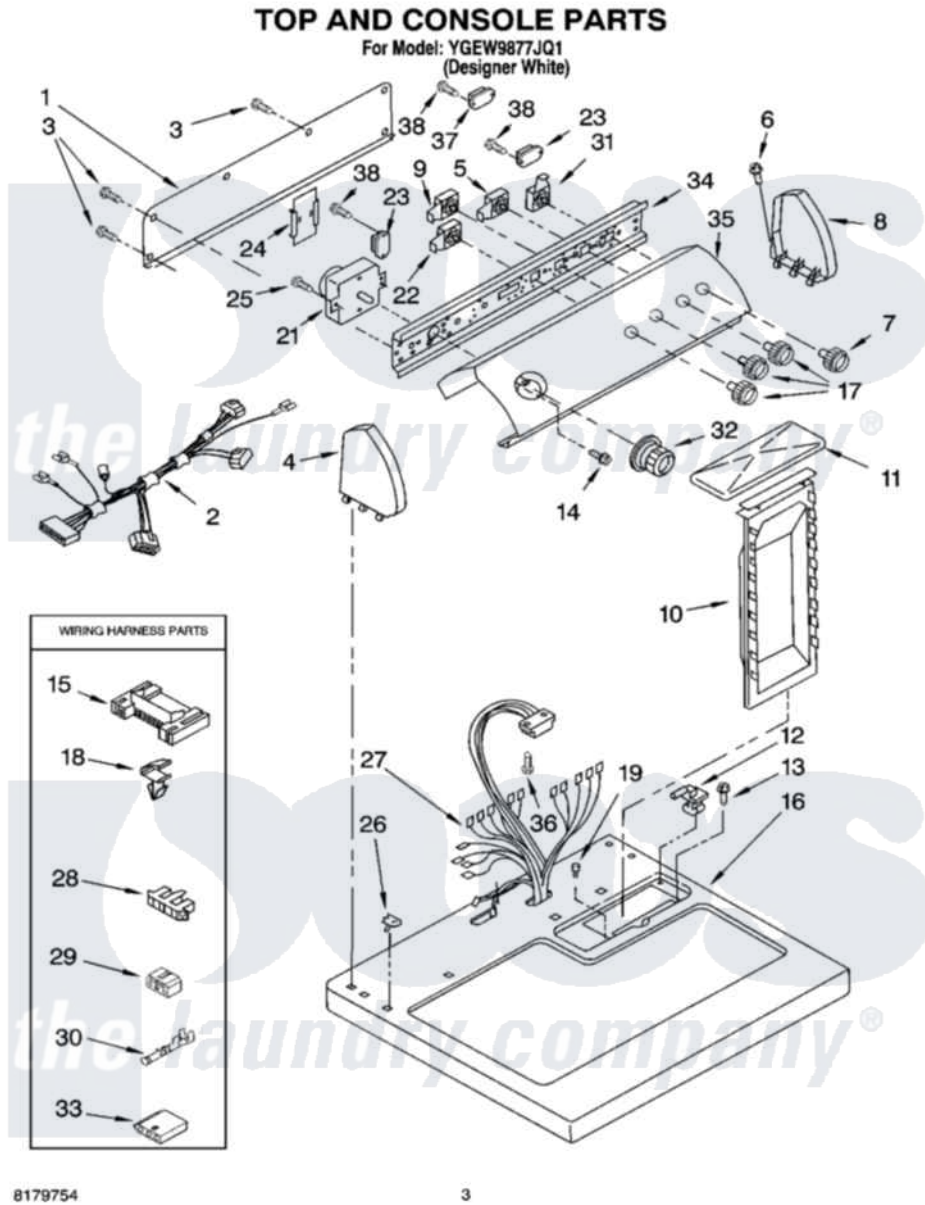

Whirlpool Residential Whirlpool YGEW9877JQ1 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
2	<a href="#">8283135</a>			Harness, Console
3	<a href="#">693995</a>			Screw, Hex Head
4	8271365	<a href="#">279962</a>		Endcap
5	<a href="#">3405151</a>			Switch, End Of Cycle
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	8271341	<a href="#">3957804</a>		Knob, Push-To-Start
8	8271359	<a href="#">279962</a>		Endcap
9	<a href="#">3405152</a>			Switch, Wrinkle Shield
10	<a href="#">349639</a>			HANDLE AND LINT SCREEN ASSEMBLY
11	<a href="#">8283378</a>			Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>		Hinge, RH
"	<a href="#">3978606</a>			Hinge, Lint Lid
13	688983	<a href="#">487240</a>		Screw, For Mtg. Service Capacitor
14	<a href="#">3400859</a>			Screw, Grounding

15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8271390	<a href="#">8521918</a>	Top
17	8271339	<a href="#">3957799</a>	Knob, Control
18	<a href="#">3394427</a>		Clip-Harness
19	297535	<a href="#">17258</a>	Bumper
21	<a href="#">8299771</a>		Timer Assembly
22	<a href="#">8299970</a>		Switch, Temperature
23	<a href="#">3405281</a>		Power Relay
24	3976623	<a href="#">W10116566</a>	Control-Elec
25	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
26	<a href="#">357213</a>		Nut, Push-In
27	8299898	Not Available	Harness, Wiring
28	<a href="#">3397269</a>		Connector, Timer
29	<a href="#">3347243</a>		Block, Disconnect
30	<a href="#">94614</a>		Terminal
31	<a href="#">3977456</a>		Switch, Push-To-Start
32	8312687	<a href="#">3957754</a>	Timer Knob Assembly
33	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
34	<a href="#">8271418</a>		Bracket, Control
35	3977832	Not Available	Panel, Control
36	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
37	697812	<a href="#">8566493</a>	Power Relay
38	<a href="#">3388228</a>		Screw, 8-18 X 1/32
"	BLANK	Not Available	ACCESSORY PARTS
"	279948	<a href="#">4392065</a>	Kit, Dryer Repair
"	<a href="#">3406839</a>		Dry Rack Assembly
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )

