


Whirlpool YKEHS01PWH2 04 - DOOR PARTS, OPTIONAL PARTS (NOT INCLUDED)

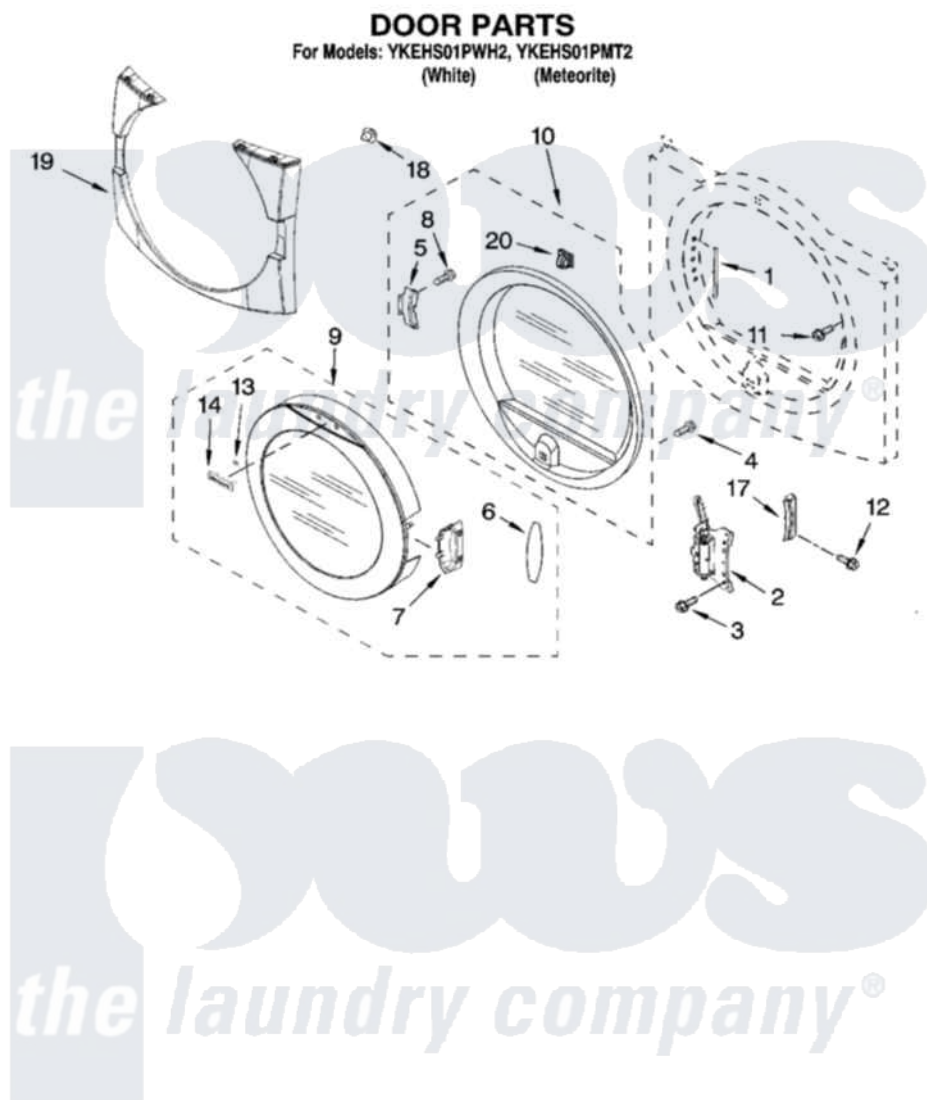

8180667

7

Whirlpool [Residential Whirlpool YKEHS01PWH2 Dryer Parts](#) Parts Diagram 04 - DOOR PARTS, OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8563855			Label, Hinge Hole
2	8559709	280200		Hinge
3	342043	486146		Screw
4	9742177			Screw, 8-18 X .625
5	8529539			Bracket, Handle
6	8541011		Not Available	Pad, Door Handle
7	8557268			Handle, Door
8	3393008	308685		Side Trim)
9	8542697			Door And Window Assembly
10	8557501			Inner Door Assembly
11	355515			Screw, 8-18 X 11/16
12	3400859			Screw, Grounding
13	8558182	2004333		Nut
14	9707516			Medallion
17	8566486			Cover-Hinge, Rotating

"	8566485		Cover-Hinge, Rotating
18	8547091	8181929	Clip, Trim
19	8562596		Trim And Clip Assembly
"	8542698		Trim And Clip Assembly
20	3389441		Door Catch Assembly
	72017		Paint, Touch-Up
"	4396603	W10202939	Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	BLANK	Not Available	ACCESSORY PARTS
"	8529894	346764	Kit, Hold Down
"	8522199		Accessory Parts
"	8541503		Kit, Stack Assembly
"	80047		PAINT, BULK (1 QT.) (KIT, DRYER REPAIR)

