


# Whirlpool YKEYS710JQ0 01 - TOP AND CONSOLE PARTS

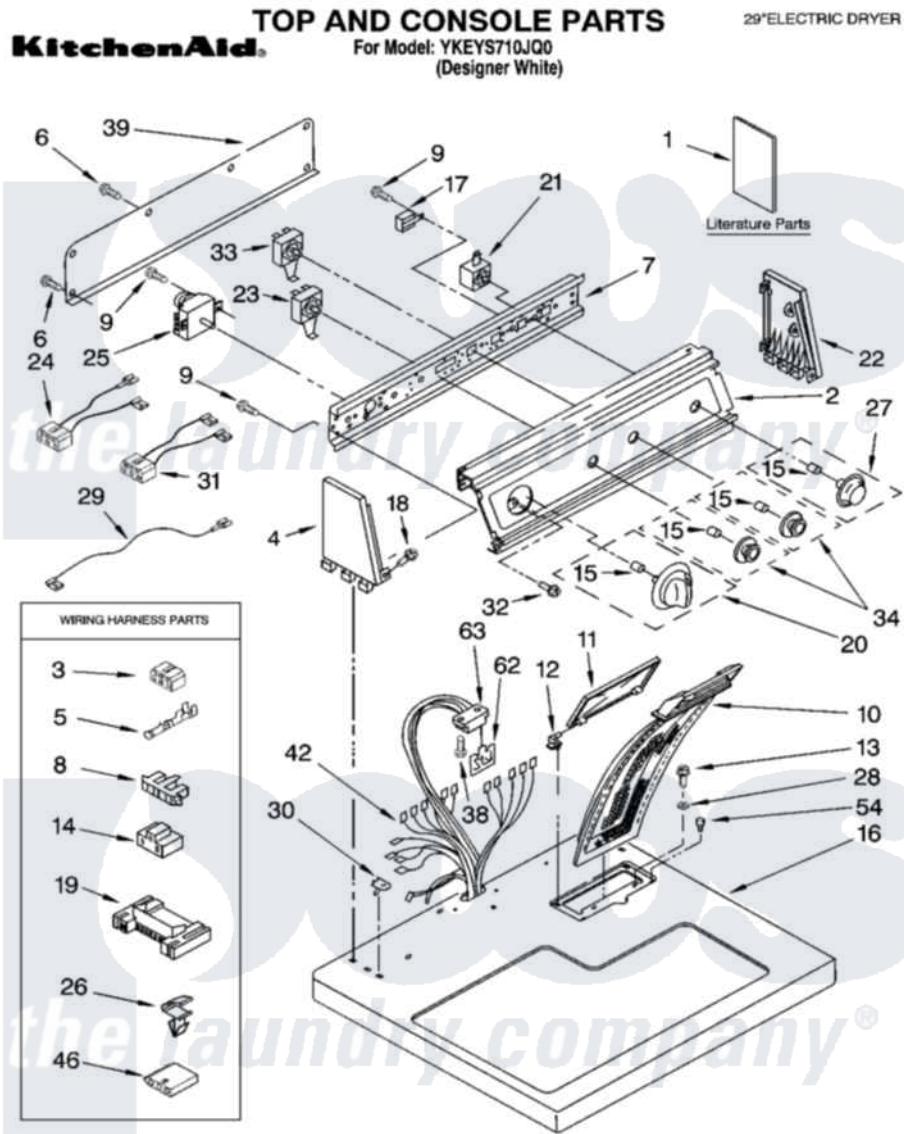

9-01 Litho in U.S.A. (djc)

1

Part No. 4377961

Whirlpool [Residential Whirlpool YKEYS710JQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3397620		Not Available	Literature Parts (Instructions, Installation)
"	LIT3405636		Not Available	Literature Parts (Use & Care Guide)
"	LIT8299795		Not Available	Literature Parts (Label, Wiring Diagram)
"	LIT3978731		Not Available	Literature Parts (Label, Energy Guide)
2	<a href="#">3977972</a>			Panel, Control
3	<a href="#">3347243</a>			Block, Disconnect
4	8274353	<a href="#">285858</a>		Endcap
5	<a href="#">94614</a>			Terminal
6	<a href="#">693995</a>			Screw, Hex Head
7	<a href="#">8271418</a>			Bracket, Control
8	<a href="#">3397269</a>			Connector, Timer
9	3390646	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
10	<a href="#">349639</a>			HANdle And Lint Screen Assembly

11	<a href="#">8283378</a>		Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>	Hinge, RH
"	<a href="#">3978606</a>		Hinge, Lint Lid
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3401144</a>		Connector
15	<a href="#">688805</a>		Clip, Spring Knob
16	8274386	<a href="#">8521923</a>	Top
17	<a href="#">694419</a>		Mini-Buzzer
18	<a href="#">388326</a>		Screw, 8-18 X 1.25
19	<a href="#">3395683</a>		Receptacle, Multi-Terminal
20	<a href="#">3405299</a>		Knob, Timer
21	<a href="#">3398094</a>		Switch, Push To Start
22	8274349	<a href="#">285858</a>	Endcap
23	<a href="#">3399639</a>		Switch, Rotary Temperature
24	<a href="#">3401695</a>		Wire, Jumper Buzzer
25	<a href="#">3976570</a>		Timer, 60 Hz
26	<a href="#">3394427</a>		Clip-Harness
27	<a href="#">3405992</a>		Knob, Push-To-Start
28	237446	<a href="#">487596</a>	Washer
29	<a href="#">3401671</a>		Wire, Jumper
30	<a href="#">357213</a>		Nut, Push-In
31	3396029	<a href="#">8539893</a>	Wire, Jumper
32	<a href="#">3400859</a>		Screw, Grounding
33	<a href="#">3399638</a>		Switch, Temperature
34	<a href="#">3949700</a>		Knob, Control
38	337686	Not Available	SCREW, 8-18 X .500
39	<a href="#">8274261</a>		Do-It-Yourself Repair Manuals
42	3394323	Not Available	Harness, Electric
46	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
54	297535	<a href="#">17258</a>	Bumper
62	3390537	<a href="#">8558178</a>	Control, Electronic
63	<a href="#">3391885</a>		Connector, Edge
"	BLANK	Not Available	ACCESSORY PARTS
"	<a href="#">3406839</a>		Dry Rack Assembly
"	279948	<a href="#">4392065</a>	Kit, Dryer Repair
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )

*the laundry company*<sup>®</sup>