


Whirlpool YLEN2000PW1 02 - TOP AND CONSOLE PARTS

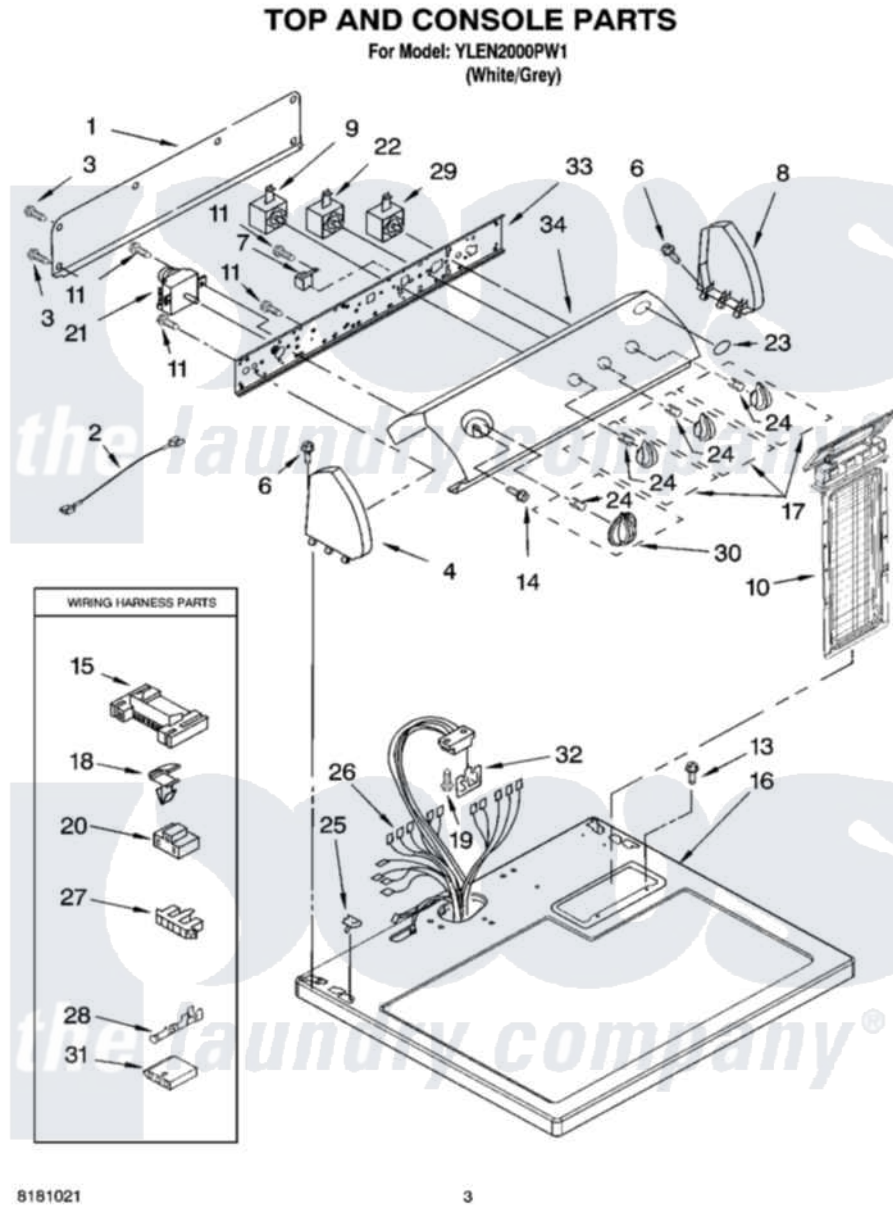

Whirlpool [Residential Whirlpool YLEN2000PW1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
9	8530152			Switch, Temperature
10	8557857			Screen, Lint
11	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
15	3395683			Receptacle, Multi-Terminal
16	8557930	8563985		Top
17	8544937			Knob, Control

18	3394427		Clip-Harness
19	359625	487240	Screw, For Mtg. Service Capacitor
20	3401144		Connector
21	3406725		Timer Assembly
22	3405154		Switch Rotary
23	3400985		Medallion
24	8536939		Clip, Knob
25	357213		Nut, Push-In
26	8299892	Not Available	Harness, Wiring
27	3397269		Connector, Timer
28	94614		Terminal
29	3398095		Switch, Push-To-Start
30	8544957		Timer Knob Assembly
31	3936144		Do-It-Yourself Repair Manuals
32	8558178		Control, Electronic
33	8544895		Bracket, Control
34	8545988		Panel, Control

