


# Whirlpool YLEQ5000KQ2 02 - TOP AND CONSOLE PARTS

## TOP AND CONSOLE PARTS

For Models: YLEQ5000KQ2, YLEQ5000KW2  
(Designer White) (White/Grey)

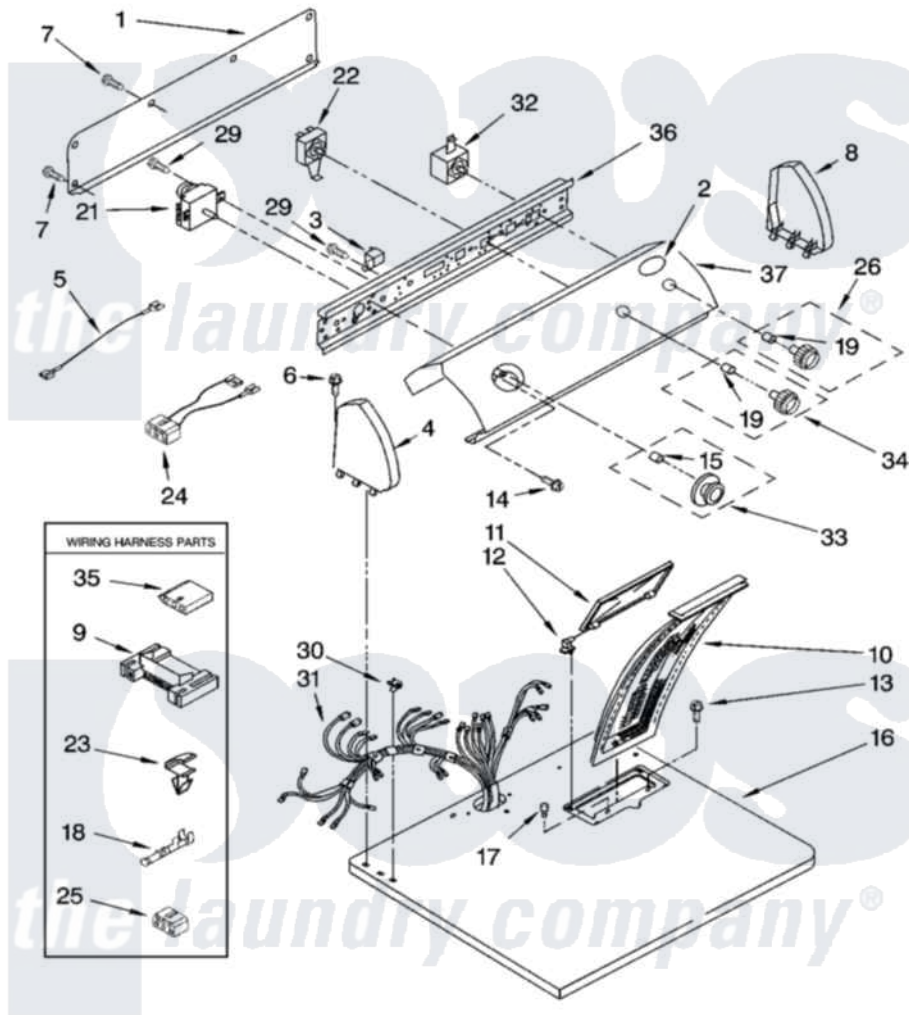

8180224

3

Whirlpool [Residential Whirlpool YLEQ5000KQ2 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
2	3955775	<a href="#">8303811</a>		Badge, Assembly
3	<a href="#">694419</a>			Mini-Buzzer
4	8271365	<a href="#">279962</a>		Endcap
5	<a href="#">3401674</a>			Wire, Jumper
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	<a href="#">693995</a>			Screw, Hex Head
8	8271359	<a href="#">279962</a>		Endcap
9	<a href="#">3395683</a>			Receptacle, Multi-Terminal
10	<a href="#">349639</a>			HANDLE AND LINT SCREEN ASSEMBLY
11	<a href="#">8283378</a>			Cover, Lint Screen
12	3978605	<a href="#">W10044470</a>		Hinge, RH
"	<a href="#">3978606</a>			Hinge, Lint Lid
13	688983	<a href="#">487240</a>		Screw, For Mtg. Service Capacitor
14	<a href="#">3400859</a>			Screw, Grounding

15	<a href="#">688805</a>		Clip, Spring Knob
16	8271390	<a href="#">8521918</a>	Top
17	297535	<a href="#">17258</a>	Bumper
18	<a href="#">94614</a>		Terminal
19	<a href="#">8536939</a>		Clip, Knob
21	<a href="#">8299778</a>		Timer, 60 Hz
22	<a href="#">3405152</a>		Switch, Wrinkle Shield
23	<a href="#">3394427</a>		Clip-Harness
24	8283292	<a href="#">8283276</a>	Wire, Jumper
25	<a href="#">3347243</a>		Block, Disconnect
26	8271341	<a href="#">3957804</a>	Knob, Push-To-Start
"	<a href="#">8538959</a>		Knob, Push-To-Start
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">357213</a>		Nut, Push-In
31	8299870	Not Available	Harness, Wiring
32	<a href="#">3977456</a>		Switch, Push-To-Start
33	8312687	<a href="#">3957754</a>	Timer Knob Assembly
"	<a href="#">8538953</a>		Timer Knob Assembly
34	8271339	<a href="#">3957799</a>	Knob, Control
"	<a href="#">8538957</a>		Knob, Control
35	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
36	<a href="#">8271418</a>		Bracket, Control
37	<a href="#">3977849</a>		Panel, Control
"	<a href="#">8532637</a>		Panel, Control
"	BLANK	Not Available	ACCESSORY PARTS
"	<a href="#">3404351</a>		Accessory Parts
"	<a href="#">8522199</a>		Accessory Parts
"	279948	<a href="#">4392065</a>	Kit, Dryer Repair
	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )

