


Whirlpool YLER3624JQ1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Model: YLER3624JQ1
(Designer White)

29" ELECTRIC DRYER

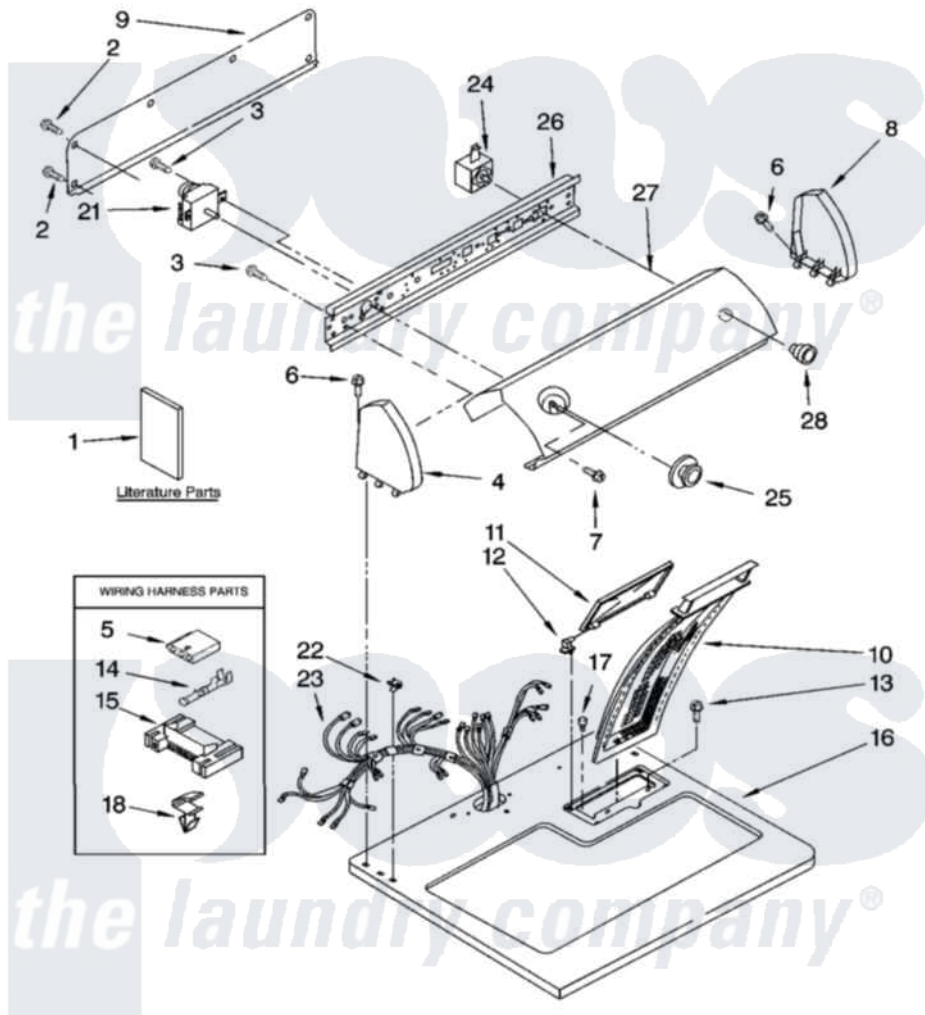

10-01 Litho in U.S.A. (djc)

1

Part No. 4377995

[Whirlpool Residential Whirlpool YLER3624JQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8314832		Not Available	Literature Parts (Use And care Guide)
"	LIT3397620		Not Available	Literature Parts (Instructions, Installation)
"	LIT3978731		Not Available	Literature Parts (Label, Energy Guide)
"	LIT8528188		Not Available	Literature Parts (Label, Wiring Diagram)
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8271365	279962		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3400859			Screw, Grounding
8	8271359	279962		Endcap

9	8274261		Do-It-Yourself Repair Manuals
10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	94614		Terminal
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
17	297535	17258	Bumper
18	3394427		Clip-Harness
21	8299774		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299866	Not Available	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8312687	3957754	Timer Knob Assembly
26	8271418		Bracket, Control
27	3977813		Panel, Control
28	8271341	3957804	Knob, Push-To-Start
"	BLANK	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	689790		Dry Rack
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

the laundry company[®]

the laundry company[®]