


Whirlpool YLER4000RQ0 02 - TOP AND CONSOLE PARTS

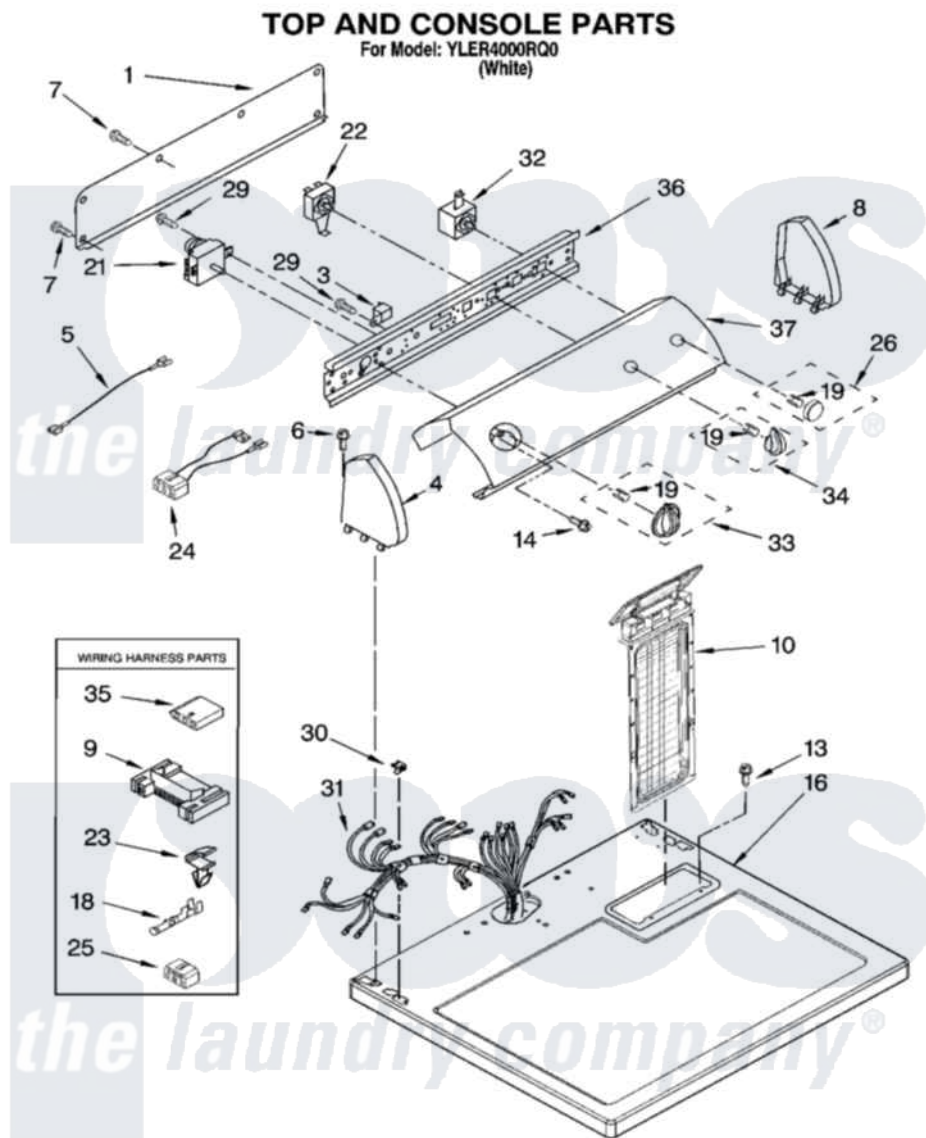

8180724

3

Whirlpool [Residential Whirlpool YLER4000RQ0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	3401674			Wire, Jumper
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8557857			Screen, Lint
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
16	8557930	8563985		Top
18	94614			Terminal
19	8536939			Clip, Knob
21	8299778			Timer, 60 Hz
22	3405152			Switch, Wrinkle Shield

23	3394427		Clip-Harness
24	8283292	8283276	Wire, Jumper
25	3347243		Block, Disconnect
26	8544939		Knob, Push-To-Start
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299870	Not Available	Harness, Wiring
32	3977456		Switch, Push-To-Start
33	8544955		Timer Knob Assembly
34	8544935		Knob, Control
35	3936144		Do-It-Yourself Repair Manuals
36	8271418		Bracket, Control
37	8577221	Not Available	Panel, Control (Includes Illus. 2)

