


# Whirlpool YLER5636PQ0 02 - TOP AND CONSOLE PARTS

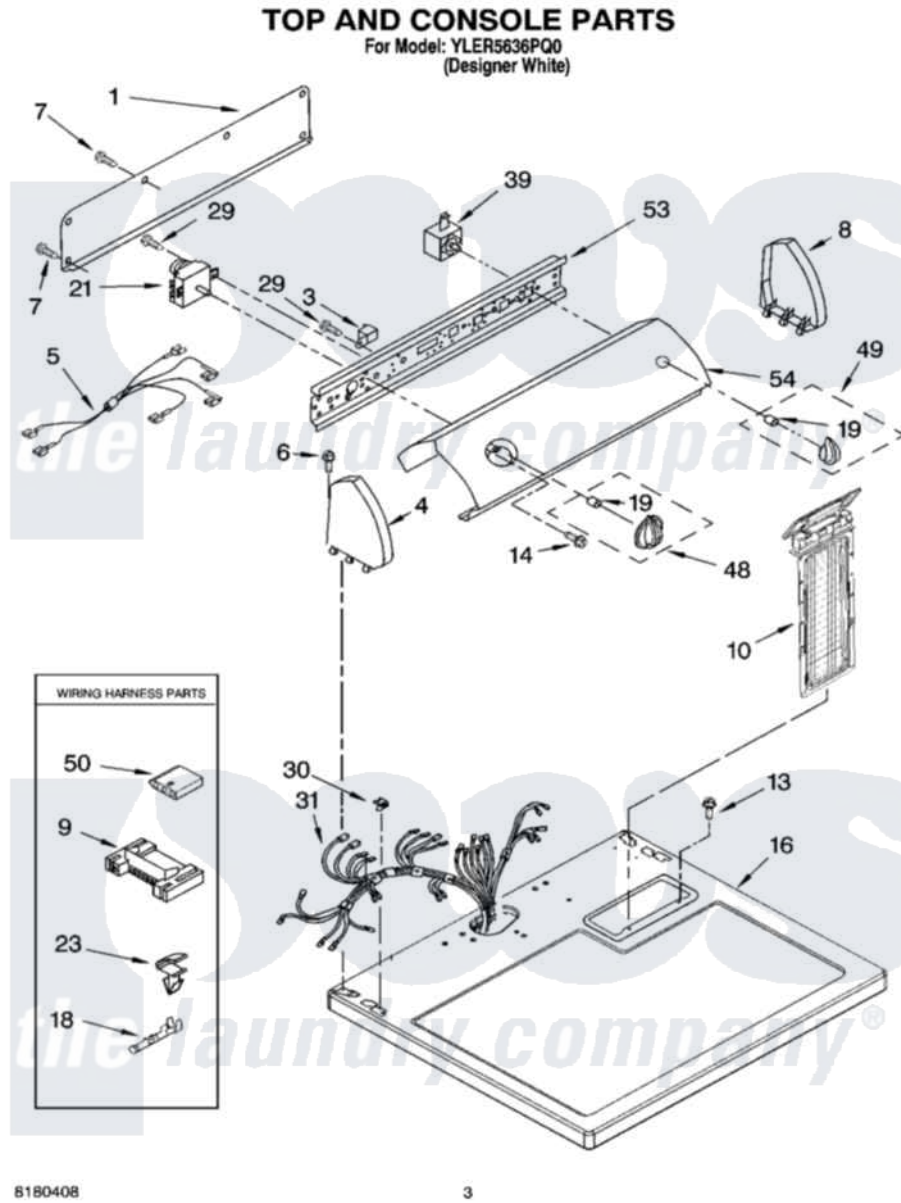

Whirlpool [Residential Whirlpool YLER5636PQ0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
3	<a href="#">694419</a>			Mini-Buzzer
4	8271365	<a href="#">279962</a>		Endcap
5	<a href="#">8539888</a>			Jumper, Wire
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	<a href="#">693995</a>			Screw, Hex Head
8	8271359	<a href="#">279962</a>		Endcap
9	<a href="#">3395683</a>			Receptacle, Multi-Terminal
10	<a href="#">8557857</a>			Screen, Lint
13	688983	<a href="#">487240</a>		Screw, For Mtg. Service Capacitor
14	<a href="#">3400859</a>			Screw, Grounding
16	8557930	<a href="#">8563985</a>		Top
18	<a href="#">94614</a>			Terminal
19	<a href="#">8536939</a>			Clip, Knob
21	<a href="#">8299778</a>			Timer, 60 Hz
23	<a href="#">3394427</a>			Clip-Harness

29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">357213</a>		Nut, Push-In
31	8299868	Not Available	Harness, Wiring
39	<a href="#">3404233</a>		Switch, Push-To-Start
48	<a href="#">8544955</a>		Timer Knob Assembly
49	<a href="#">8544935</a>		Knob, Control
50	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
53	<a href="#">8271418</a>		Bracket, Control
54	<a href="#">8545964</a>		Panel, Control
"	BLANK	Not Available	ACCESSORY PARTS
	279948	<a href="#">4392065</a>	Kit, Dryer Repair
"	<a href="#">3404351</a>		Accessory Parts
"	<a href="#">8522199</a>		Accessory Parts
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )

