


Whirlpool YLER5636PQ1 02 - TOP AND CONSOLE PARTS

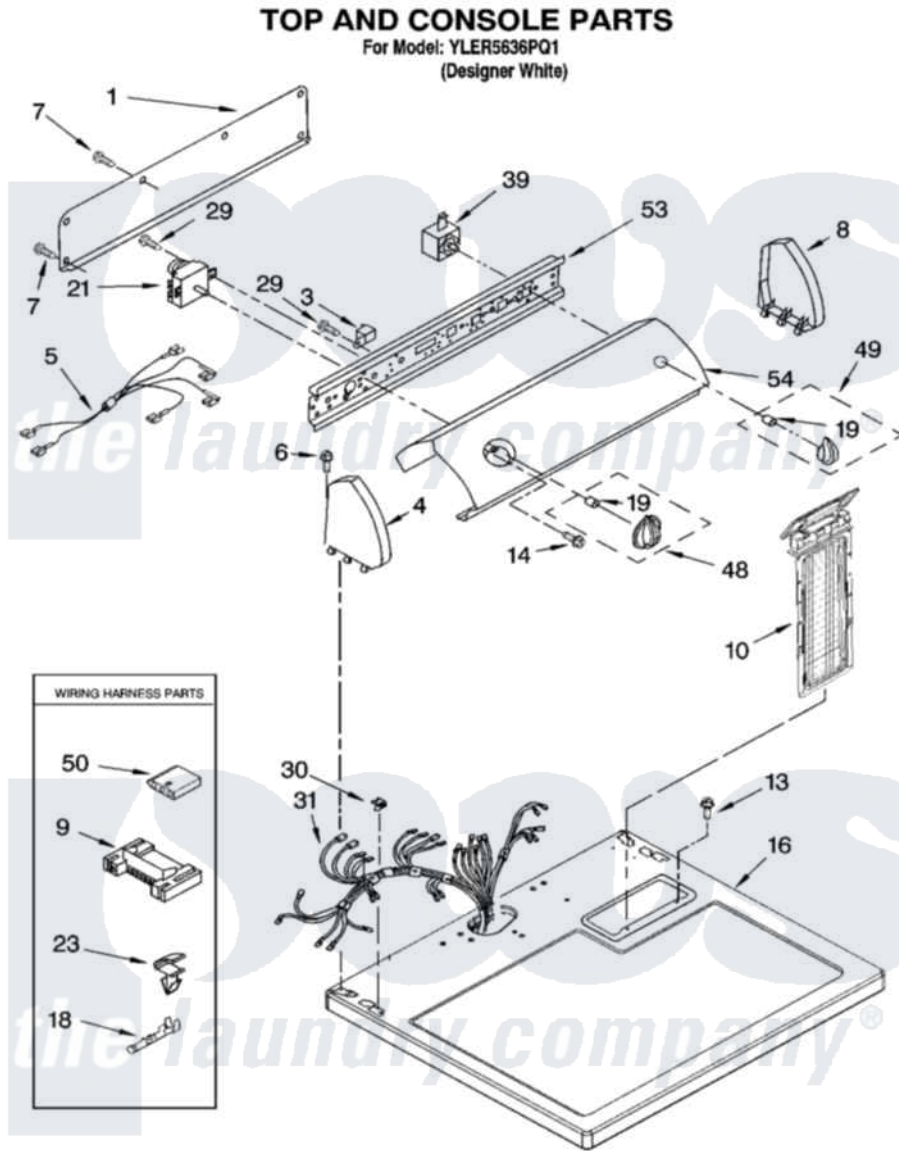

Whirlpool Residential Whirlpool YLER5636PQ1 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	8539888			Jumper, Wire
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8557857			Screen, Lint
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
16	8557930	8563985		Top
18	94614			Terminal
19	8536939			Clip, Knob
21	8299778			Timer, 60 Hz
23	3394427			Clip-Harness

29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299868	Not Available	Harness, Wiring
39	8543274		Switch, Push-To-Start
48	8544955		Timer Knob Assembly
49	8544935		Knob, Control
50	3936144		Do-It-Yourself Repair Manuals
53	8271418		Bracket, Control
54	8545964		Panel, Control

