


# Whirlpool YRED4340SQ0 01 - TOP AND CONSOLE PARTS

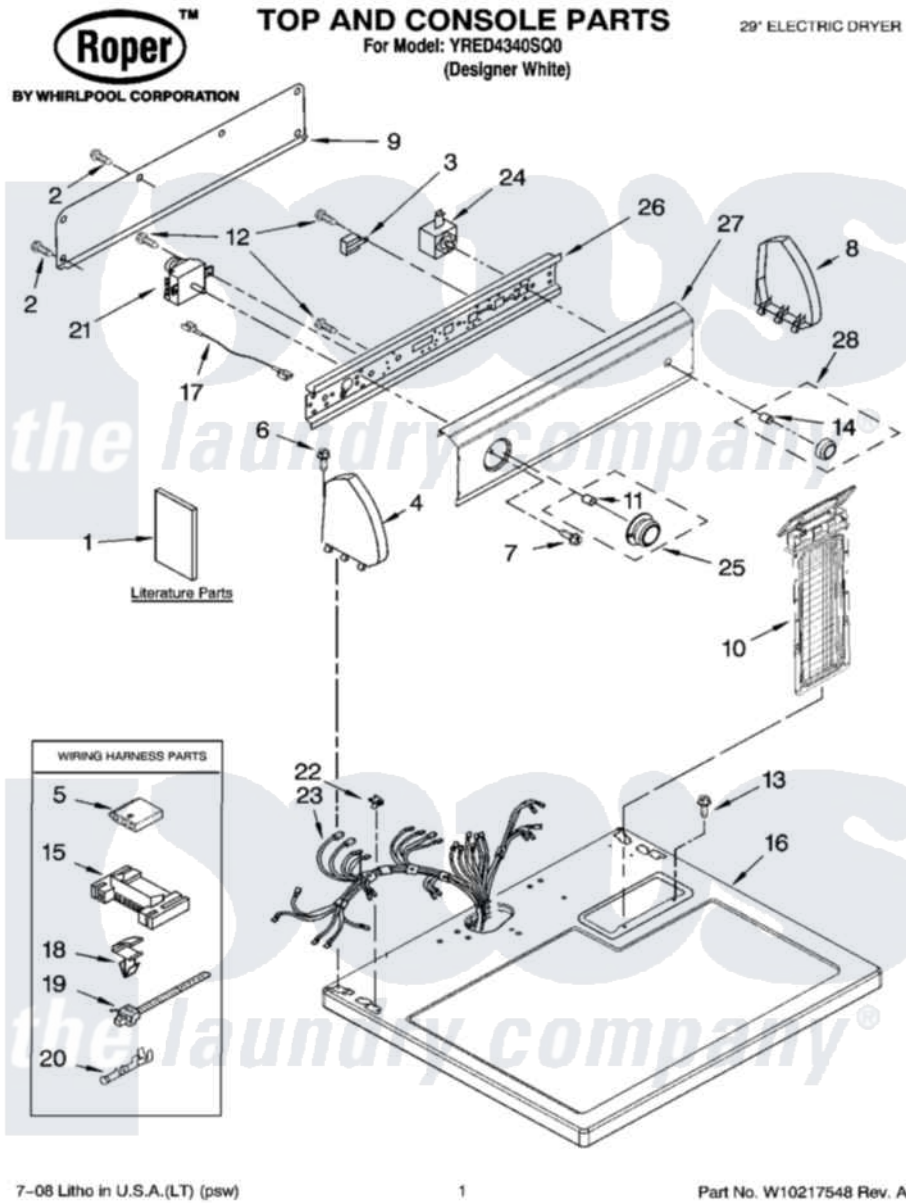

7-06 Litho in U.S.A.(LT) (psw)

1

Part No. W10217548 Rev. A

Whirlpool [Residential Whirlpool YRED4340SQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10151576		Not Available	Guide, Use & Care
"	8535831		Not Available	Instructions, Installation
"	W10043010		Not Available	Sheet, Cycle Feature
"	8528188		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">693995</a>			Screw, Hex Head
3	<a href="#">694419</a>			Mini-Buzzer
4	8274437	<a href="#">279960</a>		Endcap
5	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	8533951	<a href="#">3400859</a>		Screw, Grounding
8	8274434	<a href="#">279960</a>		Endcap
9	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals

10	<a href="#">8558467</a>		Screen, Lint
11	<a href="#">688805</a>		Clip, Spring Knob
12	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">8536939</a>		Clip, Knob
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>	Top
17	3393815	<a href="#">3393812</a>	Wire, Jumper
18	<a href="#">3394427</a>		Clip-Harness
19	<a href="#">3391249</a>		Cable Tie, Push Mount
20	<a href="#">94614</a>		Terminal
21	<a href="#">8299781</a>		Timer, 60 Hz
22	<a href="#">357213</a>		Nut, Push-In
23	8299868	Not Available	Harness, Wiring
24	<a href="#">3977456</a>		Switch, Push-To-Start
25	<a href="#">8538953</a>		Timer Knob Assembly
26	<a href="#">8271418</a>		Bracket, Control
27	<a href="#">8579655</a>		Panel, Control
28	<a href="#">8538959</a>		Knob, Push-To-Start

