


Whirlpool YREX4634KQ0 01 - TOP AND CONSOLE PARTS

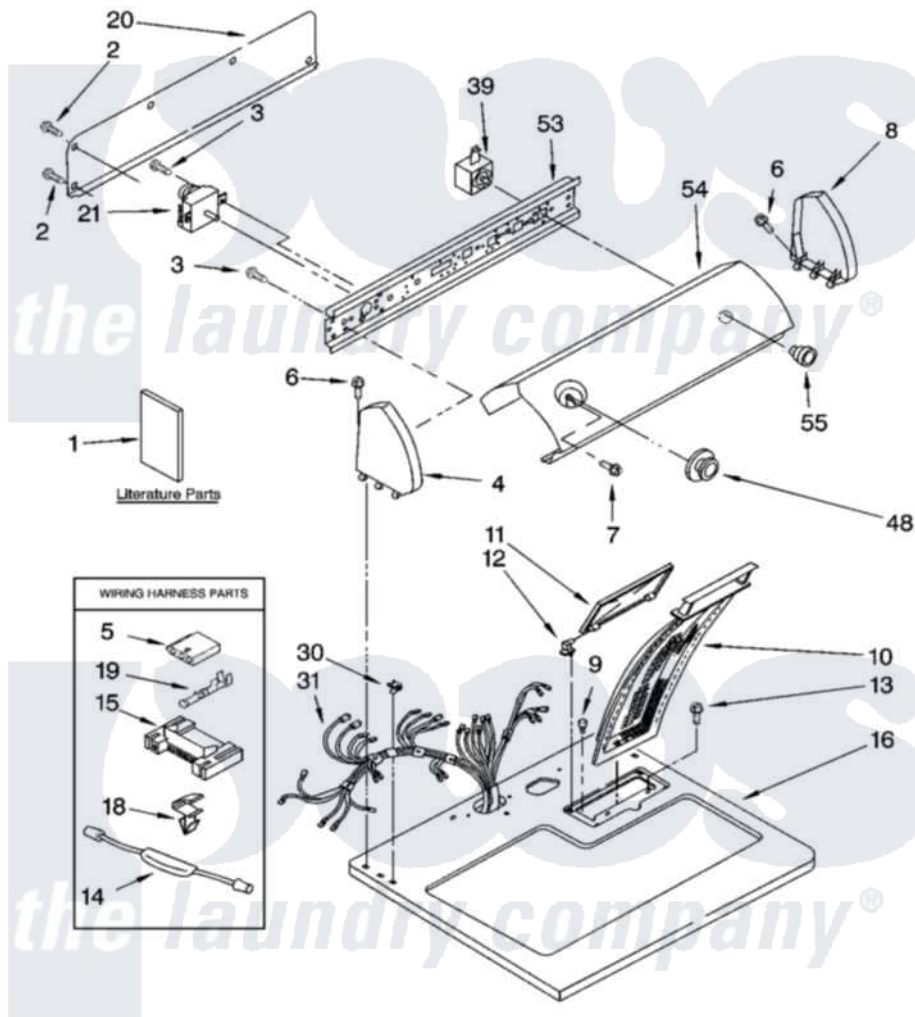

TOP AND CONSOLE PARTS For Model: YREX4634KQ0 (Designer White)

25" ELECTRIC DRYER



2-01 Litho in U.S.A. (rog)

1

Part No. 4320257

Whirlpool [Residential Whirlpool YREX4634KQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3978913		Not Available	Literature Parts (Guide, Use & Care)
"	LIT3397620		Not Available	Literature Parts (Instructions, Installation)
"	LIT3406689		Not Available	Literature Parts (Wiring Diagram)
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3400859			Screw, Grounding
8	8274434	279960		Endcap
9	297535	17258		Bumper

10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3401076	279872	Resistor
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
18	3394427		Clip-Harness
19	94614		Terminal
20	8274261		Do-It-Yourself Repair Manuals
21	8299764		Timer Assembly, 60 Hz
30	357213		Nut, Push-In
31	3394316	Not Available	Harness, Wiring
39	3977456		Switch, Push-To-Start
48	8274380	3957749	Knob
53	8271418		Bracket, Control
54	3977926		Panel, Control
55	8274376	3957800	Knob, Push-To-Start

