


Whirlpool YREX6634RQ1 01 - TOP AND CONSOLE PARTS

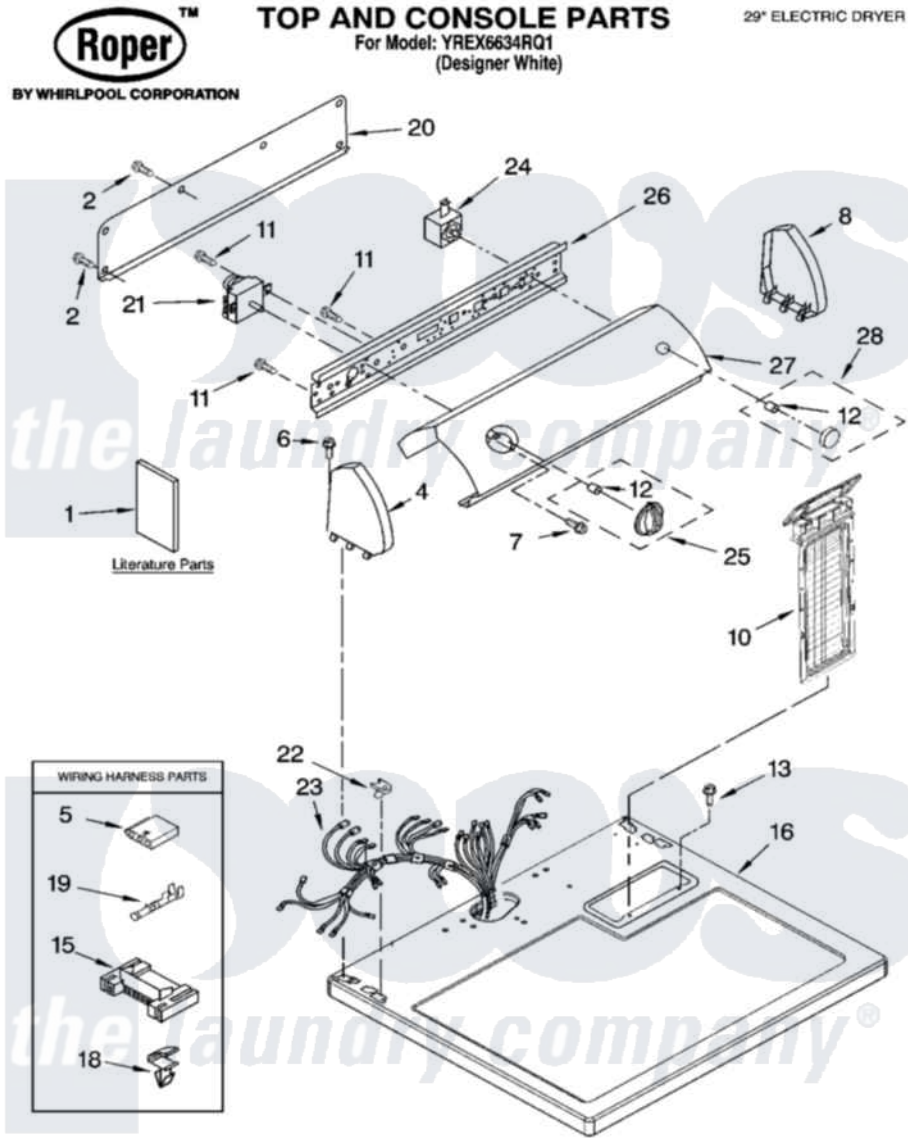

10-06 Litho in U.S.A.(LT)

1

Part No. 8180931

Whirlpool [Residential Whirlpool YREX6634RQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578192		Not Available	Guide, Use & Care
"	8535831		Not Available	Instructions, Installation
"	8533780		Not Available	Sheet, Cycle Feature
"	8528188		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8274434	279960		Endcap
10	8558467			Screen, Lint
11	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

12	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	3394427		Clip-Harness
19	94614		Terminal
20	8274261		Do-It-Yourself Repair Manuals
21	8299781		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299868	Not Available	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	3957383		Timer Knob Assembly
26	8271418		Bracket, Control
27	8573818		Panel, Control
28	8557462		Knob, Push-To-Start

