


Whirlpool YWED4800XQ1 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: YWED4800XQ1
(White)

29" ELECTRIC DRYER

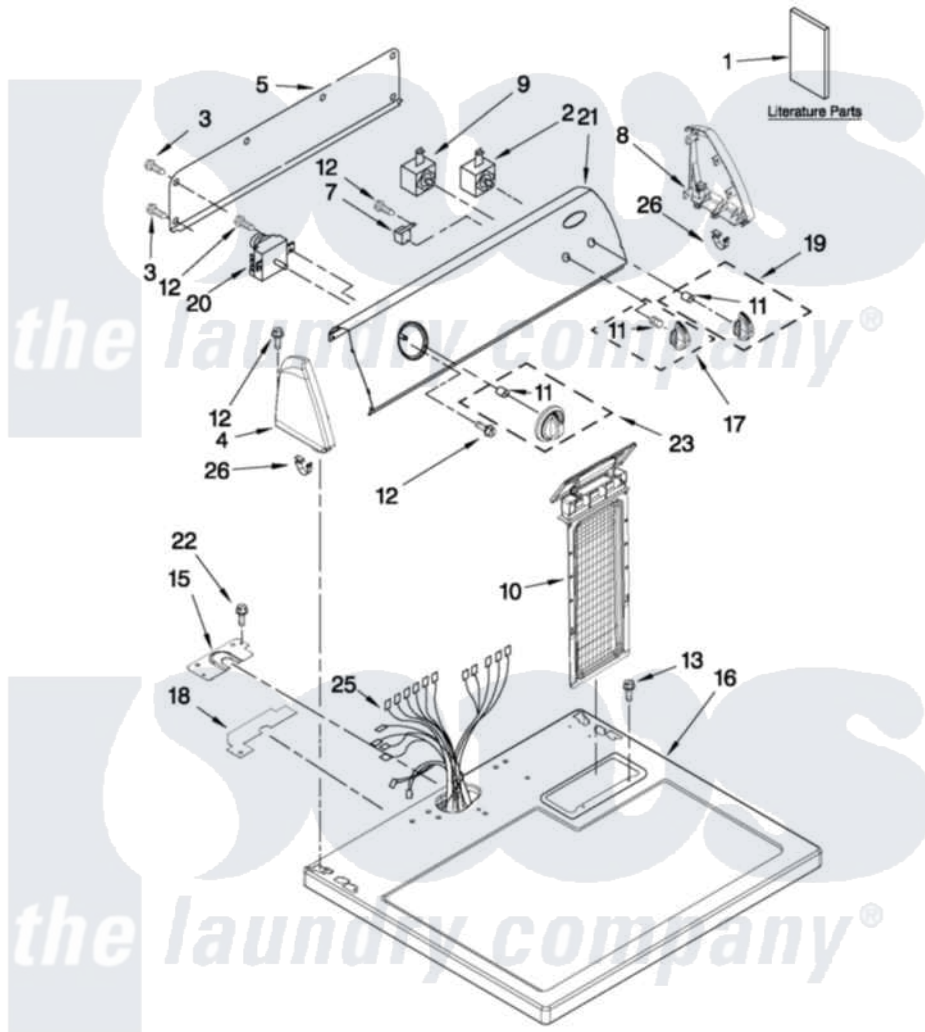

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

5-12 Litho in U.S.A. (GG)(bay)

1

Part No. W10508648 REV. A

Whirlpool Residential Whirlpool YWED4800XQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096986		Not Available	GUIDE, USE & CARE
"	W10115228		Not Available	INSTRUCTIONS, INSTALLATION
"	W10185986		Not Available	WIRING DIAGRAM
2	W10117655			Switch, Push-To-Start
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
5	W10103406			Panel, Rear Console
7	694419			Mini-Buzzer
8	8566032	8565954		Cap, End
9	3399639			Switch, Rotary Temperature
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240		Screw, For Mtg. Service Capacitor

15	W10112578		Harness, Bracket
16	8559800	8563663	Top
17	W10034380		Knob, Control
18	W10112603		Seal, Harness
19	W10034380		Knob, Control
20	W10185982		Timer Assembly
21	W10486243	Not Available	CONTROL PANEL & BRACKET ASSEMBLY
22	359625	487240	Screw, For Mtg. Service Capacitor
23	W10034750		Timer Knob Assembly
25	W10470707	Not Available	HARNESS, WIRING
26	8312709		Clip-Console

the laundry company[®]

the laundry company[®]

the laundry company[®]