


# Whirlpool YWED8300SW0 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

For Model: YWED8300SW0, YWED8300SB0  
(White) (Black)

27" Electric Dryer

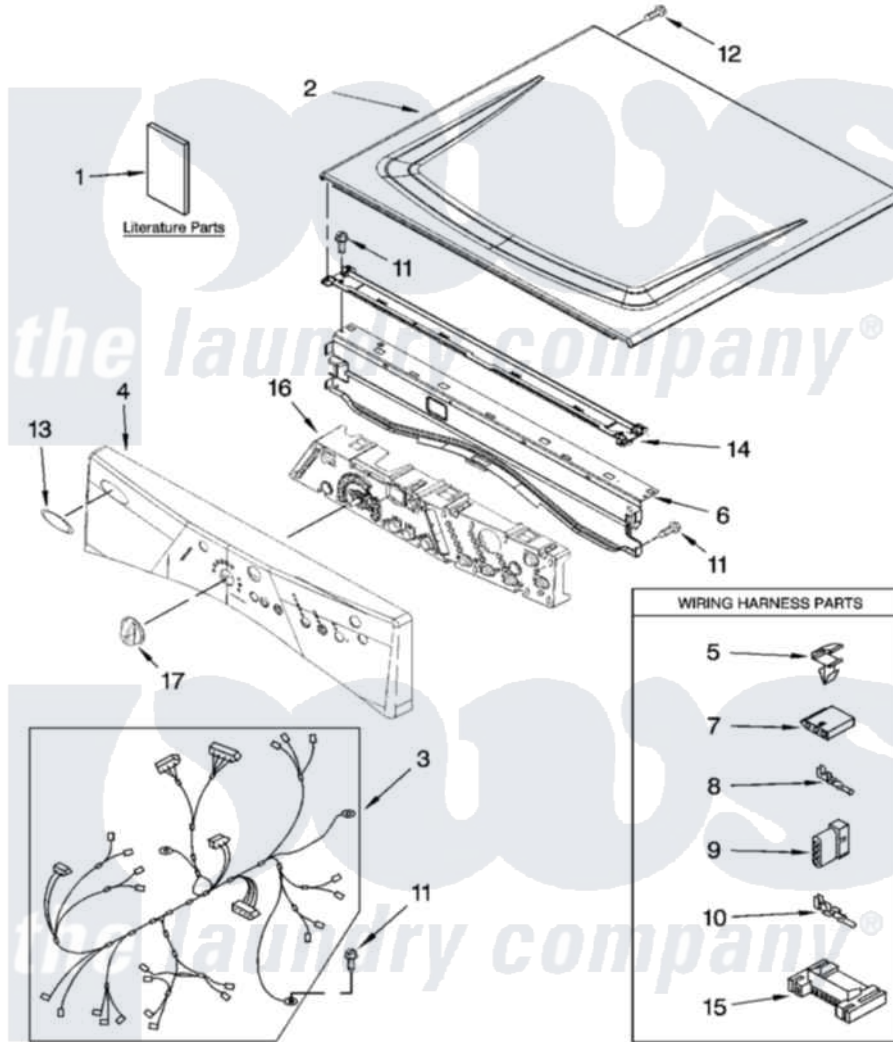

6-07 Printed in U.S.A. (LT)

1

Part No. 8181074 Rev. B

Whirlpool [Residential Whirlpool YWED8300SW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8578901		Not Available	Use & Care Guide
"	8578834		Not Available	Tech Sheet
"	8578904		Not Available	Guide, Quick Start
2	8563730	<a href="#">W10336080</a>		Top
"	<a href="#">W10129703</a>			Top
3	W10110974		Not Available	Harness, Main
4	<a href="#">W10099598</a>			Panel, Console
"	<a href="#">W10099631</a>			Panel, Console
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">8565237</a>			Bracket, Console
7	<a href="#">353424</a>			Plug, Terminal
8	<a href="#">94614</a>			Terminal
9	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
10	94613	<a href="#">596797</a>		Terminal
11	3390647	<a href="#">488729</a>		Screw
12	<a href="#">3400238</a>			Screw, 2-28 X 1/2

13	W10117943	<a href="#">8303811</a>	Badge, Assembly
14		<a href="#">8574968</a>	Screw, 10-16 X 1/2
15		<a href="#">3395683</a>	Receptacle, Multi-Terminal
16		<a href="#">8571955</a>	Assembly, User Interface
17		<a href="#">8574963</a>	Knob, Control
"		<a href="#">W10129067</a>	Knob, Control

