


# Whirlpool YWED9270XR1 01 - TOP AND CONSOLE PARTS

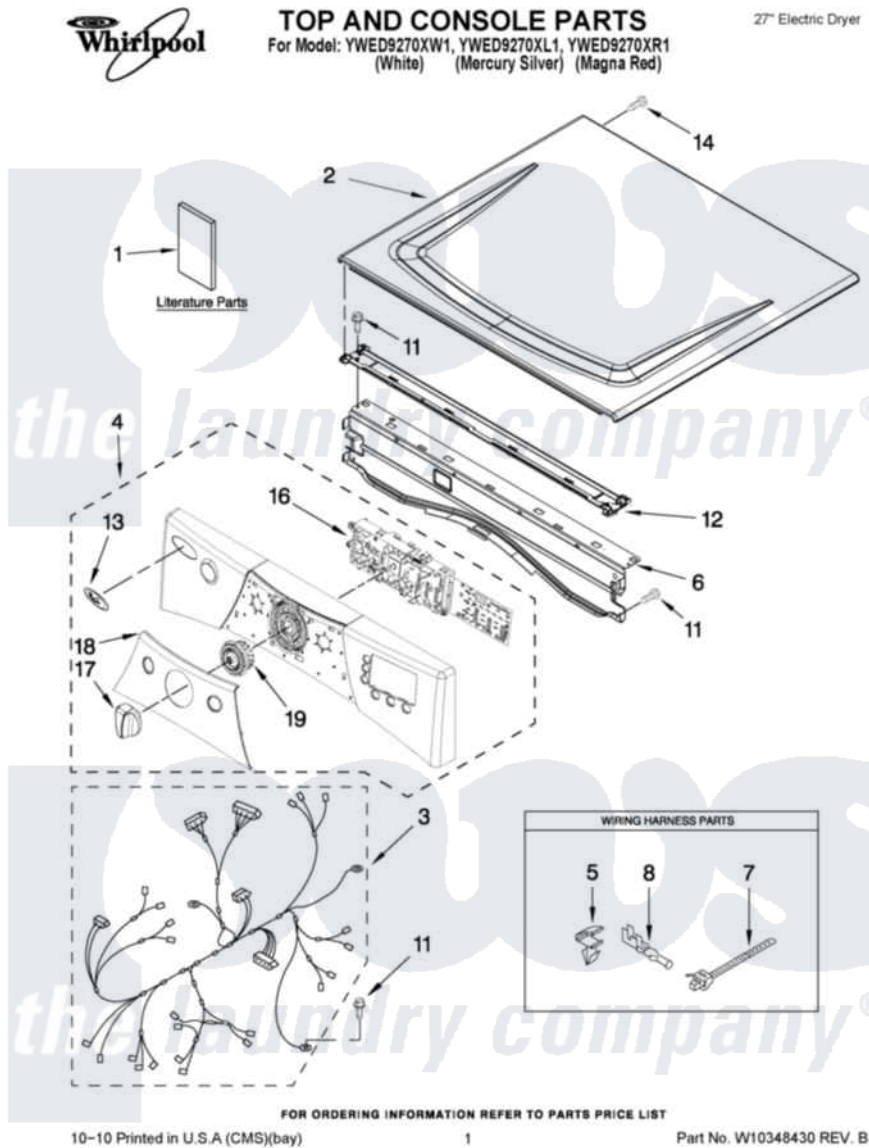

Whirlpool Residential Whirlpool YWED9270XR1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10293937		Not Available	USE & CARE GUIDE
"	W10294025		Not Available	TECH SHEET
"	W10240584		Not Available	INSTALLATION, INSTRUCTION
2	8563730	<a href="#">W10336080</a>		Top
"	<a href="#">W10251213</a>			Top
"	W10251212	<a href="#">W10336090</a>		Top
3	W10278760		Not Available	HARNESS, MAIN
4	<a href="#">W10215462</a>			Panel, Console
"	<a href="#">W10215464</a>			Panel, Console
"	<a href="#">W10215463</a>			Panel, Console
5	<a href="#">3394427</a>			Clip-Harness
6	<a href="#">8565237</a>			Bracket, Console
7	<a href="#">3391018</a>			Tie Cable
8	<a href="#">94614</a>			Terminal
11	3390647	<a href="#">488729</a>		Screw
12	<a href="#">W10266747</a>			Channel-Water, Dryer

13	W10117943	<a href="#">8303811</a>	Badge, Assembly
14	<a href="#">3400238</a>		Screw, 2-28 X 1/2
16	W10215460	<a href="#">W10418068</a>	Control-Elec
17	<a href="#">W10215781</a>		Knob Assembly
"	<a href="#">W10247262</a>		Knob Assembly
18	<a href="#">W10215470</a>		Cover, Center
"	<a href="#">W10215468</a>		Cover, Center
"	<a href="#">W10215469</a>		Cover, Center
19	<a href="#">W10237301</a>		Cycle, Light Guide

