


Whirlpool YWED9270XW1 01 - TOP AND CONSOLE PARTS

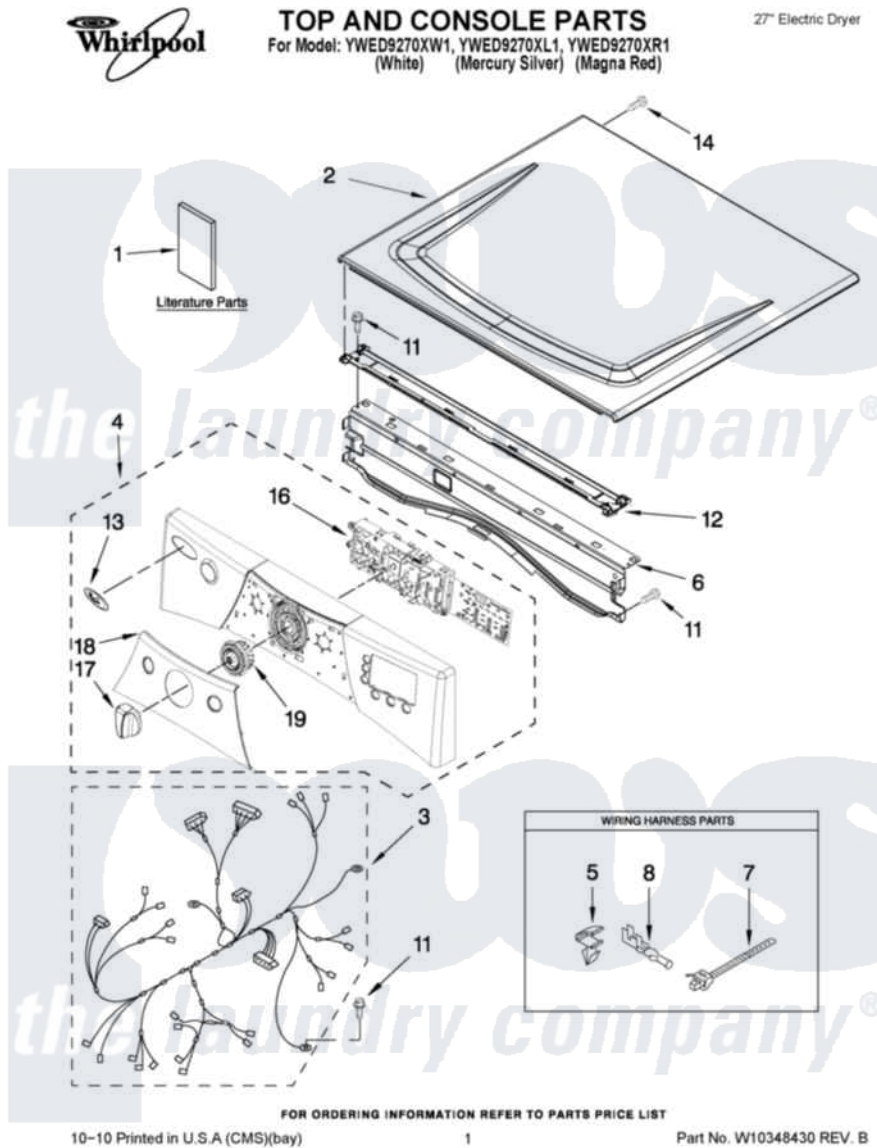

Whirlpool Residential Whirlpool YWED9270XW1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10293937		Not Available	USE & CARE GUIDE
"	W10294025		Not Available	TECH SHEET
"	W10240584		Not Available	INSTALLATION, INSTRUCTION
2	8563730	W10336080		Top
"	W10251213			Top
"	W10251212	W10336090		Top
3	W10278760		Not Available	HARNESS, MAIN
4	W10215462			Panel, Console
"	W10215464			Panel, Console
"	W10215463			Panel, Console
5	3394427			Clip-Harness
6	8565237			Bracket, Console
7	3391018			Tie Cable
8	94614			Terminal
11	3390647	488729		Screw
12	W10266747			Channel-Water, Dryer

13	W10117943	8303811	Badge, Assembly
14	3400238		Screw, 2-28 X 1/2
16	W10215460	W10418068	Control-Elec
17	W10215781		Knob Assembly
"	W10247262		Knob Assembly
18	W10215470		Cover, Center
"	W10215468		Cover, Center
"	W10215469		Cover, Center
19	W10237301		Cycle, Light Guide

