


# Whirlpool YWGD5300VW0 01 - TOP AND CONSOLE PARTS

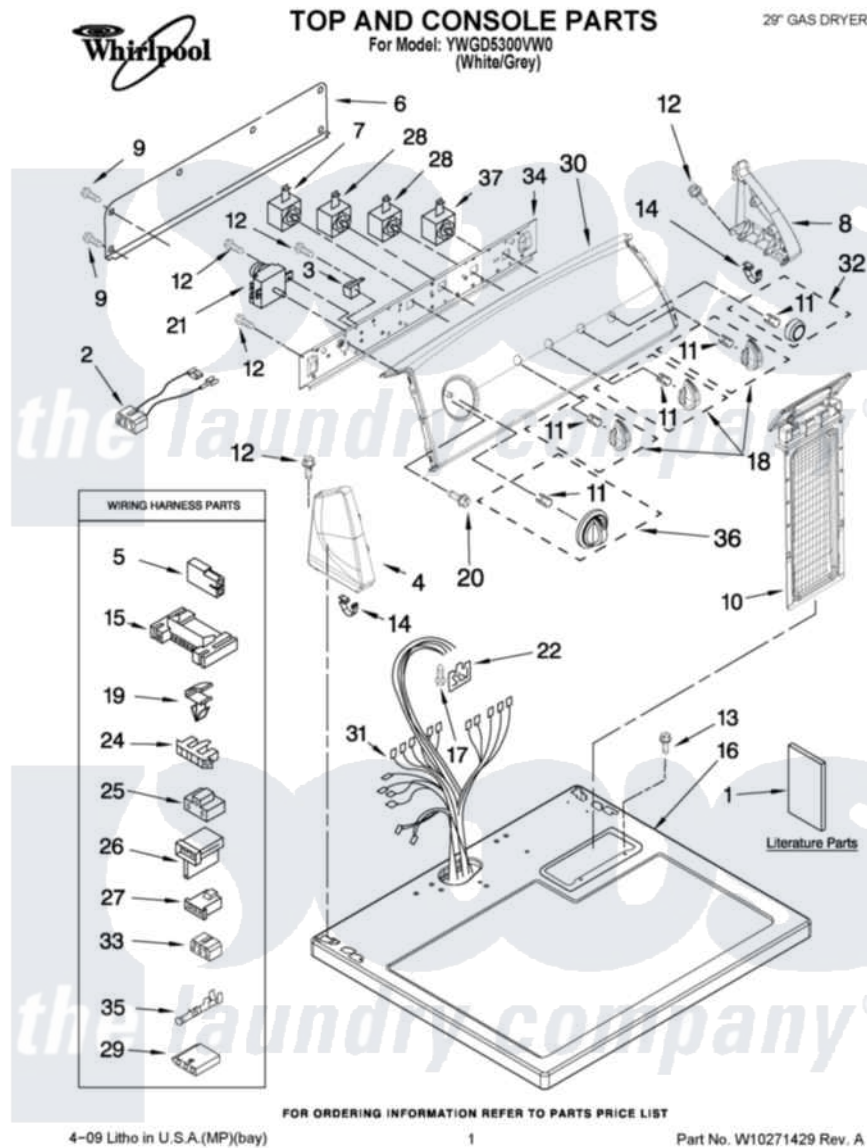

Whirlpool Residential Whirlpool YWGD5300VW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

| Item | Original Part Number      | Replaced By             | Status        | Part Description                                  |
|------|---------------------------|-------------------------|---------------|---|
| 1    | W10150630                 |                         | Not Available | LITERATURE PARTS<br>INSTRUCTIONS,<br>INSTALLATION |
| "    | W10042950                 |                         | Not Available | Sheet, Cycle Feature                              |
| "    | W10151572                 |                         | Not Available | GUIDE, USE & CARE                                 |
| "    | W10118081                 |                         | Not Available | Wiring Diagram                                    |
| 2    | <a href="#">W10113080</a> |                         |               | Wire, Jumper                                      |
| 3    | <a href="#">694419</a>    |                         |               | Mini-Buzzer                                       |
| 4    | 8566035                   | <a href="#">8565957</a> |               | Cap, End  |
| 5    | <a href="#">717252</a>    |                         |               | Receptacle, Terminal                              |
| 6    | <a href="#">8274261</a>   |                         |               | Do-It-Yourself Repair Manuals                     |
| 7    | <a href="#">3405155</a>   |                         |               | Switch, Temperature                               |
| 8    | 8566032                   | <a href="#">8565954</a> |               | Cap, End  |
| 9    | <a href="#">693995</a>    |                         |               | Screw, Hex Head                                   |
| 10   | <a href="#">8557857</a>   |                         |               | Screen, Lint                                      |
| 11   | <a href="#">8536939</a>   |                         |               | Clip, Knob  |
| 12   | 8533071                   | <a href="#">00767</a>   |               | Screw, 8A X 3/8 HeX Washer                        |

|    |                           |                           |                                   |
|----|---------------------------|---------------------------|-----------------------------------|
| 12 | <a href="#">8533971</a>   | <a href="#">30707</a>     | Head Tapping                      |
| 13 | 688983                    | <a href="#">487240</a>    | Screw, For Mtg. Service Capacitor |
| 14 | <a href="#">8312709</a>   |                           | Clip-Console                      |
| 15 | <a href="#">3395683</a>   |                           | Receptacle, Multi-Terminal        |
| 16 | 8559800                   | <a href="#">8563663</a>   | Top                               |
| 17 | 359625                    | <a href="#">487240</a>    | Screw, For Mtg. Service Capacitor |
| 18 | <a href="#">W10034380</a> |                           | Knob, Control                     |
| 19 | <a href="#">3394427</a>   |                           | Clip-Harness                      |
| 20 | 8533951                   | <a href="#">3400859</a>   | Screw, Grounding                  |
| 21 | <a href="#">8566184</a>   |                           | Timer Assembly                    |
| 22 | <a href="#">8558178</a>   |                           | Control, Electronic               |
| 24 | <a href="#">3397269</a>   |                           | Connector, Timer                  |
| 25 | <a href="#">3401144</a>   |                           | Connector                         |
| 26 | <a href="#">3403499</a>   |                           | Connector, 2-Postion              |
| 27 | <a href="#">3403498</a>   |                           | Connector, 3-Position             |
| 28 | <a href="#">3405156</a>   |                           | Switch, Rotary                    |
| 29 | <a href="#">3936144</a>   |                           | Do-It-Yourself Repair Manuals     |
| 30 | <a href="#">W10206010</a> |                           | Panel, Control                    |
| 31 | 8576542                   | <a href="#">W10071310</a> | Harns-Wire                        |
| 32 | <a href="#">W10034790</a> |                           | Knob, Push-To-Start               |
| 33 | <a href="#">3347243</a>   |                           | Block, Disconnect                 |
| 34 | <a href="#">8566052</a>   |                           | Bracket, Console                  |
| 35 | <a href="#">94614</a>     |                           | Terminal                          |
| 36 | <a href="#">W10034750</a> |                           | Timer Knob Assembly               |
| 37 | <a href="#">3398095</a>   |                           | Switch, Push-To-Start             |

