Whirlpool LGB6300LW1 04 - 8318272 BURNER ASSEMBLY

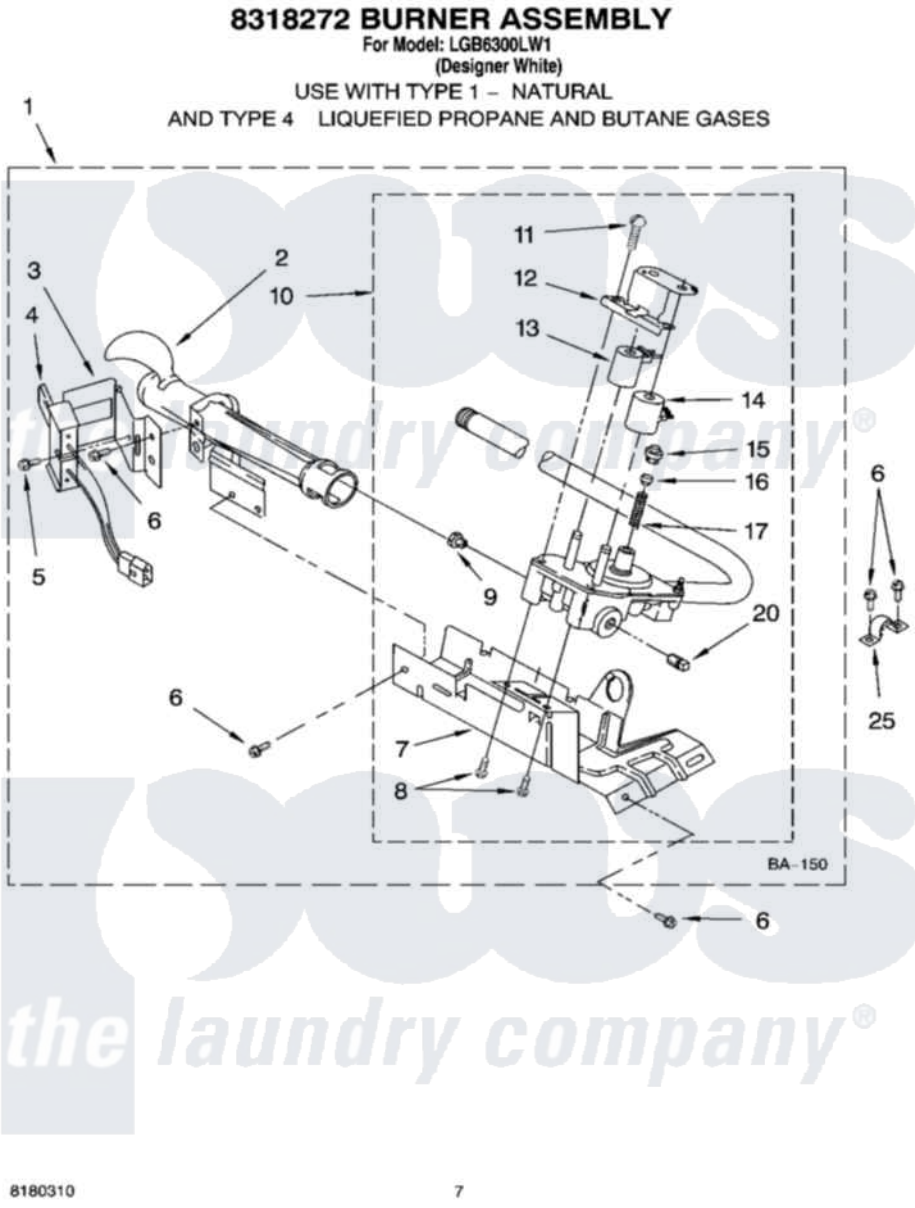

8180310 7

Whirlpool Residential Whirlpool LGB6300LW1 Dryer Parts Parts Diagram 04 - 8318272 BURNER ASSEMBLY
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8318272	W10465748		Burner-Gas
2	688617	693140		Burner
3	694298			Bracket, Ignitor
4	686590	279311		Ignitor
5	3393909			Screw, 8-32 X 7/8
6	343641	681414		Screw, 10AB X 1/2
7	693986			Base, Burner
8	3387057			Screw, 10-16 X 1/2 Orifice, Burner
9	234826			Orifice, Burner Type 1
"	229742			Orifice, Burner
"	234868			Orifice, Burner
10	8318277	W10337269		Valve-Gas
11	694421			Screw, Bracket Mounting
12	694538			Bracket, Shunt
13	694540			Coil, 60 Hz
14	694539			Coil, 60 Hz

15	694424			Leak, Limiter
16	694423			Screw, Regulator Adjustment
17	694422			Spring, Regulator
20	239822	W10295523		Plug, Pipe
25	341029			Clamp, Pipe Door Spring
"	694572	49572A		Conversion Kit To Type L.p.g.f
"	N/A		Not Available	FOLLOWING PARTS NOT ILLUSTRATED

the laundry company®
the laundry company®
the laundry company®