Maytag LDE8824ACM 03 - CONTROL PANEL (LDE8824ACM & LDG8824AAM)

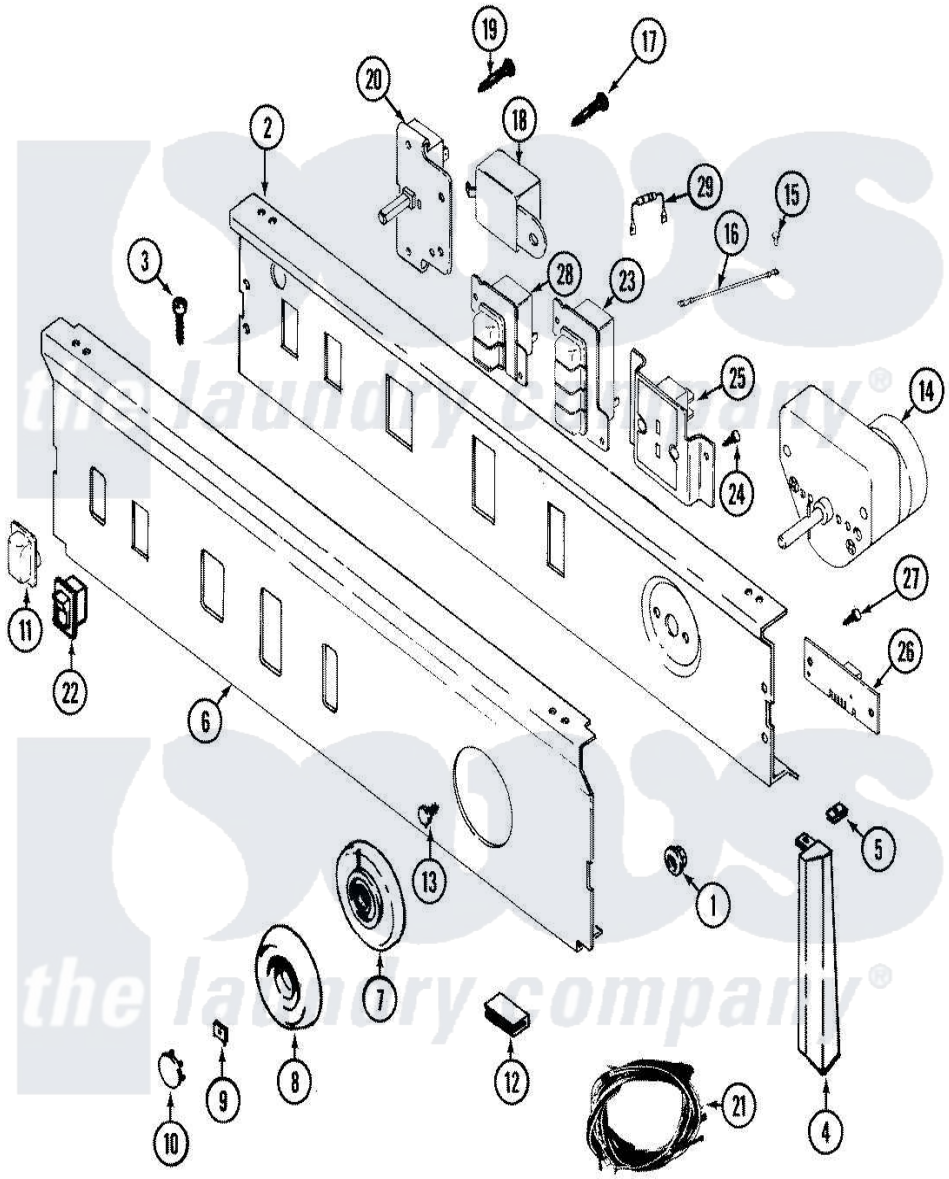

Maytag Residential Maytag LDE8824ACM Dryer Parts Parts Diagram 03 - CONTROL PANEL (LDE8824ACM & LDG8824AAM)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	214872			Palnut, End Cap Note: Nut, Lamp Holder
2	33001265			Plate, Support
3	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
4	22001567			Cap, End
"	22001566	22001293		End Cap, Control Panel
"	22001293			End Cap, Control Panel
"	22001292	22001567		Cap, End
5	214894			Fastener, End Cap
6	33001461		Not Available	PANEL, CONTROL (ALM)
7	33001372		Not Available	SKIRT, TIMER DIAL (ALM)
8	33001282	33002325		Knob Assembly
9	312273			Nut, Control Knob
10	216424		Not Available	CAP, KNOB (ALM)

11	33001450	33001371		Button, Push-To-Start
12	214897			Pad, Control Panel
13	315317	488234		Screw 8-32 X 1/4
14	33001035			Timer
15	210186	3370225		Screw
16	204807			Ground Wire, Supp. Plte To Top Cover
17	315317	488234		Screw 8-32 X 1/4
18	Y308205	33001623		Buzzer, Non-Adjustable
19	315317	488234		Screw 8-32 X 1/4
20	33001232		Not Available	SWITCH, PUSH TO START
21	33001532			Harness, Wire
"	33001336		Not Available	WIRE HARNESS, MAIN
22	22001282	22001135		Switch, Rocker
23	33001451		Not Available	SWITCH, TEMP. (4 POS.-ALM)
24	315317	488234		Screw 8-32 X 1/4
25	33001045		Not Available	DISPLAY, DRYNESS ASY. (ALM)
26	33001212			Board, Control-Moisture Sensor
27	315317	488234		Screw 8-32 X 1/4
28	33001455	33001219		Switch, Push Button
29	33001104			Resistor
30	16000327		Not Available	GUIDE, QUICK REF. - MAYTAG
"	33001260		Not Available	MANUAL, USE & CARE

the laundry company®