Whirlpool LTG5243DT4 02 - DRYER FRONT PANEL AND DOOR PARTS

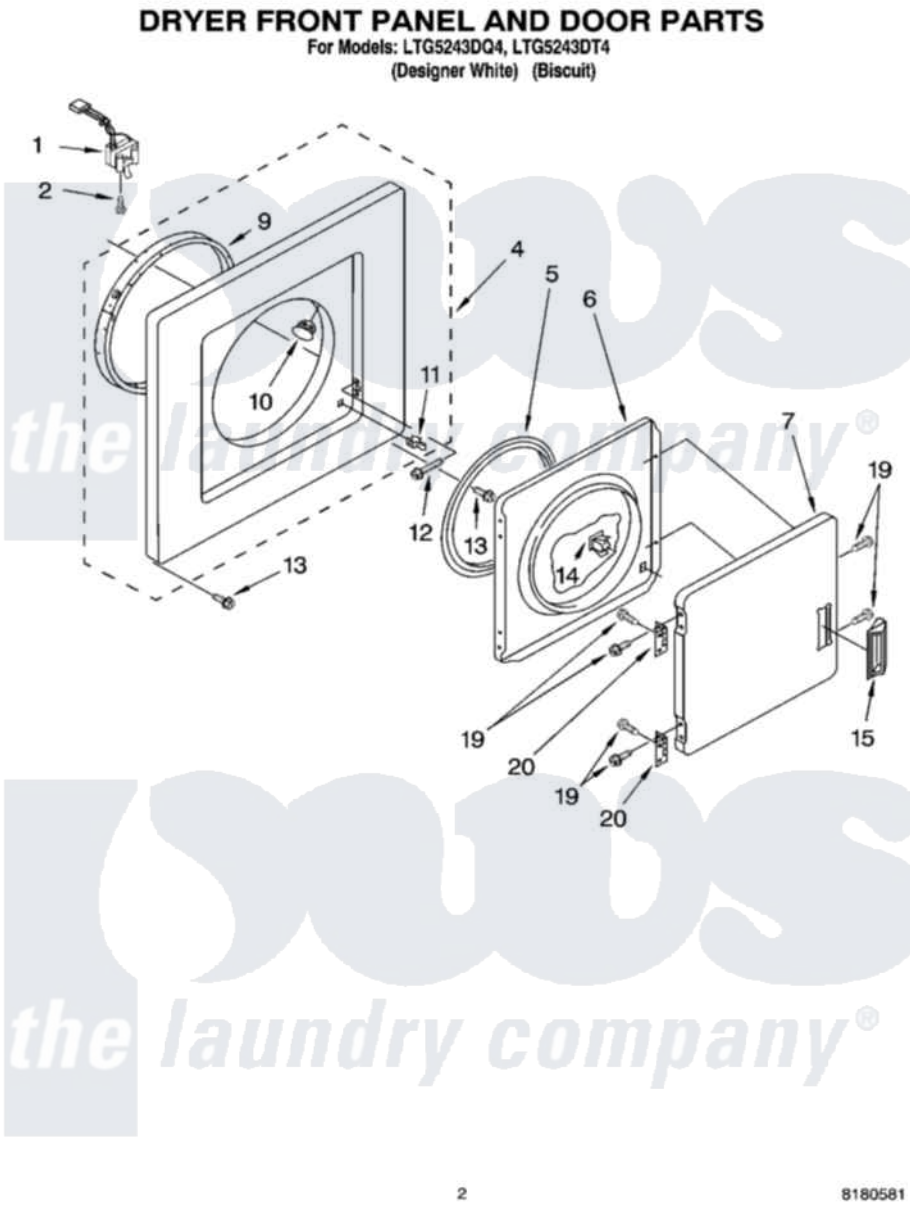

Whirlpool Residential Whirlpool LTG5243DT4 Washer/Dryer Parts Parts Diagram 02 - DRYER FRONT PANEL AND DOOR PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3406108			Door Switch
2	697773	3395530		Screw
4	692619	285314		Panel
"	3978587	285836		Panel
5	3390734			Seal, Door
6	695656	280077		Door
7	348205			Door, Front
"	3978598			Door, Front
9	8066123	279264		Air Channel Box
10	685203	279220		Clip
11	696144	279570		Latch
12	3390663	681414		Screw, 10AB X 1/2
13	343641	681414		Screw, 10AB X 1/2
14	3389441			Door Catch Assembly
15	686711			Handle, Door
"	3978592			Handle, Door

19	694091	Trim, Side Right Hand
20	348023	Hinge And Pin Assembly

the laundry company®
the laundry company®
the laundry company®