Whirlpool WED4890XQ1 01 - TOP AND CONSOLE PARTS

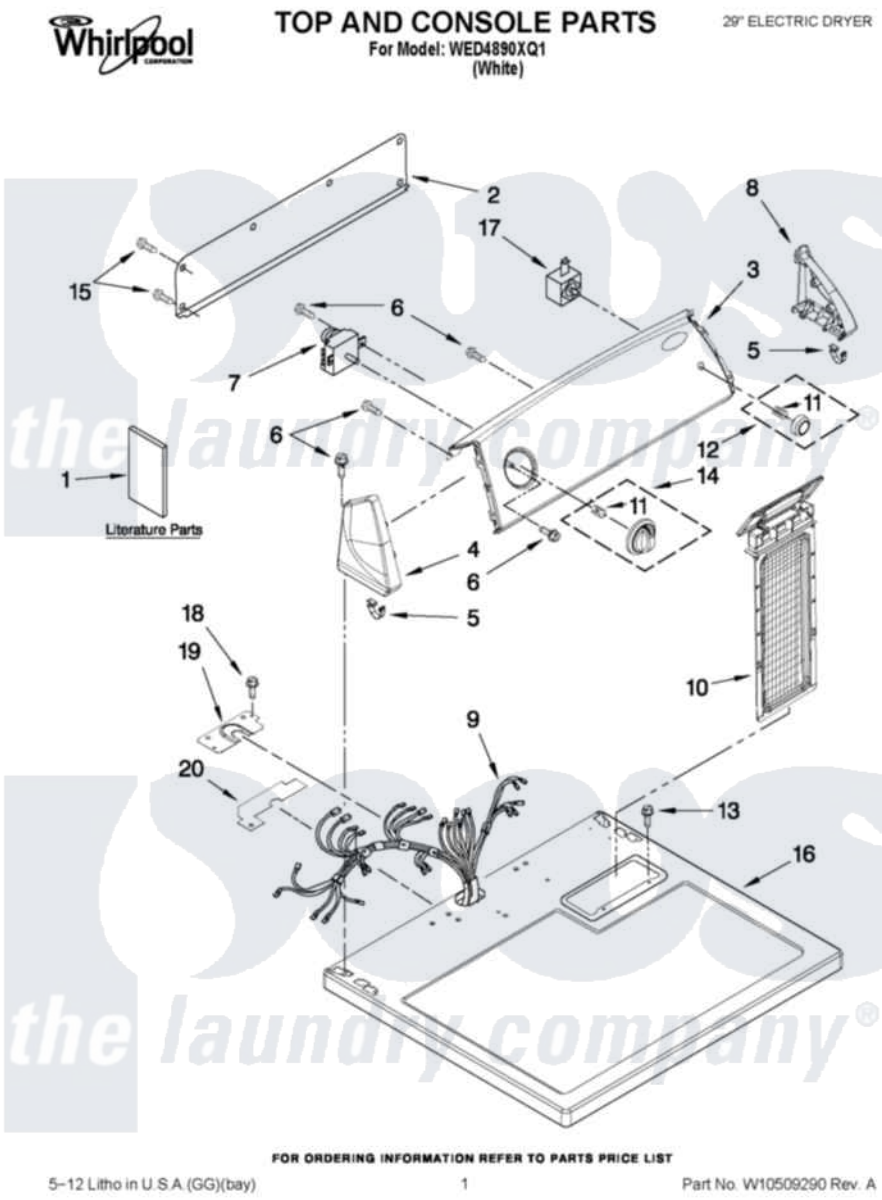

Whirlpool Residential Whirlpool WED4890XQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096986		Not Available	GUIDE, USE & CARE
"	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10185978		Not Available	WIRING DIAGRAM
2	W10103406			Panel, Rear Console
3	W10486248		Not Available	PANEL, CONSOLE & CONTROL BRACKET ASSEMBLY
4	8566035	8565957		Cap, End
5	8312709			Clip-Console
6	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
7	W10185976			Timer, 60 Hz
8	8566032	8565954		Cap, End
9	W10470711			Harness, Wiring
10	8557861			Screen, Lint
11	8536939			Clip, Knob
12	W10034770			Knob, Push-To-Start

13	688983	487240	Screw, For Mtg. Service Capacitor
14	W10034750		Timer Knob Assembly
15	693995		Screw, Hex Head
16	8559800	8563663	Top
17	3977456		Switch, Push-To-Start
18	359625	487240	Screw, For Mtg. Service Capacitor
19	W10112578		Harness, Bracket
20	W10112603		Seal, Harness

the laundry company®
the laundry company®
the laundry company®