

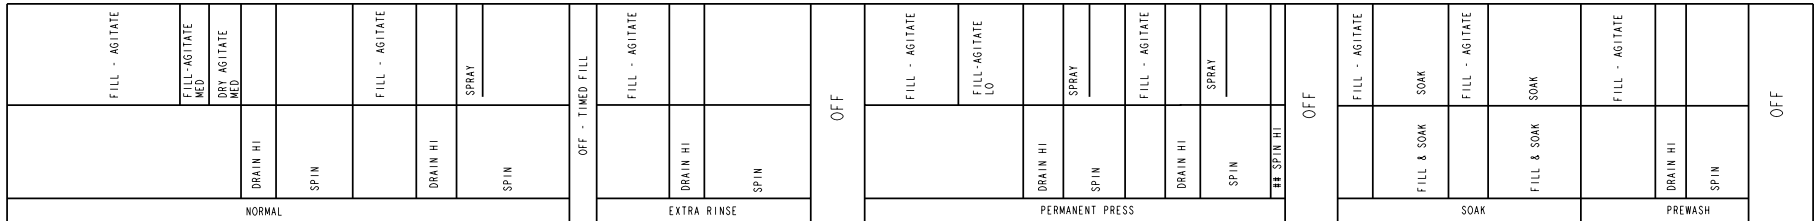


5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125

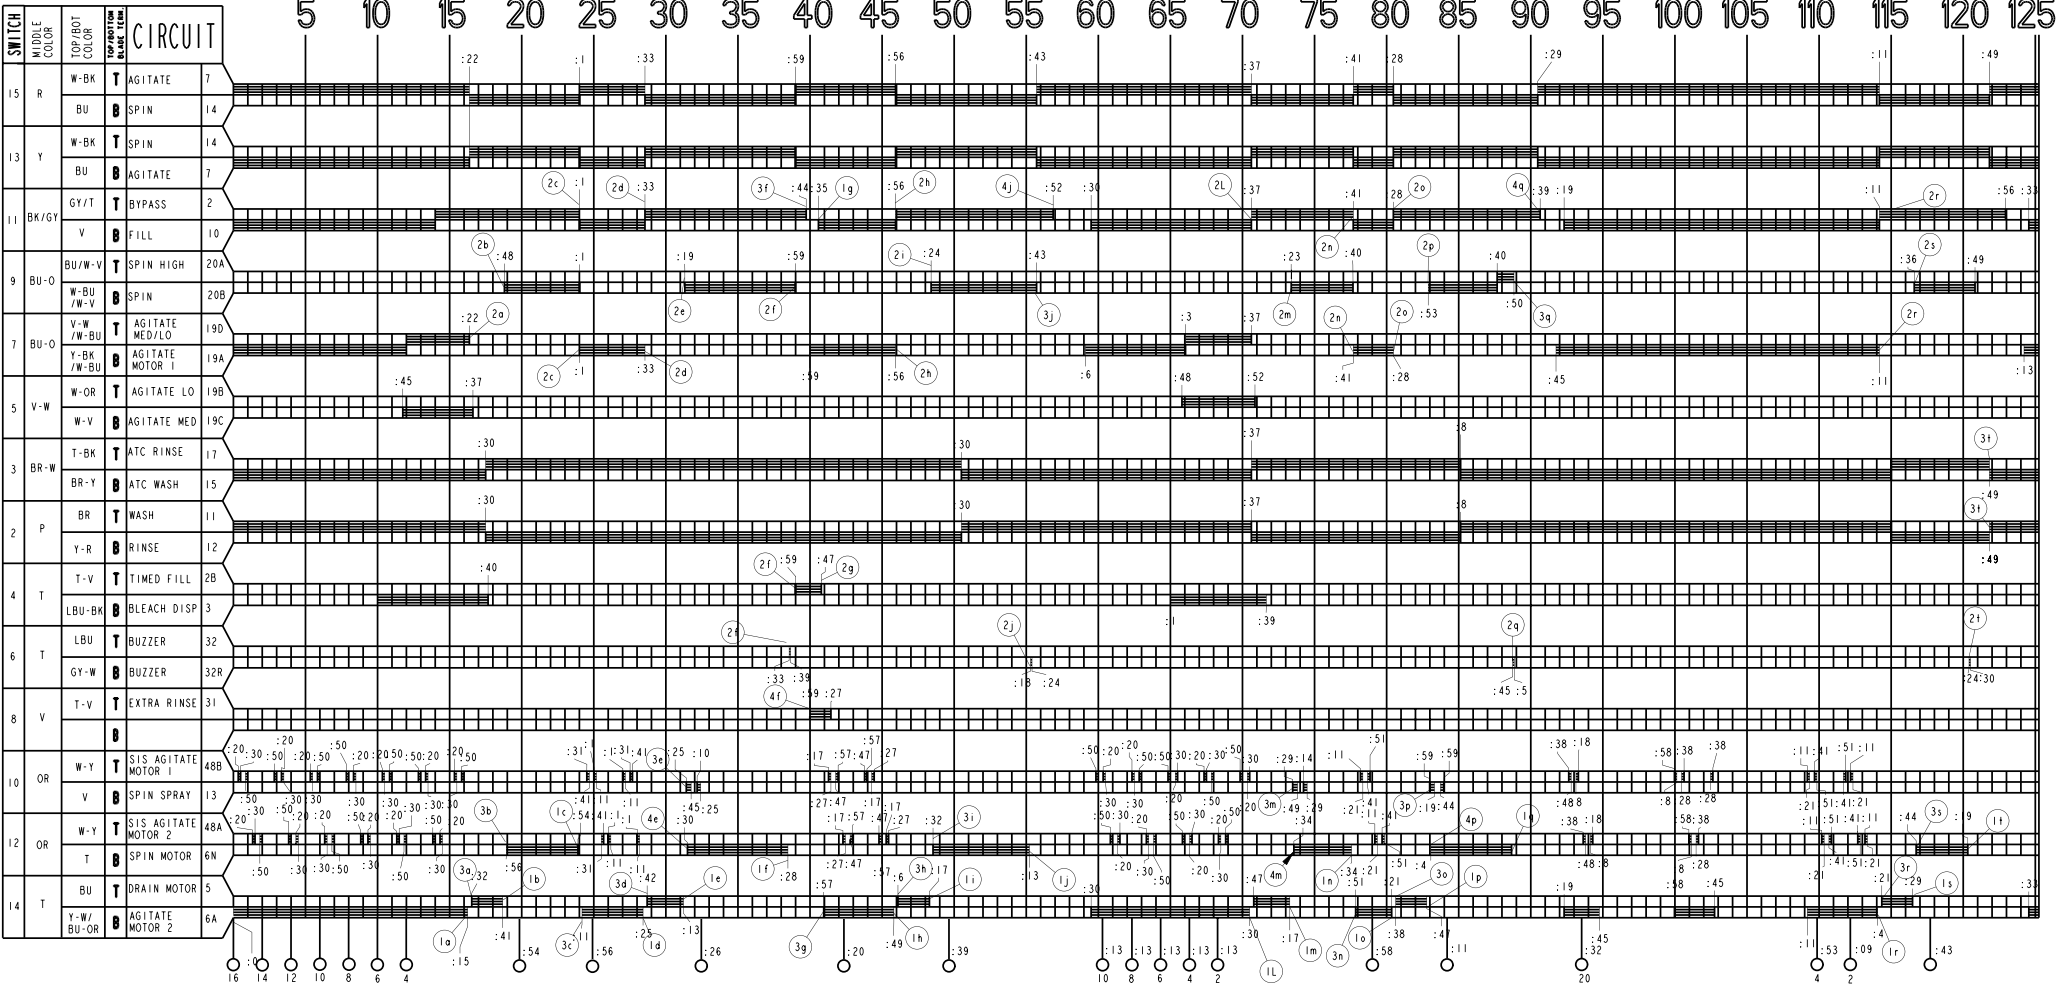

ENGLISH	FRENCH	SPANISH
AGITATE	AGITER	AGITAN
BLEACH	BLANCHIMENT	BLANQUEO
BUZZER	VIBEUR	SEÑAL SONORA
BYPASS	DERIVATION	PUNENTE
DRAIN	VIDENT	DRENAJ
EXTRA RINSE	RINCAGE DE PLUS	ADICIONAL ACLARACION
FILL	REMPLISSAGE	LLENAR
HIGH	HAUT	ALTO
INT AGITATE	AGITER INTERMITTENT	INTERMITENTE AGITE
LO	LENT	BAJO
MED	MED	MEDIA
MOTOR	MOTEUR	MOTOR
NORMAL	NORMALE	NORMAL
PERMANENT PRESS	SYNTHETIQUES	PERMANENT PRENSA
PREWASH	PRE LAVAGE	PRE COLADA

ENGLISH	FRENCH	SPANISH
RINSE	RINCAGE	ACLARACION
SOAK	IMBIBERT	REMOJAN
SPIN	ESSORAGE	VUELTA
SPRAY	CICLAGE	AEROSOL
WASH	LAVAGE	COLADA
TIMED FILL	SYNCHRONISES REMPLISSAGE	SINCRONIZADO TERRAPLEN

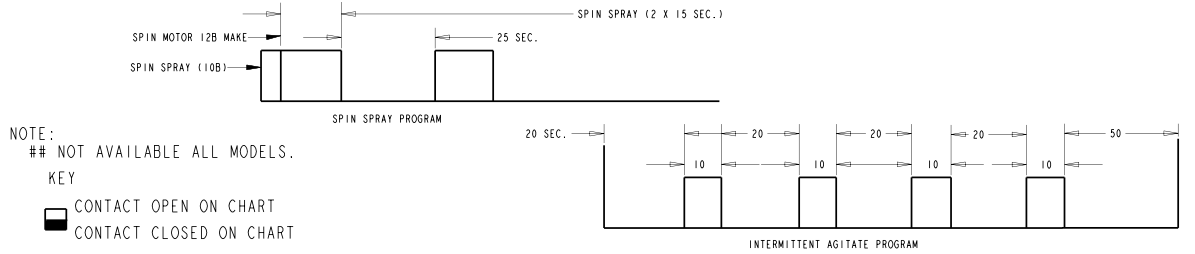

LEGEND / LEGENDE / LEYENDA

- TIMER SWITCH
INT. DU PROGRAMMEUR
INTERRUPTOR DEL TEMPORIZADOR
- INT. COMP CONNECTION
CONEXION INTERNE DE COMPOSANT
CONEXION INTERNO DEL COMPONENTE
- HARNESS WIRING
FAISCEAU DE FILS
CABLEADO DEL HARNESS
- HARNESS CONNECTION
CONEXION DE FILS
CONEXION DEL HARNESS
- TERMINAL CONNECTION
CONEXION DE LA BORNE
TERMINAL CONEXION
- WASH RINSE / RINCAGE DE LAVAGE
/ ACLARACION DE LA COLADA
- DRIVE MOTOR / MOTEUR/ IMPULSOR MOTOR
 - L** LOW / LENT / BAJO
 - M** MEDIUM / SUPPORT / MEDIA
 - H** HIGH / HAUT / ALTO
 - S** START / DEMARRANT / EMPIEZAN
- HOT VALVE
SOUPAPE D'EAU CHAUDE
CALIENTE VALVULA
- COLD VALVE
SOUPAPE D'EAU FROIDE
FRIA VALVULA
- ATC SENSOR / CAPTEUR D'ATC / SENSOR DEL ATC
- ATC SWITCH / INTERRUPTOR ATC / CONTACTEUR ATC
- TSC** TEMPERATURE SWITCH CHART
DIAGRAMME DE COMMUTATEUR DE LA TEMPERATURE
CARTA DE INTERRUPTOR DE LA TEMPERATURA

- WATER LEVEL SWITCH
INTERRUPTEUR NIVEAU D'EAU
INTERRUPTOR DEL NIVEL DEL AGUA
- FULL / PLEIN / POR COMPLETO
- EMPTY / VIDE / VACIO
- LID SWITCH
INTERRUPTEUR DU COUVERCLE
INTERRUPTOR DE LA TAPA
- TIMER MOTOR
MOTEUR DE LA MINUTERIE
MOTOR DEL TEMPORIZADOR
- CENTRIFUGAL SWITCH
CONTACTEUR
CENTRIFUGE
CENTRIFUGO
INTERRUPTOR
- CABINET GROUND
TERRE DU CHASSI
CABIN MOLIDA
- CAPACITOR / CONDENSATEUR /
CONDENSADOR
- FUSE / FUSIBLE / FUSIBLE
- BUZZER / VIBREUR /
SENAL SONORA
- BLEACH DISPENSE CIRCUIT
NOT USED ALL MODELS
- L'AGENT DE BLANCHIMENT
DISTRIBUENT LE CIRCUIT NON
UTILISETOUTS LES MODELS
- EL BLANQUEO DISPENSA EL
CIRCUITO NO USADO
TODOS LOS MODELOS


TIMER KNOB PUSH OFF ALL TIMER SWITCHES OPEN / BOUTON DE LA MINUTERIE EBFONCE (ARRET)-TOUS LES AUTRES COMMUTATEURS DE LA MINUTERIE OUVERTS / PERILLA DEL TEMPORIZADOR OPRIMIDA (APAGADO) -TODOS LOS INTERRUPTORES DEL TEMPORIZADOR ABIERTOS

MANUFACTURED UNDER ONE OR MORE OF THE FOLLOWING US PATENTS:
4542941, 4555919, 4582295, 4572586, 4618193, 4624111, 4643350, 4646545, 4658844, 4658847, 4692987, 4693995, 4697293, 4700564, 4709945, 4715401, 4719769, 4754622, 4759202, 4774822, 4779493, 4782544, 4784666, 4785643, 4793626, 4807452, 4809524, 4835591, 4854559, 4856303, 4879988, 4888965, 4890465, 4891959, 4891979, 4904326, 4945516, 4969341, 4972134, 4971394, 4986093, 4987627, 5000016, 5031427, 5033277, 5074003, 5075513, 5112542, 5130624, 5150586, 5154011, 5166586, 5167722, 5172513, 5171659, 5191661, 5191668, 5191669, 5193361, 5199122, 5199261, 5200884, 5205141, 5219370, 5233156, 5249444, 5255844, 5257901, 5259217, 5269160, 5271251, 5291403, 5305485, 5312138, 5314044, 5344637, 5345792, 5345793, 5359744, 5373715, 5480016, 5482455, 5504955, 5507052, 5515665, 5582939, 5582199, 5651278, 5671494, 5765404, 5784902, 5791167, 5836180, 5852942, 5876565, 5878680, 5882490, 5916546, 6065171, 6070262, 6105403, 6115863, 6125490, 6165774, 6212722, 6227013, 6227014, 6291866, 6317645, 6383263, 6383872, 6430971, 6505370, 0314263, 0375390, 0381140, 0423140, 0426266, 0469572, 0459844, 0463631, 0465308

FABRIQUE SOUS UN OU PLUSIEURS DES BREVETS CANADIENS SUIVANTS:
1238410, 1233039, 1233658, 1282957, 1281338, 1288964, 1288988, 1301469, 1308467, 1313770, 2018975, 2022266, 2043353, 2058969, 2086151, 016618

MANUFACTURADO BAJO UNA O MAS DE LAS SIGUIENTES PATENTES MEXICANAS:
159846, 159863, 161744, 163172, 164305, 164407, 165938, 165992, 170221, 174138, 174476, 174483, 177764, 177766, 181185, 182183, 182396, 182632, 187728, 189682, 189768, 192502, 192503, 198393, 199844, 205519, 211042

PART NO.
REV
NUMERO DE PIECE
REVISION
8565442
A

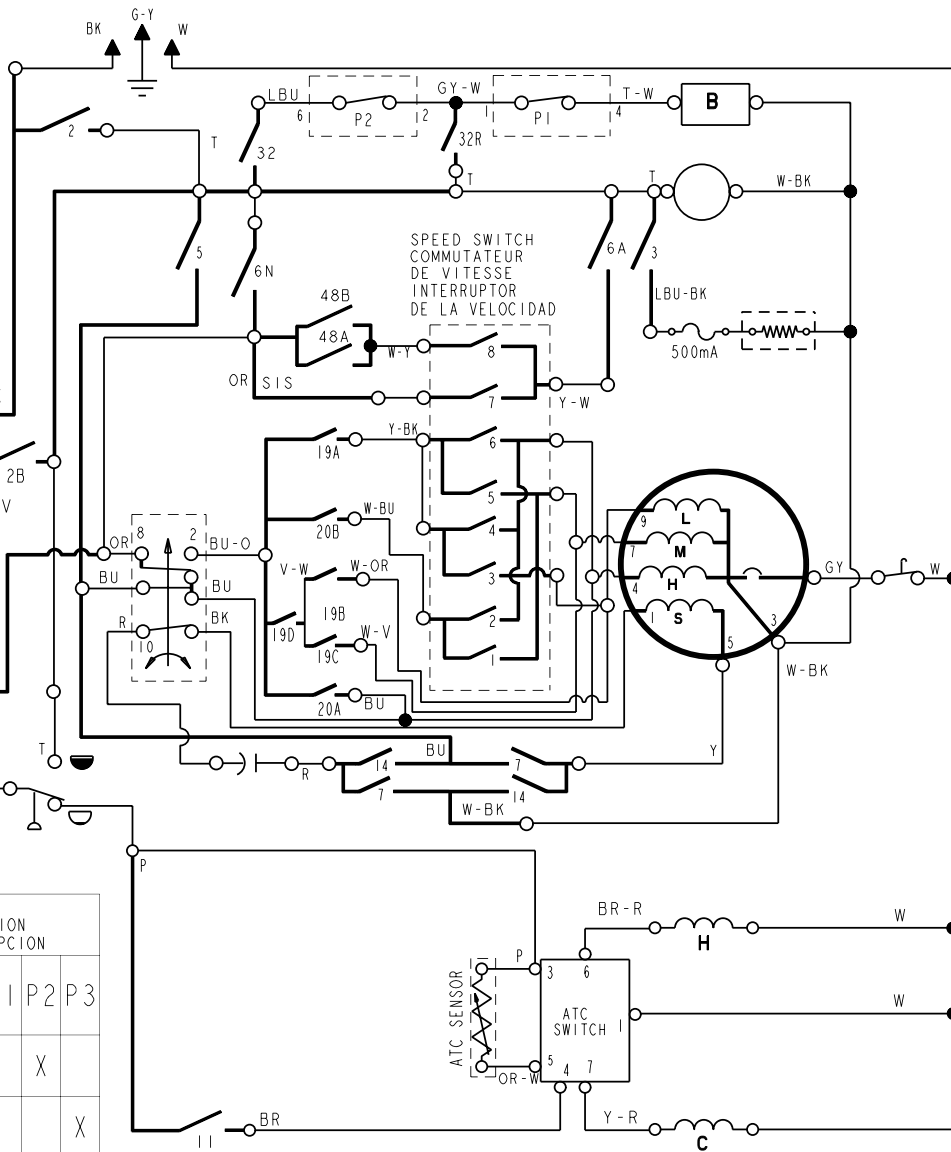

FABRIC SELECT MOTOR SPEED SWITCH COMMUTATEUR DE VITESSE DE MOTEUR CHOSI DE TISSU INTERRUTOR DE LA VELOCIDAD DEL MOTOR SELECTO DE LA TELA										
FABRIC SELECT DIAL CADRAN CHOSI DE TISSU DIAL SELECTO DE LA TELA	MOTOR SPEED VITESSE DE MOTEUR VELOCIDAD DEL MOTOR		CLOSED SWITCHES FERME COMMUTATEUR CERRADO INTERRUPTOR							
	AGITATE AGITENT AGITAN	SPIN ROTATION VUELTA	S1	S2	S3	S4	S5	S6	S7	S8
HANDWASH / WOOL LAVAGE DE MAIN/LAINES COLADA DE LA MANO/LANAS	INT LOW INT LENT INT BAJO	MEDIUM SUPPORT MEDIA	X		X					X
DELICATE SENSIBLE DELICADO	LOW LENT BAJO	MEDIUM SUPPORT MEDIA	X		X					X
KNIT/BLENDS HACEN PUNTO/MELANGES TRICOTENT/MEZCLAS	MEDIUM SUPPORT MEDIA	MEDIUM SUPPORT MEDIA	X			X	X		X	X
QUICK WASH RAPIDE LAVAGE RAPIDA COLADA	MEDIUM SUPPORT MEDIA	HIGH HAUT ALTO		X		X	X		X	X
COTTON/HEAVY DUTY COTON RESISTANT ALGODON RESISTENTE	HIGH HAUT ALTO	HIGH HAUT ALTO		X		X		X	X	X
CASUAL/PERMANENT PRESS OCCASIONAL/SYNTHETIQUES OCASIONAL/PERMANENTE PRENSA	HIGH HAUT ALTO	MEDIUM SUPPORT MEDIA	X			X		X	X	X

OPTION SWITCH CHART DIAGRAMME DE COMMUTATEUR D'OPTION CARTA DEL INTERRUPTOR DE LA OPCION				
EXTRA RINSE SUPPLEMENTAIR RINCAGE ADICIONAL ACLARACION	BUZZER VIBREUR SENAL SONORA	P1 P2 P3		
		1	2	3
OFF ARRET DE	OFF ARRET DE		X	
ON SUR EN	OFF ARRET DE			X
OFF ARRET DE	ON SUR EN	X	X	
ON SUR EN	ON SUR EN	X		X

TSC			
POS	WASH / RINSE	TEMP	TEMP
1	W/W	WARM	70°
2	H/C	HOT	COLD
3	W/C	WARM	COLD
4	C/C	COLD	COLD
5	W/C	93°	COLD
6	C/C	70°	COLD
7	W/W	93°	70°

TSC 8578335			
POS	WASH / RINSE	TEMP	TEMP
1	C/C	COLD	COLD
2	C/C	70°	COLD
3	W/C	93°	COLD
4	H/C	110°	COLD