



120 SECONDS PER STEP

MACHINE FUNCTION		DELICATE									PERMANENT PRESS									PREWASH			NORMAL								
FILL-AGITATE WASH LOW		DRAIN									DRAIN									OFF			FILL - AGITATE WASH HI								
DRY - AGITATE		SPIN - SPIN LOW									SPIN LO									OFF			LO								
SPRAY		FILL - AGITATE RINSE LOW									FILL - AGITATE RINSE HI									OFF			DRY - AGITATE								
SPIN LOW		DRAIN									DRAIN									OFF			DRAIN								
SPRAY		SPIN LOW									SPIN LO									OFF			SPIN HI								
OFF		OFF									OFF									OFF			OFF								
SPRAY		SPRAY									SPRAY									OFF			SPRAY								
OFF		OFF									OFF									OFF			OFF								
SPIN HI		SPIN HI									SPIN HI									OFF			SPIN HI								
OFF		OFF									OFF									OFF			OFF								
SPRAY		SPRAY									SPRAY									OFF			SPRAY								
OFF		OFF									OFF									OFF			OFF								

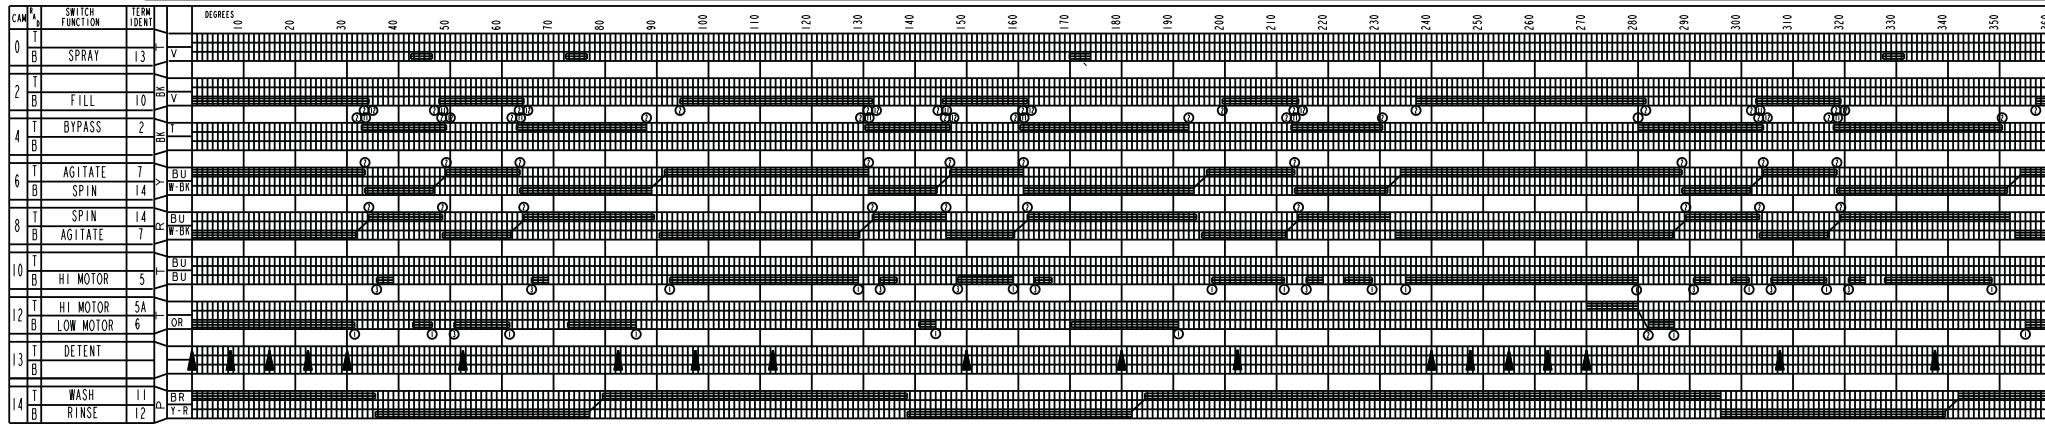


INTERVAL NUMBER	INTERVAL STEP	ACCUMULATED DEGREES
1	1.5°	0.00°
2	1.5°	1.50°
3	1.5°	3.00°
4	1.5°	4.50°
5	1.5°	6.00°
6	1.5°	7.50°
7	1.5°	9.00°
8	1.5°	10.50°
9	1.5°	12.00°
10	1.5°	13.50°
11	1.5°	15.00°
12	1.5°	16.50°
13	1.5°	18.00°
14	1.5°	19.50°
15	1.5°	21.00°
16	1.5°	22.50°
17	1.5°	24.00°
18	1.5°	25.50°
19	1.5°	27.00°
20	1.5°	28.50°
21	1.5°	30.00°
22	1.5°	31.50°
23	1.5°	33.00°
24	1.5°	34.50°
25	1.5°	36.00°
26	1.5°	37.50°
27	1.5°	39.00°
28	1.5°	40.50°
29	1.5°	42.00°
30	1.5°	43.50°
31	1.5°	45.00°
32	1.5°	46.50°
33	1.5°	48.00°
34	1.5°	49.50°
35	1.5°	51.00°
36	1.5°	52.50°
37	1.5°	54.00°
38	1.5°	55.50°
39	1.5°	57.00°
40	1.5°	58.50°
41	1.5°	60.00°
42	1.5°	61.50°
43	1.5°	63.00°
44	1.5°	64.50°
45	1.5°	66.00°
46	1.5°	67.50°
47	1.5°	69.00°
48	1.5°	70.50°

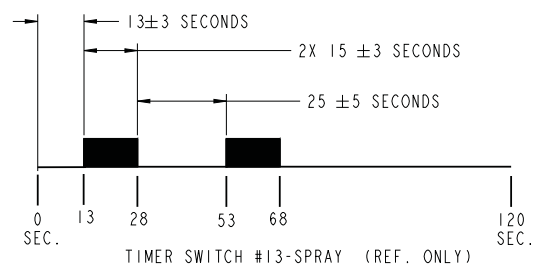

LEGEND	LEGENDE	LEYENDA	LEGEND	LEGENDE	LEYENDA
1/2 TUB DRAIN	1/2 COVETTE VID	DREN DE LA TINA DEL 1/2	SWITCH FUNCTION	COMMUTEZ LA FONCTION	CAMBIE LA FONCTION
SPRAY	GICLAGE	AEROSOL	CAM	CAME	LEVA
BYPASS	DERIVATION	PUENTE	OFF	ARRET	DE
FILL	REPLISSAGE	LLENAN	COOL DOWN	REFROIDISSEZ	REFRESO 'UESE ABAJO
AGITATE	AGITER	AGITAN	SPIN LOW	ROTATION BASSE	VUELTA BAJA
SPIN	ESSORAGE	VUELTA	RINSE LOW	RINCAGE BAS	ACLARACION BAJA
HI MOTOR	MOTEUR RAPIDE	ALTO MOTOR	WASH LOW	LAVAGE BAS	COLADA BAJA
LOW MOTOR	MOTEUR BAS	BAJO MOTOR	WASH HI	LAVAGE HAUT	COLADA ALTA
WARM/COLD	CHAUDE/FROIDE	CALIENTESE/FRIO	SPIN HI	ROTATION HAUTE	VUELTA ALTA
WASH	LAVAGE	COLADA	CASUAL	OCCASIONEL	OCASIONAL
RINSE	RINCAGE	ACLARACION	QUICK	VITE	APRISA
DRAIN	VIDENT	DRENAN	NORMAL	NORMALE	NORMAL
DRY/AGITATE	SECHER/AGITER	SECO/AGITAN	TERMINAL IDENTIFIER	TERMINAL IDENTIFICATEUR	TREMINAL IDENTIFICADOR
PRE WASH	PRE LAVAGE	PRE COLADA	STEP	ETAPE	PASO DE PROGRESION
SOAK	IMBIBENT	REMOJAN	SECONDS	SECONDES	SEGUNDOS
DELICATE	SENSIBLE	DELICADO			
PERMANENT PRESS	SYNTHETIQUES	PERMANENTE PRENSA			
REGULAR	REGULIER	REGULAR			
HEAVY	LOURD	PESADO			
EXTRA RINSE	SUPPLEMENTAIRE RINCAGE	ADICIONAL ACLARACION			
MACHINE FUNCTION	FUNTION DE MACHINE	FUNCIÓN DE LA MAQUINA			


TIMER KNOB PUSH OFF ALL TIMER SWITCHES OPEN
 BOUTON DE LA MINUTERIE ENFONCE (ARRET)-TOUS LES
 AUTRES COMMUTATEURS DE LA MINUTERIE OUVERTS
 PERILLA DEL TEMPORIZADOR OPRIMIDA (APAGADO)-TODOS
 LOS INTERRUPTORES DEL TEMPORIZADOR ABIERTOS

TSC W10114118			
POS	WASH / RINSE	WASH TEMP	RINSE TEMP
1	C/C	COLD	COLD
2	C/C	70°	COLD
3	W/C	78°	COLD
4	H/C	105°	COLD

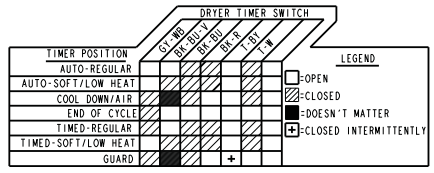

WASHER WIRING
 DIAGRAM /
 DIAGRAMME DE
 CABLAGE DE
 RONDELLE /
 (DIGRAMA)
 ELECTRICO DE
 LA ARANDELA

DRYER WIRING
 DIAGRAM /
 DIAGRAMME DE
 CABLAGE DE
 DESSICCATELLR /
 (DIGRAMA)
 ELECTRICO DEL
 SECADOR

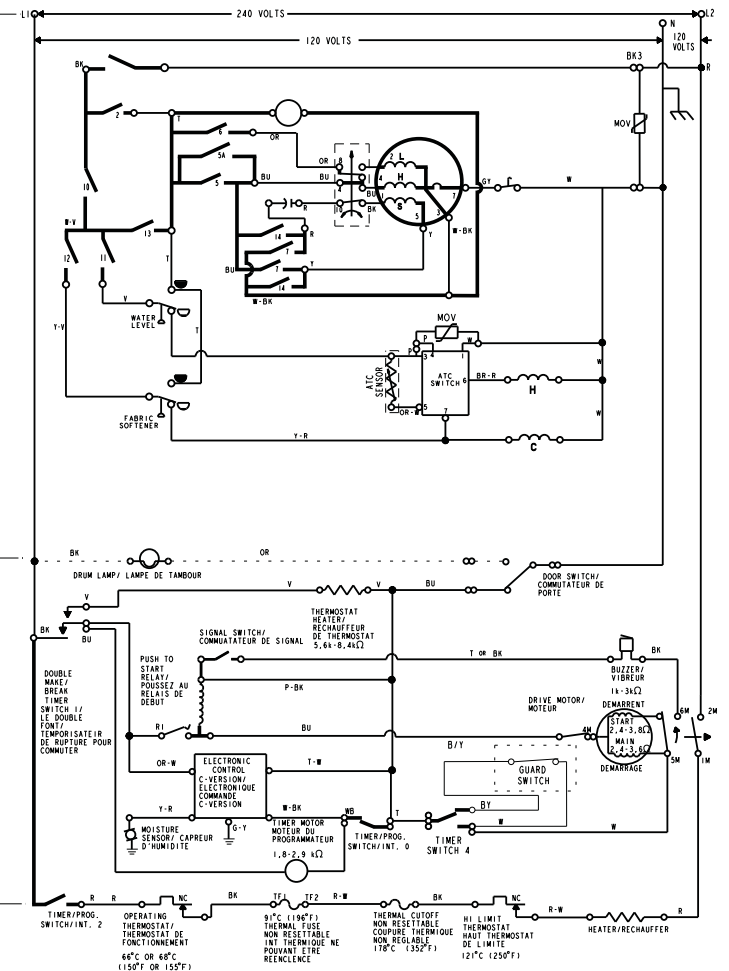

FSOU - ELECTRIC

LEGEND / LEGENDE / LEYENDA

- TIMER SWITCH / INT. DU PROGRAMMEUR / INTERRUPTOR DEL TEMPORIZADOR
- INT. COMP CONNECTION / CONNEXION INTERNE DE COMPOSANT / CONEXION INTERNO DEL COMPONENTE
- HARNESS WIRING / FAISCEAU DE FILS / CABLEADO DEL HARNESS
- HARNESS CONNECTION / CONNEXION DE FILS / CONEXION DEL HARNESS
- TERMINAL CONNECTION / CONEXION DE LA BORNE / TERMINAL CONEXION
- CABINET GROUND / TERRE DU CHASSI / CABIN MOLIDA
- TIMER MOTOR / MOTEUR DE LA MINUTERIE / MOTOR DEL TEMPORIZADOR
- LID SWITCH / INTERRUPTEUR DU COUVERCLE / INTERRUPTOR DE LA TAPA
- PUSH TO START / POUSSÉ AU DEBUT / EMPUJE AL COMIENZO
- WASH RINSE / RINCAGE DE LAVAGE / ACLARACION DE LA COLADA
- HOT VALVE / SOUPAPE D'EAU CHAUDE / CALIENTE VALVULA
- COLD VALVE / SOUPAPE D'EAU FROIDE / FRIA VALVULA

- TSC TEMPERATURE SWITCH CHART / DIAGRAMME DE COMMUTATEUR DE LA TEMPERATURE / CARTA DE INTERRUPTOR DE LA TEMPERATURA
- DOOR SWITCH / COMMUTATEUR DE PORTE / INTERRUPTOR DE LA PUERTA
- DRIVE MOTOR / MOTEUR / IMPULSOR MOTOR
- LOW/LENT/BAJO / MEDIUM/SUPPORT/MEDIA / HIGH/HAUT/ALTO / START/DEMARRENT/EMPIEZAN
- CENTRIFUGAL SWITCH / CONTACTEUR CENTRIFUGE / CENTRIFUGO INTERRUPTOR

- BUZZER / VIBREUR / ZUMBADOR
- WATER LEVEL SWITCH / INTERRUPTEUR NIVEAU D'EAU / INTERRUPTOR DEL NIVEL DEL AGUA
- FULL / PLEIN / POR COMPLETO
- EMPTY / VIDE / VACIO
- CAPACITOR / CONDENSATEUR / CONDENSADOR
- NOT USED ON ALL MODELS

- BELT / COURROIE / CORREA
- FLAME SENSOR / SENSEUR DE FLAMME / SENSOR DE LA LLAMA
- GAS BURNER / BRULEUR A GAZ / MECHERO DE GAS
- HEATER / RECHAUFFEUR / CALLENTADOR

- HOLD / PRISE / ASIMIENTO
- IGNITOR / ALLUMEUR / ENCENDIDO
- MAIN / PRINCIPAL / PRINCIPAL
- RESISTOR / RESISTANCE / RESISTOR
- HI LIMIT THERMOSTAT / HAUTE THERMOSTAT DE LIMITE / ALTA THERMOSTAT DEL LIMITE
- OPERATING THERMOSTAT / THERMOSTAT FONCTIONNANT / THERMOSTAT DE LIMITE
- THERMAL FUSE NOT RESETTABLE / FUSIBLE THERMIQUE NON RESETTABLE / FUSIBLE THERMAL NO RESTAURABLE
- THERMOSTAT HEATER / RECHAUFFEUR DE THERMOSTAT / CALENTADOR DEL THERMOSTAT

- SIGNAL SWITCH / COMMUTATEUR DE SIGNAL / INTERRUPTOR DE LA SERIAL
- THERMAL CUTOFF / COUPURE THERMIQUE / ATAJO THERMAL
- VALVE / SOUPAPE / VALVULA
- VOLTS / VOLTS / VOLTIOS