

Maytag MLG23PDFXW 14 - WIRING INFORMATION(ELEC)

Diagnostic Mode:

This mode is normally accessed by pressing the **LAUNDRY SERVICE** button on the control panel for 1 second while in any of the ready modes. Once through this sequence a diagnostic code is present, or which, DAS displays if operating with Maytag Data Acquisition system.

One step to diagnostic mode the settings display will flash, and certain functions will be cleared, cancelled, memory an error will be cleared, and diagnostic codes are cleared. If a diagnostic code persists on either of the machines, the fault must be corrected before the following cycle options are permitted.


Procedures to initiate cycle activity from diagnostic mode are as follows:

1. **Upper Dryer Field Diagnostic Cycle** - With the control panel in diagnostic mode, press the **PERMANENT PRESS** key pad. This cycle consists of seven minutes of heat and six minutes of cool down. The **UPPER DRYER** **WHITES & COLORS** key pad will interrupt the diagnostic cycle whenever it is pressed. The **UPPER DRYER** **DRYER DELICATES** key pad will cancel this cycle and exit the diagnostic mode.
2. **Lower Dryer Field Diagnostic Cycle** - With the control panel flashing, this cycle is entered by pressing the **LOWER DRYER**

Diagnostic Codes:

If the set up results in control and one of the diagnostic codes is present, the appropriate diagnostic code will be on the display.

- #1 - Upper dryer door sensor error (no contact) based on data to power the induction upper dryer heater. (No diagnostic code is normally cleared.)
- #4 - Lower dryer motor control circuit error (lower dryer cycles and lower dryer display disabled) (all diagnostic codes in normally cleared.)
- #6 - Blocked coils (air main) (no diagnostic code) (for reference recognition and error display disabled) (all diagnostic codes in normally cleared.)
- #7 - Voltage detected (lower) (no diagnostic code) (for reference recognition and error display disabled) (all diagnostic codes in normally cleared.)
- #8 - Upper dryer motor sense error (no contact) (no diagnostic code) (for reference recognition and error display disabled) (all diagnostic codes in normally cleared.)
- #14 - Lower dryer door sensor error (no contact) (no diagnostic code) (for reference recognition and error display disabled) (all diagnostic codes in normally cleared.)
- #15 - No incoming communication from installed data card reader in (reference to (page 2)) (no diagnostic code) (for reference recognition and error display disabled) (all diagnostic codes in normally cleared.)
- #17 - Lower dryer door sensor error (no contact) (no diagnostic code) (for reference recognition and error display disabled) (all diagnostic codes in normally cleared.)
- #18 - No incoming communication from installed data card reader in (reference to (page 2)) (no diagnostic code) (for reference recognition and error display disabled) (all diagnostic codes in normally cleared.)

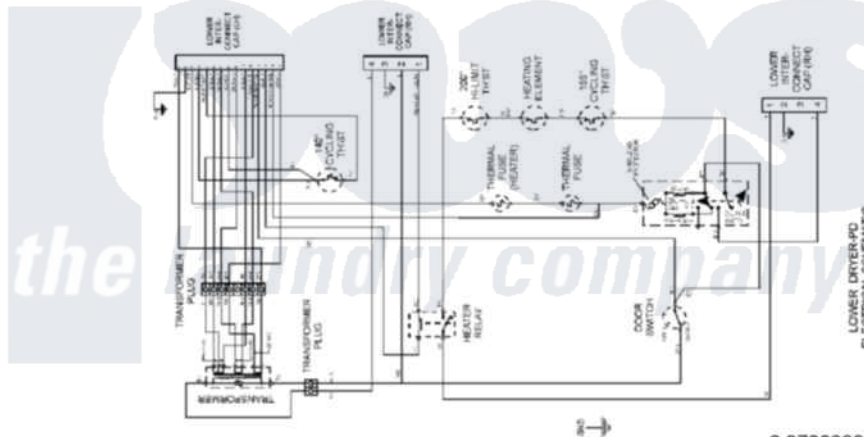

6 3720380

Maytag [Commercial Maytag MLG23PDFXW Dryer Parts](#) Parts Diagram 14 - WIRING INFORMATION(ELEC)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
001	NLA		Not Available	WIRING INFORMATION

