

FOR SERVICE TECHNICIAN'S USE ONLY

⚠ DANGER



Electrical Shock Hazard

Only authorized technicians should perform diagnostic voltage measurements.

After performing voltage measurements, disconnect power before servicing.

Failure to follow these instructions can result in death or electrical shock.

⚠ WARNING



Electrical Shock Hazard

Disconnect power before servicing.

Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.

Voltage Measurement Safety Information

When performing live voltage measurements, you must do the following:

- Verify the controls are in the off position so that the appliance does not start when energized.
- Allow enough space to perform the voltage measurements without obstructions.
- Keep other people a safe distance away from the appliance to prevent potential injury.
- Always use the proper testing equipment.
- After voltage measurements, always disconnect power before servicing.

IMPORTANT: Electrostatic Discharge (ESD) Sensitive Electronics

ESD problems are present everywhere. Most people begin to feel an ESD discharge at approximately 3000V. It takes as little as 10V to destroy, damage, or weaken the main control assembly. The new main control assembly may appear to work well after repair is finished, but a malfunction may occur at a later date due to ESD stress.

- Use an anti-static wrist strap. Connect wrist strap to green ground connection point or unpainted metal in the appliance

-OR-

Touch your finger repeatedly to a green ground connection point or unpainted metal in the appliance.

- Before removing the part from its package, touch the anti-static bag to a green ground connection point or unpainted metal in the appliance.
- Avoid touching electronic parts or terminal contacts; handle electronic control assembly by edges only.
- When repackaging main control assembly in anti-static bag, observe above instructions.

IMPORTANT SAFETY NOTICE — “For Technicians only”

This service data sheet is intended for use by persons having electrical, electronic, and mechanical experience and knowledge at a level generally considered acceptable in the appliance repair trade. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or seller cannot be responsible, nor assume any liability for injury or damage of any kind arising from the use of this data sheet.

Contents

| | | | |
|---|-----|---|-------|
| Diagnostic Guide..... | 2 | Manual Tests..... | 9 |
| Activating Service Diagnostic Test Modes..... | 2 | Troubleshooting Guide..... | 10-11 |
| Diagnostic Test Modes..... | 2-5 | Troubleshooting Tests..... | 12-18 |
| Customer Viewable Fault Codes..... | 5 | Main Control Connectors & Pinouts..... | 12 |
| Service Fault / Error Codes..... | 6-7 | Component Locations & Washer Specs..... | 19 |
| Automatic Tests..... | 8 | Wiring Diagram..... | 20 |

FOR SERVICE TECHNICIAN'S USE ONLY

DIAGNOSTIC GUIDE

Before servicing, check the following:


- Make sure there is power at the wall outlet.
- Has a household fuse blown or circuit breaker tripped? Was a regular fuse used? Inform customer that a time-delay fuse is required.
- Are both hot and cold water faucets open and water supply hoses unobstructed?
- All tests/checks should be made with a VOM (volt-ohm-milliammeter) or DVM (digital-voltmeter) having a sensitivity of 20,000 Ω per volt DC or greater.
- Resistance checks must be made with washer unplugged or power disconnected.
- **IMPORTANT:** Avoid using large diameter probes when checking harness connectors as the probes may damage the connectors upon insertion.
- Check all harnesses and connections before replacing components. Look for connectors not fully seated, broken or loose wires and terminals, or wires not pressed into connectors far enough to engage metal barbs.
- A potential cause of a control not functioning is corrosion or contamination on connections. Use an ohmmeter to check for continuity across suspected connections.

DIAGNOSTIC LED – MAIN CONTROL

A troubleshooting tool has been implemented onto the main control board—a diagnostic LED.

LED ON – The Control is detecting correct incoming line voltage and the processor is functioning.

LED OFF – Control malfunction. Perform TEST #1: Main Control, on page 12, to verify main control functionality.

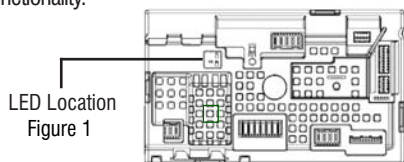

DIAGNOSTIC TEST MODES

These tests allow factory or service personnel to test and verify all inputs to the main control board. You may want to do a quick and overall checkup of the washer with these tests before going to specific troubleshooting tests.

ACTIVATING THE SERVICE DIAGNOSTIC TEST MODES

1. Be sure the washer is in standby mode (plugged in with all indicators off).

2. Perform the following sequence of movement using the cycle selector knob.

NOTE: AFTER RESET, sequence “a” through “e” must be completed within **6 seconds**.



RESET - Rotate cycle selector knob **counterclockwise** one or more clicks to clear sequence.



a. Rotate cycle selector knob **clockwise** one click and wait ½ second.



b. Rotate cycle selector knob **clockwise** one click and wait ½ second.



c. Rotate cycle selector knob **clockwise** one click and wait ½ second.



d. Rotate cycle selector knob **counterclockwise** one click and wait ½ second.



e. Rotate cycle selector knob **clockwise** one click.

- Successful activation of Diagnostic Test Modes will be indicated by all status LEDs (except for Lid Locked) flashing ON and OFF in half-second intervals.

NOTE: LED names may vary between makes and models.

Legend: = ON = OFF

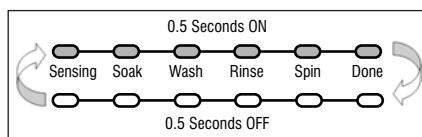


Figure 2 - Status LEDs flashing ON and OFF

- If the status LEDs do not display as described above, the sequence may not have been completed within 6 seconds. Repeat step 2 to ensure this was not the cause. If still unsuccessful, see Unsuccessful Entry, page 3.

FOR SERVICE TECHNICIAN'S USE ONLY

3. There are several accessible Diagnostic Test Modes shown in the chart below. To select the desired Mode of Operation, turn the cycle selector knob until the status LEDs or display (if exists) match the mode you desire to enter.

| DIAGNOSTIC TEST MODES | | | | | |
|--|-------------|-------|------|------|----------------------------|
| MODE (Status LED names may vary between makes and models) | STATUS LEDs | | | | DISPLAY (if exists) |
| | WASH | RINSE | SPIN | DONE | |
| Fault Code Display Mode | | | | 1 | 01 |
| Automatic Test Mode | | | 2 | | 02 |
| Manual Test Mode | | | 2 | 1 | 03 |
| Calibration Mode | 4 | | | | 04 |
| Sales Demo Mode | 4 | | | 1 | 05 |
| UI Test Mode | 4 | 2 | | | 06 |
| SW Version Display Mode | 4 | 2 | 1 | | 07 |
| Factory Diagnostics Mode | 8 | | | | 08 |
| Tachometer Verification | 8 | | | 1 | 09 |

4. Press the **START** button to enter desired mode of operation.

Refer to the following pages for detailed information on each mode of operation:

- **FAULT CODE DISPLAY MODE:** Page 3
 - **AUTOMATIC TEST MODE:** Page 4
 - **MANUAL TEST MODE:** Page 4
 - **CALIBRATION MODE:** Page 4
 - **SALES DEMO:** NOT FOR SERVICE USE*
 - **UI TEST MODE:** Page 4
 - **SW VERSION DISPLAY MODE:** Page 5
 - **FACTORY DIAGNOSTICS:** If accessed, washer must be recalibrated (see Calibration Mode).
 - **TACHOMETER VERIFICATION MODE:** Page 5
- * Press and hold the START key for 3 seconds to exit.

Unsuccessful Entry

If entry into diagnostic test mode is unsuccessful, refer to the following indication and action:

Indication: None of the LEDs or display turn on.

Action: Press POWER button to enter setting mode.

- If indicators come on, repeat steps 1 through 4 of Activating the Service Diagnostic Modes. **NOTE:** Rotating the dial too fast or too slow will affect entry.
- If no indicators come on after pressing the POWER button, go to TEST #1, page 12.

EXITING THE SERVICE DIAGNOSTIC TEST MODES

Press the POWER button at any time to exit diagnostic test modes.

Washer will exit diagnostic test modes after 5 minutes of inactivity or unplugging the power cord.

FAULT CODE DISPLAY MODE (Pgs 6–7)

To access fault/error codes, perform steps 1 and 2 of Activating the Service Diagnostic Test Modes. Turn the cycle selector knob until the status LEDs or display correspond as follows:



Press the **START** button to enter Fault Code Display Mode. The status LEDs will flash ON and OFF and "01" is displayed on the 7-segment (if display exists).

1. To view last 4 fault codes:

- Turn cycle selector knob clockwise to view fault codes in the order of most recent to oldest. (Refer to Fault/Error Code charts on pages 6 & 7.)

NOTE: A fault/error code will be removed from memory if it does not reoccur after 10 consecutive wash cycles.

2. To clear fault codes:

- Turn cycle selector knob until the status LEDs flash ON and OFF and "01" is displayed on 7-segment. (See figure 2, page 2).
- Press and hold **START** button for 3 seconds to clear all fault codes. Press **POWER** to exit Service Diagnostic Mode.

Fault/Error Code Display Method

Fault/error codes are displayed by alternating the state of the Status LEDs and display (if exists). All fault/error codes have an F# and an E#. The F# indicates the suspect System/Category and the E# indicates the suspect Component system.


If the Sensing, Prewash, and/or Soak LEDs are **ON**, the **Fault Number** is represented; if **OFF**, the **Error Number** is represented (see example below). The remaining LEDs (Wash, Rinse, Spin, and Done) represent the fault and error code in binary. (See Fault/Error Code Charts on pages 6 & 7 for more information.) = ON.

| Frame Number | STATUS LEDs | | | | | | Display (if exists) | Frame Timing (sec.) | |
|--------------|-------------|---------|------|------|-------|------|---------------------|---------------------|------|
| | SENSING | PREWASH | SOAK | WASH | RINSE | SPIN | | | DONE |
| 1 | F | | | 8 | 4 | 2 | 1 | F2 | 0.5 |
| 2 | | | | | | | | | 0.5 |
| 3 | | E | | 8 | 4 | 2 | 1 | E3 | 0.5 |
| 4 | | | | | | | | | 1.0 |
| Repeat... | | | | | | | | | |

FOR SERVICE TECHNICIAN'S USE ONLY

AUTOMATIC TEST MODE (Page 8)

To access Automatic Test Mode, perform steps 1 and 2 of Activating the Service Diagnostic Modes. Turn the cycle selector knob until the status LEDs or display correspond as follows:

- "Spin" LED On, "02" Displayed on 7-segment
- 


Press the **START** button to begin the automatic test. See page 8 for order of automatic test.

- Upon entering the automatic test mode, the washer will perform an automatic test with water cycles to check major washer functions.
- Pressing the **START** button will manually advance to the next step.
- Press the **POWER** button at any time to exit automatic test mode.

IMPORTANT: Lid must be closed with lid lock enabled to perform test.

MANUAL TEST MODE (Page 9)

To access Manual Test Mode, perform steps 1 and 2 of Activating the Service Diagnostic Modes. Turn the cycle selector knob until the status LEDs or display correspond as follows:

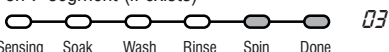- "Spin & Done" LEDs On, "03" Displayed on 7-segment (if exists)
- 

Press the **START** button to enter Manual Test Mode. See page 9 for manual test mode.

- Upon entering the manual test mode, the washer will have all outputs OFF.
- The cycle selector knob is used to select the output to be tested.
- The **START** button will activate/deactivate the selected output.
- When the selected output is activated, the corresponding status LEDs flash ON & OFF.
- Press the **POWER** button at any time to exit manual test mode.

IMPORTANT: As a safety feature, the lid must be closed with lid lock enabled to activate either Agitate or Spin Test.


NOTE: Multiple outputs may be activated simultaneously.

NOTE: Outputs left on will time out after 5 minutes.

CALIBRATION MODE

IMPORTANT: Calibration must be performed when any of the following components have been replaced: Main Control, Basket, Drive Assembly, Suspension, Motor, and Capacitor. Not performing calibration will result in poor wash performance.

To access Calibration Mode, perform steps 1 and 2 of Activating the Service Diagnostic Modes. Turn the cycle selector knob until the status LEDs or display correspond as follows:

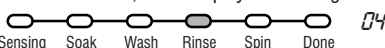- "Rinse" LED On, "04" Displayed on 7-segment
- 

Press the **START** button to begin washer calibration. All status LEDs will turn on.

- Do **NOT** interrupt calibration, disturb washer, or remove power; otherwise, calibration must be repeated.
- Lid must be down to perform test.
- Basket must be empty to perform test (no water or clothes).
- Calibration cycle runs for approximately 2-4 minutes. Cycle completes when door unlocks and washer enters standby mode.

UI TEST MODE

To access UI (User Interface) Test Mode, perform steps 1 and 2 of Activating the Service Diagnostic Modes. Turn the cycle selector knob until the status LEDs or display correspond as follows:

- "Rinse & Spin" LEDs On, "05" Displayed on 7-segment (if exists)



NOTE: Status LED names may vary between makes and models.

Press the **START** button to begin the UI test.

- Upon entering the UI test mode, all LEDs and display (if it exists) will be turned ON.
- Pressing the **START** button will turn on and off the display (if it exists) and all status LEDs, or toggle the state of each status LED independently. (Example: if 2 are on, and 3 are off, then 2 will be turned off and 3 turned on.)


FOR SERVICE TECHNICIAN'S USE ONLY

- When rotating the cycle selector knob, each click "indent" toggles the "Done" LED as well as the associated cycle LED.
- Press the **POWER** button at any time to exit UI test mode.
- Washer will exit UI test mode after 5 minutes of inactivity or unplugging the power cord.

SOFTWARE VERSION DISPLAY MODE

To access Software Version Display Mode, perform steps 1 and 2 of Activating the Service Diagnostic Modes. Turn the cycle selector knob until the status LEDs or display (if it exists) correspond as follows:

- "Rinse, Spin, and Done" LEDs On, "07" Displayed on 7-segment (if exists)




NOTE: LED names may vary between makes and models.

Press the **START** button to begin software display mode.

- Upon entering the software version display mode, the Major, Minor, and Test version numbers for the software are displayed by alternating the state of the status LEDs and display (if display exists) in one second intervals; the process repeats following a pause.

For example, if the s/w version is 02.01.07, the following sequence would be displayed:

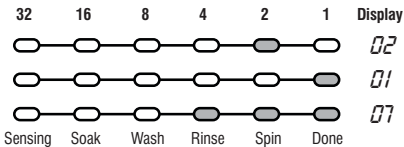


- Press the **POWER** button at any time to exit software version display mode.

TACHOMETER VERIFICATION MODE

To access Tachometer Verification Mode, perform steps 1 and 2 of Activating the Service Diagnostic Modes. Turn the cycle selector knob until the status LEDs or display (if exists) correspond as follows:

- "Wash and Done" LEDs On, "09" Displayed on 7-segment (if exists)



NOTE: LED names may vary between makes and models.

Press the **START** button to begin tachometer verification mode.

- Tachometer verification uses the status LEDs to represent the tachometer frequency (basket RPM).

For example, slowly turn the basket by hand; as the basket turns, the DONE, SPIN, RINSE, and WASH status LEDs will illuminate one at a time in a visually repeating cycle. The LED timing is derived from the tachometer signal itself.

- Press the **POWER** button at any time to exit tachometer verification mode.

CUSTOMER VIEWABLE FAULT CODES

There are 3 fault codes that may be visible to the customer indicated by the following Status LEDs:

- WASH LED ON (Long Fill Fault) – Refer to "No Fill, Long Fill" on page 7 for information.
- SPIN LED ON (Long Drain Fault) – Refer to "Long Drain" on page 7 for information.
- LID LOCK LED FLASHING CONTINUOUSLY (Lid Lock Fault) – Refer to "Lid Lock Fault" on page 6 for information.

FOR SERVICE FAULT AND ERROR CODES, CONTINUE TO PAGES 6 AND 7

FOR SERVICE TECHNICIAN'S USE ONLY

FAULT/ERROR CODES #1 — See page 3 to access Fault Code Display Mode. = ON

| DESCRIPTION | FAULT NUMBER | | | | | | | ERROR NUMBER | | | | | | | | | | | | | | | |
|---|-----------------------------|------|-------|------|------|---------|-----------------------------|--------------|-------|------|------|---------|--|--|--|--|--|--|--|--|--|--|--|
| | Status LEDs | | | | | | | Status LEDs | | | | | | | | | | | | | | | |
| | SENSING* PREWASH SOAK | WASH | RINSE | SPIN | DONE | DISPLAY | SENSING* PREWASH SOAK | WASH | RINSE | SPIN | DONE | DISPLAY | | | | | | | | | | | |
| Explanation & Recommended Procedure (Status LED names may vary between makes and models) | | | | | | | | | | | | | | | | | | | | | | | |
| NO FAULT CODES | On | 8 | 4 | 2 | 1 | F0 | Off | 8 | 4 | 2 | 1 | E0 | | | | | | | | | | | |
| OVER SUDS CONDITION DETECTED | | | | | | F0 | | | | 2 | | E2 | | | | | | | | | | | |
| Fault is displayed when Suds prevent the basket from spinning up to speed or the pressure sensor detects rising suds level. The main control will flush water in attempt to clear Suds. If the water flush is unable to correct the problem, this may indicate: <ul style="list-style-type: none"> • Not using HE detergent. • Excessive detergent usage. • Check pressure hose connection from tub to main control. Is hose pinched, kinked, plugged, or leaking air? • Mechanical friction on drive mechanism or basket. (Clothing between basket and tub.) | | | | | | | | | | | | | | | | | | | | | | | |
| HIGH WATER TEMPERATURE – RINSE CYCLE | | | | | | F0 | | | 4 | | | E4 | | | | | | | | | | | |
| Fault is displayed when washer detects water temperature 40.5° C (105° F) or higher during rinse cycle. <ul style="list-style-type: none"> • Hot water getting in. Make sure inlet hoses are connected correctly. • If hoses are installed properly, temperature thermistor may be stuck in low resistance range. • See TEST #5: Temperature Thermistor, page 17. | | | | | | | | | | | | | | | | | | | | | | | |
| OFF BALANCE LOAD DETECTED | | | | | | F0 | | | 4 | | 1 | E5 | | | | | | | | | | | |
| Fault is displayed when an off balance condition is detected. <ul style="list-style-type: none"> • Check for weak suspension. Basket should not bounce up and down more than once when pushed. • Clothing should be distributed evenly when loading. | | | | | | | | | | | | | | | | | | | | | | | |
| MAIN CONTROL FAULT | | | | | 1 | F1 | | | | | 1 | E1 | | | | | | | | | | | |
| Indicates a main control fault. <ul style="list-style-type: none"> • See TEST #1: Main Control, page 12. | | | | | | | | | | | | | | | | | | | | | | | |
| MOTOR CONTROL FAULT | | | | | 1 | F1 | | | | | 2 | E2 | | | | | | | | | | | |
| Indicates a fault of the motor control section of the main control. <ul style="list-style-type: none"> • See TEST #3b: Drive System – Motor, page 14. | | | | | | | | | | | | | | | | | | | | | | | |
| STUCK KEY | | | | 2 | | F2 | | | | | 1 | E1 | | | | | | | | | | | |
| One or more keys on the User Interface were actuated for 15 consecutive seconds. <ul style="list-style-type: none"> • Fault occurs during Diagnostic Test Mode if a stuck key is detected. • See TEST #4: Consoles and Indicators, page 16. | | | | | | | | | | | | | | | | | | | | | | | |
| MISMATCH OF MAIN CONTROL & UI | | | | 2 | | F2 | | | | 2 | 1 | E3 | | | | | | | | | | | |
| The User Interface identification does not match the expected value in the Main Control Board. <ul style="list-style-type: none"> • Fault occurs during Diagnostic Test Mode if a mismatch of main control and UI is identified. • See TEST #4: Consoles and Indicators, page 16. | | | | | | | | | | | | | | | | | | | | | | | |
| PRESSURE SENSOR FAULT | | | | 2 | 1 | F3 | | | | | 1 | E1 | | | | | | | | | | | |
| Fault is displayed when the Main Control detects an out of range pressure signal. <ul style="list-style-type: none"> • Check pressure hose connection from tub to main control. Is hose pinched, kinked, plugged, or leaking air? • See TEST #6: Water Level, page 17. | | | | | | | | | | | | | | | | | | | | | | | |
| INLET WATER TEMPERATURE FAULT | | | | 2 | 1 | F3 | | | | 2 | | E2 | | | | | | | | | | | |
| Fault is displayed when the Inlet Thermistor is detected to be open or shorted. <ul style="list-style-type: none"> • See TEST #5: Temperature Thermistor, page 17. | | | | | | | | | | | | | | | | | | | | | | | |
| LID SWITCH FAULT | | | 4 | | 1 | F5 | | | | | 1 | E1 | | | | | | | | | | | |
| Fault is displayed if lid is in locked state, but lid switch is open. <ul style="list-style-type: none"> • User presses START with lid open. • The main control cannot detect the lid switch opening and closing properly. • See TEST #8: Lid Lock, page 18. | | | | | | | | | | | | | | | | | | | | | | | |
| LID LOCK FAULT | | | 4 | | 1 | F5 | | | | 2 | | E2 | | | | | | | | | | | |
| Fault is displayed if Lid Lock has not moved into locked position or motor cannot be powered. <ul style="list-style-type: none"> • Lid is not closed completely due to interference. • Check for lock interference with lock striker. • Wash media buildup (detergent, lint, etc.) is preventing the lock mechanism from sliding. • Main control detects open lid switch when attempting to lock. • Main control cannot determine if lid lock is in a locked state. • See TEST #8: Lid Lock, page 18. | | | | | | | | | | | | | | | | | | | | | | | |

* If the Sensing, Prewash, and/or Soak LEDs are **ON**, the fault code is represented; if **OFF**, the error code is represented.

FOR SERVICE TECHNICIAN'S USE ONLY

FAULT/ERROR CODES #2 — See page 3 to access Fault Code Display Mode. = ON

| DESCRIPTION | FAULT NUMBER | | | | | | | ERROR NUMBER | | | | | | |
|---|-----------------------------|------|-------|------|------|---------|-----------------------------|--------------|-------|------|------|---------|--|--|
| | Status LEDs | | | | | | | Status LEDs | | | | | | |
| Explanation & Recommended Procedure (Status LED names may vary between makes and models) | SENSING* PREWASH SOAK | WASH | RINSE | SPIN | DONE | DISPLAY | SENSING* PREWASH SOAK | WASH | RINSE | SPIN | DONE | DISPLAY | | |
| LID UNLOCK FAULT | On | 8 | 4 | 2 | 1 | F5 | Off | 8 | 4 | 2 | 1 | E3 | | |
| Fault is displayed if Lid Lock has not moved into unlocked position or motor cannot be powered. <ul style="list-style-type: none"> • Check for lock interference with lock striker. • Main control cannot determine if lid lock is in an unlocked state. • See TEST #8: Lid Lock, page 18. | | | | | | | | | | | | | | |
| LID NOT OPENED BETWEEN CYCLES | | | 4 | | 1 | F5 | | | 4 | | | E4 | | |
| Fault is displayed if the following conditions occur: <ul style="list-style-type: none"> • User presses START after several consecutive washer cycles without opening lid. • See TEST #8: Lid Lock, page 18. | | | | | | | | | | | | | | |
| BASKET SPEED SENSOR FAULT | | | 4 | 2 | 1 | F7 | | | | | 1 | E1 | | |
| Fault is displayed when the main control cannot determine speed of basket, or speed changes too quickly. <ul style="list-style-type: none"> • Locked rotor—check that basket, impeller, and motor can rotate freely. • Check harness connections from main control to motor and shifter. • See TEST #3a: Drive System–Shifter, page 13. | | | | | | | | | | | | | | |
| SHIFTER FAULT | | | 4 | 2 | 1 | F7 | | | 4 | | 1 | E5 | | |
| Fault is displayed when the main control cannot determine position of shifter. <ul style="list-style-type: none"> • Check harness connections from main control to motor and shifter. • Observe shifter operation. • See TEST #3a: Drive System–Shifter, page 13. | | | | | | | | | | | | | | |
| MOTOR FAULT | | | 4 | 2 | 1 | F7 | | | 4 | 2 | | E6 | | |
| Indicates an open clockwise or counterclockwise circuit of the motor. <ul style="list-style-type: none"> • See TEST #3b: Drive System–Motor, page 14. | | | | | | | | | | | | | | |
| MOTOR UNABLE TO REACH TARGET RPM | | | 4 | 2 | 1 | F7 | | | 4 | 2 | 1 | E7 | | |
| Fault is displayed when basket speed sensor detects that target RPM was not reached. <ul style="list-style-type: none"> • Mechanical friction on drive mechanism or basket (clothing between basket and tub). • Weak motor or run capacitor, or no connection to run capacitor. • Load off balance. Clothing should be distributed evenly when loading. • See TEST #3b: Drive System–Motor, page 14. | | | | | | | | | | | | | | |
| NO FILL, LONG FILL | | 8 | | | | FB | | | | | 1 | E1 | | |
| Fault is displayed when the water level does not change for a period of time OR water is present but main control does not detect the water level changing. <ul style="list-style-type: none"> • Is water supply connected and turned on? • Low water pressure; fill times longer than six minutes. Are hose screens plugged? • Check for proper drain hose installation. Is water siphoning out of the drain hose? • Drain hose must not be more than 113mm (4.5") into the drain pipe. • Check pressure hose connection from tub to main control. Is hose pinched, kinked, plugged, or leaking air? • See TEST #2: Valves, page 13. | | | | | | | | | | | | | | |
| OVERFLOW CONDITION | | 8 | | | | FB | | | | 2 | 1 | E3 | | |
| Fault is displayed when main control senses water level that exceeds the washer's capacity. <ul style="list-style-type: none"> • May signify problem with inlet water valves. • Check pressure hose connection from tub to main control. Is hose pinched, kinked, plugged, or leaking air? • Pressure transducer fault on main control. • See TEST #2: Valves, page 13 and TEST #6: Water Level, page 17. | | | | | | | | | | | | | | |
| HOT, COLD REVERSED | | 8 | | | | FB | | | 4 | | 1 | E5 | | |
| Fault is displayed when the hot and cold inlet hoses are reversed. <ul style="list-style-type: none"> • Make sure inlet hoses are connected correctly. • If hoses are installed properly, temperature thermistor may be stuck in low resistance range. • See TEST #2: Valves, page 13 and TEST #5: Temperature Thermistor, page 17. | | | | | | | | | | | | | | |
| LONG DRAIN | | 8 | | | 1 | F9 | | | | | 1 | E1 | | |
| Fault is displayed when the water level does not change after the drain pump is on for 10 minutes. <ul style="list-style-type: none"> • Is the drain hose or the drain pump clogged? Check tub sump under impeller for obstructions. • Is the drain hose height greater than 2.4 m (96")? • Check pressure hose connection from tub to main control. Is hose pinched, kinked, plugged, or leaking air? • Is the pump running? If not, see TEST #7: Drain Pump, page 17. | | | | | | | | | | | | | | |

* If the Sensing, Prewash, and/or Soak LEDs are **ON**, the fault code is represented; if **OFF**, the error code is represented.

FOR SERVICE TECHNICIAN'S USE ONLY

AUTOMATIC TEST MODE — See page 4 to access Automatic Test Mode. = ON

Press the **START** button to begin the Automatic Test.

IMPORTANT: Lid must be closed and locked to perform Automatic Test.

| FUNCTION | STATUS LEDs | | | | | DISPLAY | Est. TIME |
|---|-------------|-------|------|------|----------|----------------|------------|
| Recommended Procedure (Status LED names may vary between makes and models) | WASH | RINSE | SPIN | DONE | LID LOCK | If Available | In Seconds |
| LID WILL LOCK | | | | 1 | On | 01 | 1 |
| Motor must be at "0" RPM. If lid does not lock, go to Manual Test: Lid Lock, page 9. | | | | | | | |
| COLD VALVE WILL ACTUATE | | | 2 | | On | 02 | 5 |
| If water is not present, or temperature is wrong, go to Manual Test: Cold Valve, page 9. | | | | | | | |
| HOT VALVE WILL ACTUATE | | | 2 | 1 | On | 03 | 5 |
| If water is not present, or temperature is wrong, go to Manual Test: Hot Valve, page 9. | | | | | | | |
| RESERVED FOR FUTURE DEVELOPMENT | | 4 | | | On | 04 | 5 |
| Washer will pause for 5 seconds. | | | | | | | |
| RESERVED FOR FUTURE DEVELOPMENT | | 4 | | 1 | On | 05 | 5 |
| Washer will pause for 5 seconds. | | | | | | | |
| FABRIC SOFTENER DISPENSER & COLD VALVE WILL ACTUATE | | 4 | 2 | | On | 06 | 5 |
| If no water in fabric softener dispenser, go to Manual Test: Fabric Softener Dispenser, page 9. | | | | | | | |
| HOT & COLD VALVE WILL ACTUATE | | 4 | 2 | 1 | On | 07 | 45 |
| Hot & cold water valves will actuate for the specified time period. | | | | | | | |
| SHIFTER MOVES TO AGITATION POSITION | 8 | | | | On | 08 | ~5-15 |
| If motor does not agitate, go to Manual Test: Gentle or Heavy Agitation, page 9. | | | | | | | |
| MOTOR AGITATES | 8 | | | 1 | On | 09 | 10 |
| If motor does not agitate, go to Manual Test: Gentle or Heavy Agitation, page 9. | | | | | | | |
| DRAIN PUMP WILL ACTUATE | 8 | | 2 | | On | 10 | ~30-40 |
| If water is not draining, go to Manual Test: Drain, page 9. | | | | | | | |
| SHIFTER MOVES TO SPIN POSITION | 8 | | 2 | 1 | On | 11 | ~5-15 |
| If basket is not turning, go to Manual Test: Low or High Spin, page 9. | | | | | | | |
| MOTOR SPINS | 8 | 4 | | | On | 12 | 10 |
| If basket is not turning, go to Manual Test: Low or High Spin, page 9. | | | | | | | |
| LID REMAINS LOCKED UNTIL WASHER SENSES A STOPPED BASKET | 8 | 4 | | 1 | On | 13 | ~30-45 |
| Basket must stop spinning (0 RPM) before test continues to next phase. Time for basket to stop spinning may vary from 30 seconds up to 2 minutes. | | | | | | | |
| LID WILL UNLOCK AND CYCLE COMPLETES | 8 | 4 | 2 | | | 14 | 1 |
| If lid does not unlock, go to Manual Test: Lid Lock, page 9. If no end-of-cycle tone, make sure Cycle Signal is turned on. | | | | | | Estimated Time | ~3 min |

FOR SERVICE TECHNICIAN'S USE ONLY

MANUAL TEST MODE — See page 4 to access Manual Test Mode. = ON

Pressing the **START** button will activate/deactivate each output. When the output is activated, the corresponding Status LEDs will flash. **IMPORTANT:** Lid must be closed and locked to perform **SPIN & AGITATE** tests.

| OUTPUT | STATUS LEDs | | | | | DISPLAY |
|--|-------------|-------|------|------|----------|--------------|
| | WASH | RINSE | SPIN | DONE | LID LOCK | |
| Output Details NOTE: Outputs will time-out after 5 minutes. | | | | | | If Available |
| LID LOCK Lock and unlock the lid. NOTES: When lock is enabled, the "Lid Lock" LED will turn ON. Will only lock when lid is closed. Will only unlock when basket RPM is 0. If lid is not closed, washer will beep and LEDs will flash. • If lid does not lock or unlock, go to TEST #8: Lid Lock, page 18. | | | | | | 00 |
| COLD VALVE Turns ON and turns OFF cold water valve. • If valve does not turn on, go to TEST #2: Valves, page 13. | | | | 1 | | 01 |
| HOT VALVE Turns ON and turns OFF hot water valve. • If valve does not turn on, go to TEST #2: Valves, page 13. | | | 2 | | | 02 |
| RESERVED FOR FUTURE DEVELOPMENT If selected, washer will beep and LEDs will flash. | | | 2 | 1 | | 03 |
| RESERVED FOR FUTURE DEVELOPMENT If selected, washer will beep and LEDs will flash. | | 4 | | | | 04 |
| FABRIC SOFTENER DISPENSER Turns ON and turns OFF the fabric softener valve. (May not be available on all models or brands.) • If valve does not turn on, go to TEST #2: Valves, page 13. | | 4 | | 1 | | 05 |
| OXI DISPENSER Turns ON and turns OFF the Oxi dispenser valve. (May not be available on all models or brands.) • If valve does not turn on, go to TEST #2: Valves, page 13. | | 4 | 2 | | | 06 |
| DRAIN Turns ON and turns OFF the drain pump. • If pump does not turn on, go to TEST #7: Drain Pump, page 17. | | 4 | 2 | 1 | | 07 |
| RESERVED FOR FUTURE DEVELOPMENT If selected, washer will beep and LEDs will flash. | 8 | | | | | 08 |
| LOW SPIN (To perform test, Lid Lock must first be enabled) Spins basket from 0 to 500 RPM. NOTE: Allow up to 15 seconds for shifter to reposition. IMPORTANT: To activate Low Spin, RPM must read "0" and lid must be closed with lid lock enabled. If lid is not closed, washer will beep and LEDs will flash. IMPORTANT: Water in tub must be drained before test. • If motor does not spin, go to TEST #3a & 3b: Drive System (Shifter & Motor), pages 13 & 14. | 8 | | | 1 | On | 09 |
| HIGH SPIN (To perform test, Lid Lock must first be enabled) Spins basket from 0 to maximum RPM. NOTE: Allow up to 15 seconds for shifter to reposition. IMPORTANT: To activate High Spin, RPM must read "0" and lid must be closed with lid lock enabled. If lid is not closed, washer will beep and LEDs will flash. IMPORTANT: Water in tub must be drained before test. • If motor does not spin, go to TEST #3a & 3b: Drive System (Shifter & Motor), pages 13 & 14. | 8 | | 2 | | On | 10 |
| GENTLE AGITATION (To perform test, Lid Lock must first be enabled) Shifts from idle motor to gentle CW/CCW agitation. NOTE: Allow up to 15 seconds for shifter to reposition. IMPORTANT: To activate Gentle Agitation, RPM must read "0" and lid must be closed with lid lock enabled. If lid is not closed, washer will beep and LEDs will flash. • If motor does not agitate, go to TEST #3a & 3b: Drive System (Shifter & Motor), pages 13 & 14. | 8 | | 2 | 1 | On | 11 |
| HEAVY AGITATION (To perform test, Lid Lock must first be enabled) Shifts from idle motor to heavy CW/CCW agitation. NOTE: Allow up to 15 seconds for shifter to reposition. IMPORTANT: To activate Heavy Agitation, RPM must read "0" and lid must be closed with lid lock enabled. If lid is not closed, washer will beep and LEDs will flash. • If motor does not agitate, go to TEST #3a & 3b: Drive System (Shifter & Motor), pages 13 & 14. | 8 | 4 | | | On | 12 |

FOR SERVICE TECHNICIAN'S USE ONLY

TROUBLESHOOTING GUIDE **NOTE:** Always check for error codes first (pgs. 6–7).

Some tests will require accessing components. See Figures 7 & 8, page 19, for component locations. For detailed troubleshooting procedures, refer to “Troubleshooting Tests” beginning on page 12.

| PROBLEM | POSSIBLE CAUSE | CHECKS & TESTS |
|---|--|---|
| WON'T POWER UP • No operation • No keypad response • No LEDs or display | No power to washer. | Check power at outlet, check circuit breakers, fuses, or junction box connections. |
| | Connection problem between AC plug and main control. | Check the AC power cord for continuity. |
| | Connections between main control and UI. | Check connections and continuity between main control-J9 and UI. |
| | User Interface problem. | See TEST #4: Console and Indicators, page 16. |
| WON'T START CYCLE No response when Start Button is pressed. | Main Control problem. | See TEST #1: Main Control, page 12. |
| | Lid lock mechanism not functioning. | 1. Lid not closed due to interference. 2. Lock not closed due to interference. 3. See TEST #8: Lid Lock, page 18. |
| | Connections between main control and UI. | Check connections and continuity between main control-J9 and UI. |
| | User Interface problem. | See TEST #4: Console and Indicators, page 16. |
| UI WON'T ACCEPT SELECTIONS | Main Control problem. | See TEST #1: Main Control, page 12. |
| | Connections between main control and UI. | Check connections and continuity between main control-J9 and UI. |
| | User Interface problem. | See TEST #4: Console and Indicators, page 16. |
| WON'T FILL | Main Control problem. | See TEST #1: Main Control, page 12. |
| | No water supplied to washer. | 1. Check water connections to washer. 2. Verify hot and cold water supply is on. |
| | Plugged filter/screen. | Check for plugged filter or screen in the water valve or hoses. |
| | Drain hose installation. Valve problem. | Check for proper drain hose installation. See TEST #2: Valves, page 13. |
| OVERFILLS | Main Control problem. | See TEST #1: Main Control, page 12. |
| | Pressure hose. | See TEST #6: Water Level, page 17. |
| | Valve problem. | See TEST #2: Valves, page 13. |
| | Washer requires calibration. Pressure transducer on main control. | Perform washer calibration on page 4. See TEST #1: Main Control, page 12. |
| WON'T DISPENSE FABRIC SOFTENER OR OXI | Main Control problem. | See TEST #1: Main Control, page 12. |
| | No water supplied to washer. | 1. Check water connections to washer. 2. Verify hot and cold water supply is on. |
| | Obstruction in dispenser. | Clean obstruction from dispenser. |
| | Valve problem. | See TEST #2: Valves, page 13. |
| INCORRECT WATER TEMPERATURE | Main Control problem. | See TEST #1: Main Control, page 12. |
| | Water hose installation. | Make sure inlet hoses are connected properly. |
| | Temperature thermistor. | See TEST #5: Temperature Thermistor, page 17. |
| | Valve problem. | See TEST #2: Valves, page 13. |
| WON'T AGITATE | Main Control problem. | See TEST #1: Main Control, page 12. |
| | Water covering impeller? | See TEST #6: Water Level, page 17. |
| | Lid lock showing open during cycle? | See TEST #8: Lid Lock, page 18. |
| | Drive belt. | Verify that drive belt is not damaged. |
| | Harness connections. | Check harness connections between main control and drive system. |
| | Shifter problem. | See TEST #3a: Drive System–Shifter, page 13. |
| | Motor problem. | See TEST #3b: Drive System–Motor, page 14. |
| | Tachometer issue. | No tub movement or tub speed out of normal range (obstruction/belt/motor). |
| Main Control problem. | See TEST #1: Main Control, page 12. | |

FOR SERVICE TECHNICIAN'S USE ONLY

TROUBLESHOOTING GUIDE (continued)

Some tests will require accessing components. See Figures 7 & 8, page 19, for component locations. For detailed troubleshooting procedures, refer to "Troubleshooting Tests" beginning on page 12.

| PROBLEM | POSSIBLE CAUSE | CHECKS & TESTS |
|--|---|--|
| WON'T SPIN | Is lid lock showing open during the cycle? | See TEST #8: Lid Lock, page 18. |
| | Drive belt. | Verify that drive belt is not damaged. |
| | Harness connections. | Check harness connections between main control and drive system. |
| | Shifter problem. | See TEST #3a: Drive System–Shifter, page 13. |
| | Motor problem. | See TEST #3b: Drive System–Motor, page 14. |
| | Tachometer problem. | No tub movement or tub speed out of normal range (obstruction/belt/motor). |
| | Main Control problem. | See TEST #1: Main Control, page 12. |
| WON'T DRAIN | Drain hose installation. | Check for proper drain hose installation. Make sure it is not inserted more than 113mm (4.5"). |
| | Plugged drain hose. | Check drain hose for obstructions. |
| | Obstructions to drain pump. | Check tub sump under impeller plate & basket for obstructions. |
| | Harness connections. | Check harness connections between main control and drain pump. |
| | Drain pump. | See TEST #7: Drain Pump, page 17. |
| | Main Control problem. | See TEST #1: Main Control, page 12. |
| CYCLE TIME LONGER THAN EXPECTED | Oversuds. | 1. Verify use of HE detergent. 2. Excessive detergent usage. |
| | Off balance. | 1. Load is off balance. 2. Balance ring water leak. |
| | Draining slowly. | Check for pump or drain hose obstructions. |
| | Water pressure drop. | Results in longer Fill time. |
| | Friction or drag on drive. | Check motor and bearings; check for clothes between tub and basket. |
| | Weak suspension. | Basket should not bounce up and down more than once when pushed. |
| POOR WASH PERFORMANCE Please reference Use & Care Guide | Oversuds. | 1. Verify use of HE detergent. 2. Excessive detergent usage. |
| | Load is tangling. | 1. Washer not loaded properly. 2. Perform washer calibration on page 4. |
| | Incorrect water level. | 1. Perform washer calibration on page 4. 2. See TEST #2: Valves, page 13. 3. See TEST #6: Water Level, page 17. |
| | Clothes wet after cycle is complete (not water saturated, but very damp). | 1. Overloaded washer. 2. Oversuds (see above). 3. Items caught in in tub sump. 4. Weak suspension. 5. Shifter not moving into position. 6. Cold/Rinse water > 40.5° C (105° F). 7. See TEST #7: Drain Pump, page 17. |
| | Load not rinsed. | 1. Check proper water supply. 2. Not using HE detergent. 3. Washer not loaded properly. 4. Shifter not moving into position. 5. See TEST #2: Valves, page 13. |
| | Not cleaning clothes. | 1. Washer not loaded properly. 2. Not using HE detergent. 3. Not using correct cycle. 4. Shifter not moving into position. |
| | Fabric damage. | 1. Washer overloaded. 2. Bleach added incorrectly. 3. Sharp items in tub. |
| | Wrong option or cycle selection. | Refer customer to "Use & Care Guide". |

FOR SERVICE TECHNICIAN'S USE ONLY

TROUBLESHOOTING TESTS



TEST #1: Main Control

This test checks for incoming and outgoing power to and from main control. This test assumes that proper voltage is present at the outlet.

1. Unplug washer or disconnect power.
2. Remove console to access main control.
3. Verify that ALL connectors are inserted all the way into the main control.
4. Plug in washer or reconnect power.
5. With a voltmeter set to **AC**, connect black probe to J7-3 (Neutral) and red probe to J7-1 (L1).
 - If 230Vac 50hz is present, go to step 6.
 - If 230Vac 50hz is not present, check the AC power cord for continuity (See Figure 9, page 20.)

6. Is the "Diagnostic LED" ON or OFF? (See Figure 3 below for LED location.)
 - ON: (+5VDC present) continue to step 7.
 - OFF: (+5VDC missing) proceed to step 8.
7. With a voltmeter set to **DC**, connect black probe to J9-3 (Circuit Gnd) and red probe to J9-8 (+13VDC).
 - If +13VDC (and +5VDC) are present, and UI is unresponsive, go to Test #4: Console and Indicators, page 16.
 - If +13VDC is not present, go to step 8.
8. Check if shifter assembly is affecting the main control DC supplies.
 - a. Unplug washer or disconnect power.
 - b. Remove connector **J2** from main control.
 - c. Plug in washer or reconnect power.

Main Control Board Connectors and Pinouts (Figure 3)

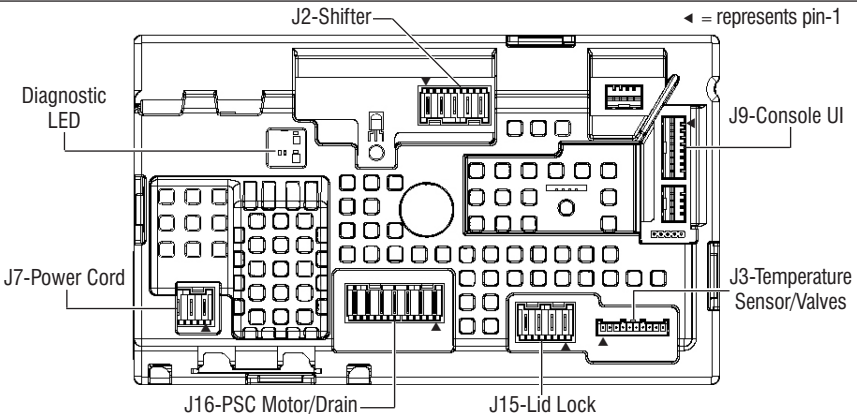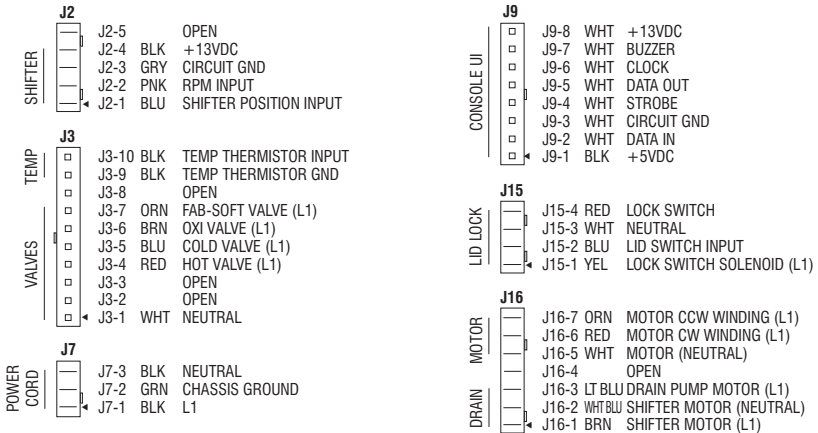

FOR SERVICE TECHNICIAN'S USE ONLY

- d. Recheck the DC voltages per steps 6 & 7.
- If one or more DC voltages are still missing, go to step 9.
 - If the DC voltages return, check for short in harness between main control and shifter assembly. If harness and connections are good, replace shifter assembly.
9. Check if console UI is affecting the main control DC supplies.
- a. Unplug washer or disconnect power.
 - b. Remove connector **J9** from main control.
 - c. Plug in washer or reconnect power.
 - d. Recheck the DC voltages per steps 6 & 7. Perform voltage checks inside header J9 on the board – **do not short pins together**.
- If one or more DC voltages are still missing, go to step 10.
 - If the DC voltages return, check for short in harness between main control and UI. If harness and connections are good, replace console UI.
10. Main Control has malfunctioned.
- a. Unplug washer or disconnect power.
 - b. Replace the main control.
 - c. Reassemble all parts and panels.
 - d. Plug in washer or reconnect power. Calibrate washer and perform Automatic Test to verify repair.

TEST #2: Valves

This test checks the electrical connections to the valves, and the valves themselves.

1. Check the relays and electrical connections to the valves by performing the Cold, Hot, Oxi, and Fabric Softener Valve tests under Manual Test Mode on page 9. Each test activates and deactivates the selected valve. The following steps assume one (or more) valve(s) did not turn on.
2. For the valve(s) in question check the individual solenoid valves:
 - a. Unplug washer or disconnect power.
 - b. Remove console to access main control.
 - c. Remove connector **J3** from main control. Refer to main control diagram on page 12.
 - d. Check harness connection to solenoid valves.
3. Check resistance of the valve coils across the following J3 connector pinouts:

| Valve | Pinout |
|-----------------------|-----------|
| Hot Valve | J3, 1 & 4 |
| Cold Valve | J3, 1 & 5 |
| Oxi Valve | J3, 1 & 6 |
| Fabric Softener Valve | J3, 1 & 7 |

Resistance should be 3.6k–4.5k Ω .

- If resistance readings are tens of ohms outside of range, replace the valve assembly.
- If resistance readings are within range, replace main control and calibrate washer. Perform Automatic Test to verify repair.

TEST #3a: Drive System – Shifter

This test checks connections, shifter motor, switch, and optical sensor.

NOTE: Refer to Figure 4, “Shifter Assembly Strip Circuit” on page 14 for tests and measurements.

IMPORTANT: Drain water from tub before accessing bottom of washer.

Functional Check:

1. Check the shifter and electrical connections by performing both the Spin AND Agitate test under Manual Test Mode on page 9. The following steps assume that this step was unsuccessful.
2. Unplug washer or disconnect power.
3. Check to see if basket will turn freely.
 - If basket turns freely, go to step 4.
 - If basket does not turn freely, determine what is causing the mechanical friction or lockup.
4. Remove console to access main control.
5. Visually check that the J2 and J16 connectors are inserted all the way into the main control.
 - If visual checks pass, go to step 6.
 - If connectors are not inserted properly, reconnect J2 and J16 and repeat step 1.

Shifter Motor:

6. Remove connector **J16** from main control. With an ohmmeter, verify resistance of the shifter motor across the following J16 connector pinouts:

| Component | J16 Connector Pinout |
|---------------|----------------------|
| Shifter Motor | J16, 1 & 2 |

Resistance should be 4k to 6k Ω .

- If values are correct, reconnect J16 and proceed to step 7.
 - If values are open or out of range, go to step 13.
7. Plug in washer or reconnect power.
 8. With a voltmeter set to **AC**, connect the black probe to J16-2 (N) and red probe to J16-1 (L1). Activate shifter motor by switching between Spin and Agitate modes. Energize outputs using Manual Test Mode on page 9.

FOR SERVICE TECHNICIAN'S USE ONLY

IMPORTANT: Lid must be closed with Lid Lock enabled to run the SPIN and AGITATE tests.

NOTE: It will take 4–15 seconds for the shifter to change states.

- If 230Vac 50hz is present, go to step 9.
- If 230Vac 50hz is not present, go to step 17.

Shifter Switch:

9. With a voltmeter set to **DC**, connect the black probe to J2-3 (Circuit Gnd) and red probe to J2-1 (Shifter Switch). In manual test mode, switch between Spin and Agitate modes. Voltage should toggle between 0 and +5VDC.
 SPIN = +5 VDC
 AGITATE = 0 VDC

- If voltage corresponds to setting, go to step 10.
- If voltage does not switch, go to step 12.

Optical Sensor:

10. With a voltmeter set to **DC**, connect the black probe to J2-3 (Circuit Gnd) and red probe to J2-4 (+13VDC).

- If +13VDC is present, go to step 11.
- If +13VDC is not present, go to step 17.

11. Activate Tachometer Verification Mode from the Service Diagnostic Test Modes (see page 5). Slowly turn the basket by hand. The 4 status LEDs should illuminate one at a time to represent basket RPM.

- If the tachometer is not verified, go to step 12.
- If the tachometer is verified, go to step 17.

12. Unplug washer or disconnect power.

13. Tilt washer back to access the drive system.

14. Visually check the electrical connections to the shifter.

- If visual check passes, go to step 15.

- If connections are loose, reconnect the electrical connections and repeat step 1.

15. With an ohmmeter, check the harness for continuity between the shifter and main control using the following pinouts. See chart below.

| Shifter to Main Control & Drain Pump |
|---|
| Shifter Connector Pin-2 to Main Control J16-2 |
| Shifter Connector Pin-3 to Main Control J16-1 |
| Shifter Connector Pin-4 to Main Control J2-4 |
| Shifter Connector Pin-5 to Main Control J2-3 |
| Shifter Connector Pin-6 to Main Control J2-2 |
| Shifter Connector Pin-7 to Main Control J2-1 |

- If there is continuity, go to step 16.
- If there is no continuity, replace the lower washer harness and repeat step 1.

16. Replace the shifter assembly.

- a. Unplug washer or disconnect power.
- b. Replace shifter assembly.
- c. Reassemble all parts and panels.
- d. Plug in washer or reconnect power. Calibrate washer and perform Automatic Test to verify repair.

17. If the preceding steps did not correct the problem, replace the main control.

- a. Unplug washer or disconnect power.
- b. Replace the main control.
- c. Reassemble all parts and panels.
- d. Plug in washer or reconnect power. Calibrate washer and perform Automatic Test to verify repair.

TEST #3b: Drive System – Motor

This test checks the motor, motor windings, wiring, and start capacitor.

NOTE: Refer to Figure 5, “PSC Motor Strip Circuit” on page 15 for tests and measurements.

IMPORTANT: Drain water from tub before accessing bottom of washer.

1. Check the motor and electrical connections by performing the Gentle or Heavy Agitation test under Manual Test Mode on page 9. The following steps assume that this step was unsuccessful.

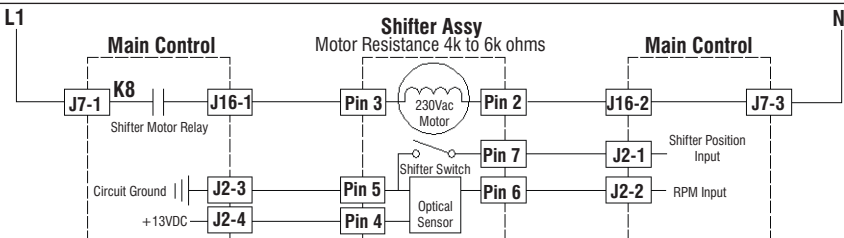


Figure 4 - Shifter Assembly Strip Circuit (Shifter Switch: Open = SPIN, Closed = AGITATE)

FOR SERVICE TECHNICIAN'S USE ONLY

2. Unplug washer or disconnect power.
3. Check to see if basket will turn freely.
 - If basket turns freely, go to step 4.
 - If basket does not turn freely, determine what is causing the mechanical friction or lockup.
4. Remove console to access main control.
5. Visually check that the J2 and J16 connectors are inserted all the way into the main control.
 - If visual checks pass, go to step 6.
 - If connectors are not inserted properly, reconnect J2 and J16 and repeat step 1.
6. Plug in washer or reconnect power. Run the Gentle Agitation test under Manual Test Mode on page 9.
7. With a voltmeter set to **AC**, connect black probe to J16-5 (N) and red probe to J16-6 (CW Winding).
 - If 230Vac 50hz is cycling ON during CW rotation, go to step 8.
 - If 230Vac 50hz is not present, go to Test #1: Main Control, page 12.
8. With a voltmeter set to **AC**, connect black probe to J16-5 (N), red probe to J16-7 (CCW Winding).
 - If 230Vac 50hz is cycling ON during CCW rotation, go to step 9.
 - If 230Vac 50hz is not present, go to Test #1: Main Control, page 12.
9. Unplug washer or disconnect power.
10. Remove connector **J16** from main control. With an ohmmeter, check resistance of motor windings across the following J16 connector pinouts:

| Motor Winding | J16 Connector Pinout |
|---------------|----------------------|
| CW Winding | J16, 6 & 5 |
| CCW Winding | J16, 7 & 5 |

Resistance should be between 10 and 12 Ω .

- If values are open or out of range, go to step 11.
- If values are correct, go to step 15.

11. Tilt washer back to access the drive system.

12. Visually check the mounting bracket and electrical connections to the motor and shifter.

➤ If visual check passes, go to step 13.

➤ If connections are loose, reconnect the electrical connections, reassemble motor cover, and repeat step 1.

13. With an ohmmeter, check the harness for continuity between the main control, motor, and run capacitor using the following test points.

Motor Harness Check

Motor Connector Pin-1 to Chassis Ground

Motor Connector Pin-3 to Main Control J16-7

Motor Connector Pin-3 to Run Capacitor Pin-3

Motor Connector Pin-6 to Main Control J16-6

Motor Connector Pin-6 to Run Capacitor Pin-1

Motor Connector Pin-9 to Main Control J16-5

➤ If there is continuity, go to step 14.

➤ If there is no continuity, replace the lower washer harness and repeat step 1.

14. With an ohmmeter, check resistance of motor windings at the following motor connections:

| Motor Winding | Motor Pinout |
|---------------|--------------|
| CW Winding | Pins 6 & 9 |
| CCW Winding | Pins 3 & 9 |

Resistance should be between 10 and 12 Ω .

➤ If values are open or out of range, replace motor.

➤ If values are correct, go to step 15.

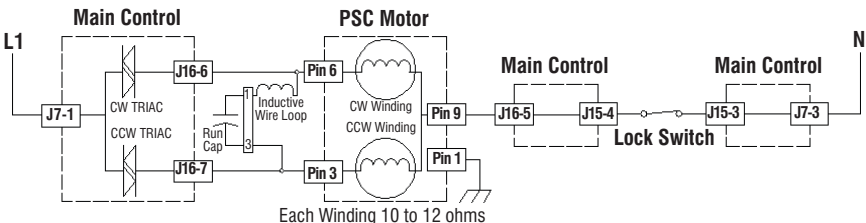


Figure 5 - PSC Motor Strip Circuit (shown in ON position)

15. Test Motor Run Capacitor. **NOTE:** A faulty capacitor may cause the motor to “hum”, not start, or turn slowly.

a. Discharge the capacitor by touching the leads of a 20,000 Ω resistor to the two terminals.

b. Disconnect the wires from the capacitor terminals.

c. With an ohmmeter, measure across the terminals and note reading.

➤ If a steady increase in resistance is noted, continue to step 16.

➤ If the capacitor is either shorted or open, replace capacitor, calibrate washer (page 4), and repeat step 1.

16. If the preceding steps did not correct the motor problem, replace the main control.

a. Unplug washer or disconnect power.

b. Replace the main control.

c. Reassemble all parts and panels.

d. Plug in washer or reconnect power. Calibrate washer and perform Automatic Test to verify repair.

TEST #4: Console and Indicators

Console and Indicators Check:

This test is performed when any of the following situations occurs during “UI Test Mode” on page 5.

✓ **None of the indicators light up**

✓ **Some buttons do not light indicators**

✓ **No beep sound is heard**

None of the indicators light up:

1. Unplug washer or disconnect power.

2. Access the console’s electronic assemblies and visually check that the J9 connector is inserted all the way into the main control.

3. Visually check that the user interface assembly is properly inserted in the console.

4. If both visual checks pass, follow procedure under TEST #1, “Main Control” on page 12 to verify supply voltages.

➤ If supply voltages are present on the main control, go to step 5.

➤ If supply voltages are not present, replace the main control and calibrate washer (p. 4). Perform Automatic Test to verify repair. Go to step 6.

5. Replace the user interface assembly.

6. Reassemble all parts and panels.

7. Plug in washer or reconnect power.

8. To verify repair, activate the Service Diagnostic Mode, and then perform UI Test Mode on page 5.

Some buttons do not light indicators:

1. Unplug washer or disconnect power.

2. Access the console’s electronic assemblies and visually check that the electronics and housing assembly is properly inserted into the front console.

3. If visual check passes, replace the user interface assembly.

4. Reassemble all parts and panels.

5. Plug in washer or reconnect power.

6. To verify repair, activate the Service Diagnostic Mode, and then perform UI Test Mode on page 5.

No beep sound is heard:

1. Verify that cycle signal is set to either “Soft” or “Loud.” **NOTE:** Pressing and holding the cycle signal button for three seconds will Enable/Disable the cycle signal.

2. Unplug washer or disconnect power.

3. Access the console’s electronic assemblies and visually check that the J9 connector is inserted all the way into the main control.

4. If visual check passes, replace the user interface assembly.

5. Plug in washer or reconnect power.

6. Set Cycle Signal to either “Soft” or “Loud.” Check for beep tone.

7. If beeper still does not emit a tone, the main control has malfunctioned:

a. Unplug washer or disconnect power.

b. Replace the main control.

c. Reassemble all parts and panels.

d. Plug in washer or reconnect power. Perform washer calibration on page 4. To verify repair, activate the Service Diagnostic Mode, and then perform UI Test Mode on page 5.

FOR SERVICE TECHNICIAN'S USE ONLY

TEST #5: Temperature Thermistor

This test checks valves, main control, temperature thermistor, and wiring.

1. Check the cold valve by performing Cold Valve test under Manual Test Mode on page 9.
 - If cold water is being dispensed, proceed to step 2.
 - If hot water is being dispensed, verify proper hose connection.
2. Check the hot valve by performing Hot Valve test under Manual Test Mode on page 9.
 - If hot water is being dispensed, proceed to step 3.
 - If cold water is being dispensed, ensure that household hot water is present.
3. Unplug washer or disconnect power.
4. Remove console to access main control.
5. Remove connector **J3** from the main control. With an ohmmeter, measure the resistance of the temperature thermistor between pins J3-9 and J3-10. Verify that the approximate resistance, shown in the table below, is within ambient temperature range.

THERMISTOR RESISTANCE

| Approx. Temperature | | Approx. Resistance |
|---------------------|-----|--------------------|
| C° | F° | (KΩ) |
| 0 | 32 | 163 |
| 5 | 41 | 127 |
| 10 | 50 | 100 |
| 15 | 59 | 79 |
| 20 | 68 | 62 |
| 25 | 77 | 50 |
| 30 | 86 | 40 |
| 35 | 95 | 33 |
| 40 | 104 | 27 |
| 45 | 113 | 22 |
| 50 | 122 | 18 |
| 55 | 131 | 15 |
| 60 | 140 | 12 |
| 65 | 149 | 10 |

- If the resistance is within the range shown in the table, go to step 6.
- If the resistance is infinite or close to zero, replace the temperature thermistor assembly.

NOTE: Most thermistor errors are a result of the resistor being out of range. If the temperature thermistor malfunctions, the washer will default to pre-programmed wash settings.

6. If the thermistor is good, replace main control and calibrate washer (see page 4). Perform Automatic Test to verify repair.

TEST #6: Water Level

This test checks the water level sensing components. **NOTE:** Usually, if the pressure transducer malfunctions, the washer will generate a long fill, or long drain error.

1. Check the functionality of the pressure transducer by running a small load cycle. The valves should turn off automatically after sensing the correct water level in the tub. The following steps assume that this step was unsuccessful.
2. Drain the tub until all water has been removed.
3. Unplug washer or disconnect power.
4. Remove console to access main control.
5. Check hose connection between the pressure transducer on the main control and the pressure dome attached to the tub.
6. Check to ensure hose is routed correctly in the lower cabinet and not pinched or crimped by the back panel.
7. Verify there is no water, suds, or debris in the hose or dome. Disconnect hose from main control and blow into hose to clear water, suds, or debris.
8. Check hose for leaks. Replace if needed.
9. If the preceding steps did not correct the problem, replace main control and calibrate washer. Perform Automatic Test to verify repair.

TEST #7: Drain Pump

Perform the following checks if washer does not drain.

NOTE: Refer to Figure 6, "Drain Pump Strip Circuit" on page 18 for tests and measurements.

IMPORTANT: Drain water from tub before accessing bottom of washer.

1. Check for obstructions in the usual areas. Clean and then perform step 2.
2. Check the drain pump and electrical connections by performing the Drain Test under Manual Test Mode on page 9. The following steps assume that this step was unsuccessful.
3. Unplug washer or disconnect power.
4. Remove console to access main control.
5. Visually check that the J16 connector is inserted all the way into the main control.
 - If visual check passes, go to step 6.
 - If connector is not inserted properly, reconnect J16 and repeat step 2.

FOR SERVICE TECHNICIAN'S USE ONLY

6. Remove connector **J16** from main control. With an ohmmeter, verify resistance values shown below across the following J16 connector pinouts:

| Component | J16 Connector Pinout |
|------------|----------------------|
| Drain Pump | J16, 2 & 3 |

Resistance should be 120–130 Ω.

- If values are open or out of range, go to step 7.
- If values are correct, go to step 11.

7. Tilt washer back to access drain pump. Verify pump is free from obstructions.

8. Visually check the electrical connections at the drain pump.

- If visual check passes, go to step 9.
- If connections are loose, reconnect the electrical connections and repeat step 2.

9. With an ohmmeter, check harness for continuity between the drain pump and main control. See chart below.

| Main Control to Drain Pump |
|--|
| Drain Pump Pin-1 to Main Control J16-3 |
| Drain Pump Pin-2 to Main Control J16-2 |

- If there is continuity, go to step 10.
- If there is no continuity, replace the lower machine harness and repeat step 2.

10. With an ohmmeter, measure the resistance across the two pump terminals. Resistance should be 120–130 Ω.

- If values are open or out of range, replace the pump motor.
- If the resistance at the pump motor is correct, go to step 11.

11. If the preceding steps did not correct the drain problem, replace the main control.

- a. Unplug washer or disconnect power.
- b. Replace the main control.
- c. Reassemble all parts and panels.
- d. Plug in washer or reconnect power. Calibrate washer and perform Automatic Test to verify repair.

TEST #8: Lid Lock

Perform the following checks if the washer does not lock (or unlock).

- 1.** Perform the Lid Lock test under Manual Test Mode on page 9. The following steps assume that this step was unsuccessful.
- 2.** Check lid lock mechanism for obstruction or binding. Repair as necessary.
- 3.** Unplug washer or disconnect power.
- 4.** Remove console to access main control.
- 5.** Visually check that the J15 connector is inserted all the way into the main control.
 - If visual check passes, go to step 6.
 - If connector is not inserted properly, reconnect J15 and repeat step 1.

6. Remove connector **J15** from main control. With an ohmmeter, verify lid lock resistance values shown below across the following J15 connector pinouts:

| LID LOCK RESISTANCE | | | |
|----------------------|--|-------------------|-------|
| Component | Resistance | Contacts Measured | |
| Lock Switch Solenoid | 350 to 450 ohms | J15-1 | J15-3 |
| Lock Switch | Locked = 0 ohms Unlocked = Open Circuit | J15-3 | J15-4 |
| Lid Switch | Lid Closed = 0 ohms Lid Open = Open Circuit | J15-3 | J15-2 |

- If resistance values are good, go to step 7.
 - If switch measurements do not match the values shown in the table for unlocked (or locked) condition, a problem exists in the lid lock. Replace the lid lock mechanism.
- 7.** If the preceding steps did not correct the lock problem, replace the main control.
- a. Unplug washer or disconnect power.
 - b. Replace the main control.
 - c. Reassemble all parts and panels.
 - d. Plug in washer or reconnect power. Calibrate washer and perform Automatic Test to verify repair.


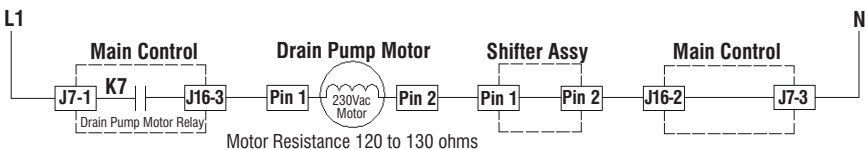



Figure 6 - Drain Pump Strip Circuit

FOR SERVICE TECHNICIAN'S USE ONLY

Component Locations – Console Electronics & Valves (Figure 7)

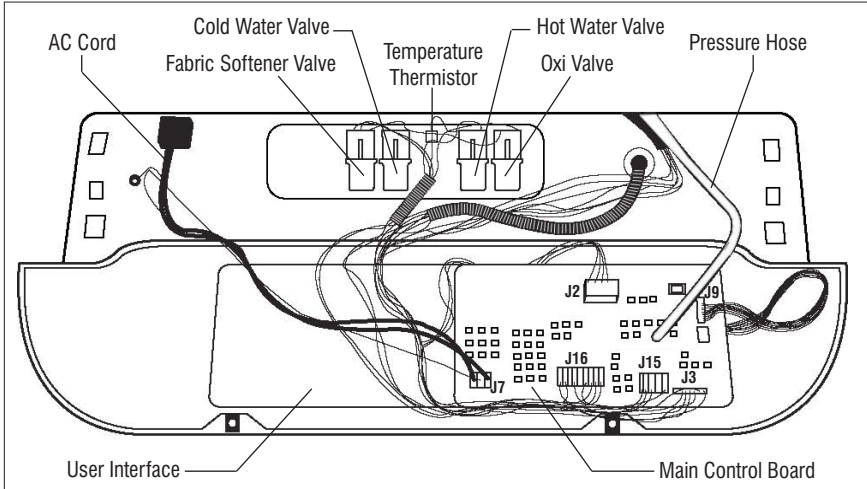

Component Locations – Drive System & Drain Pump (Figure 8)

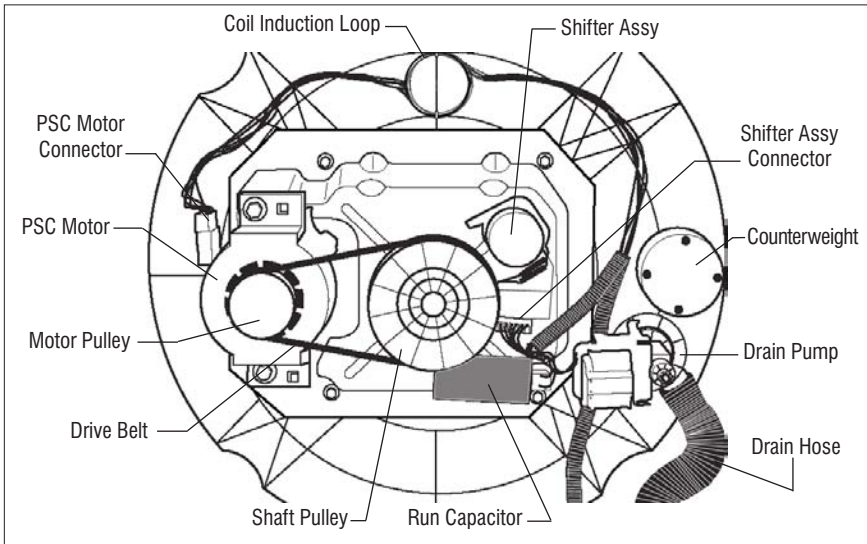

Specifications

| WASHER SPECIFICATIONS | |
|------------------------------|---|
| Voltage: | 220-240 Vac |
| Frequency: | 48-52 Hz |
| Max. Amps: | 6 Amps |
| Circuit Protection: | 15 Amp Instantaneous Type Fuse (Main Control) |
| Water Pressure: | 15-125 PSI |
| Drain Height: | 86 cm to 244 cm (34 in. to 8 ft.) |
| Operating Temperature Range: | 4.5 - 46° C (40 - 115° F) |

FOR SERVICE TECHNICIAN'S USE ONLY

Wiring Diagram

IMPORTANT: Electrostatic discharge may cause damage to machine control electronics. See page 1 for ESD information.

NOTE: Schematic shows shifter in SPIN position, lock switch open, and motor off.

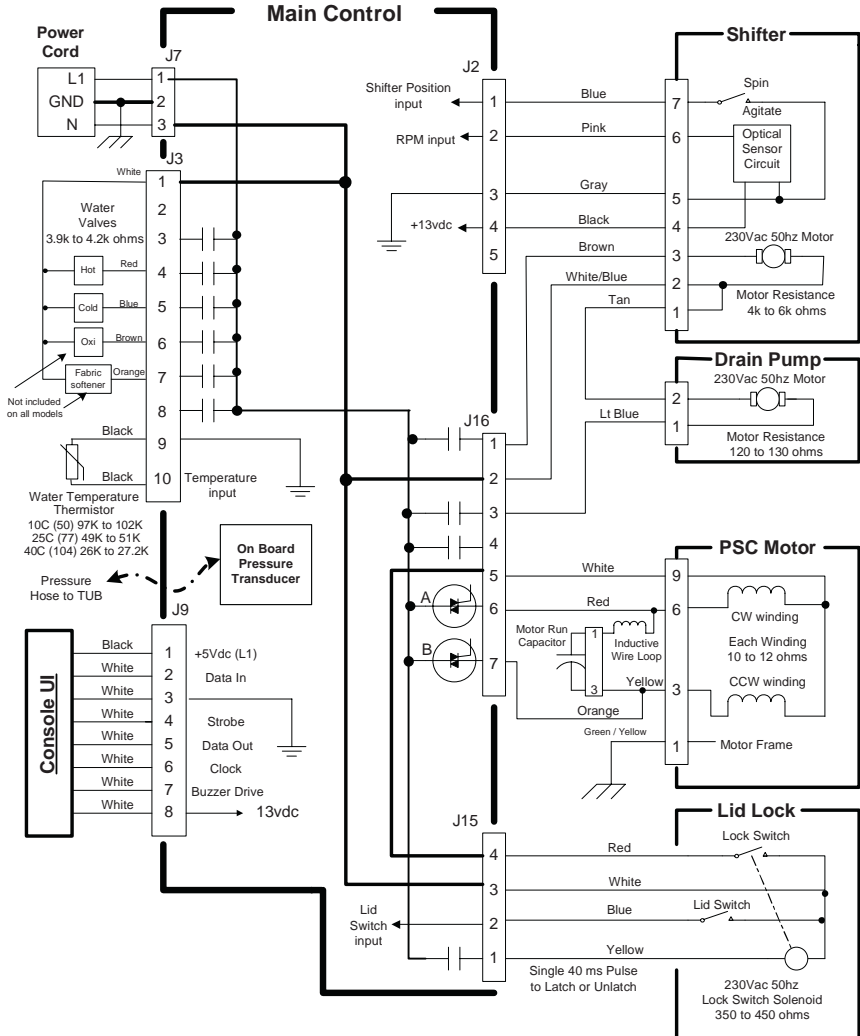


Figure 9 - Wiring Diagram

Legend

| | | | | | | | | |
|---------------------|---------------------|---------------|-------------|-------|--------|------------|----------------|----------------|
| | | | | | | | | |
| Component Terminals | Connection (Splice) | No Connection | Motor Triac | Relay | Switch | Thermistor | Circuit Ground | Chassis Ground |